
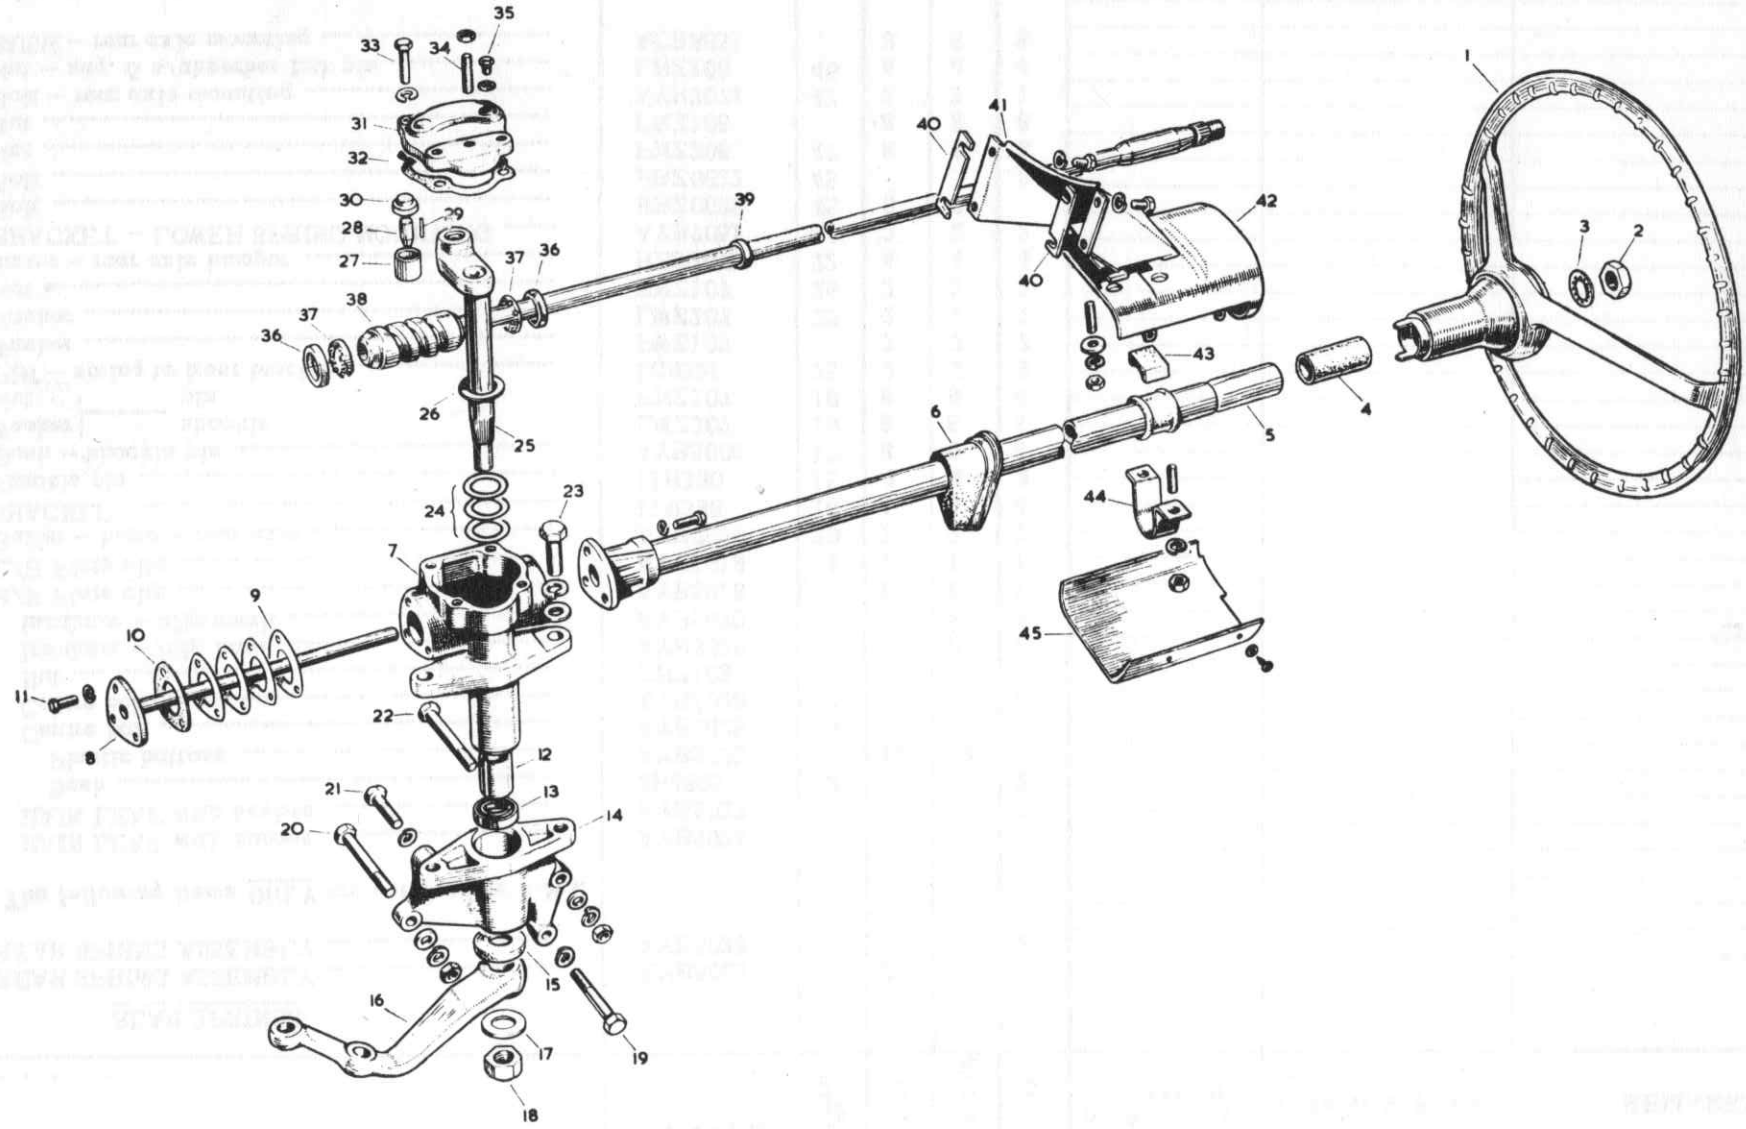


ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE J1 and J2


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	STEERING DETAILS								
1	STEERING GEAR ASSEMBLY	AYB6001		1	1	1			
2	Socket and outer tube assembly	HYL2278	5	1	1	1			
3	Screw — socket to box	HZS0508		3	3	3			
4	Washer — socket to box	LWZ205		3	3	3			
5	Box with bushes	HYL2273	7	1	1	1			
6	Bush – rocker shaft	HYL2274	12	1	1	1			
7	OIL SEAL	HYL2275	13	1	1	1			
8	CAM AND TUBE ASSEMBLY	HYL2276	38	1	1	1			
9	Ball cage	HYL2290	37	2	2	2			
10	Ball cup	HYL2291	36	1	1	1			
11	Felt bush	HYL2292	4	1	1	1			
12	ROCKER SHAFT ASSEMBLY	HYL2277	25	1	1	1			
13	Belleville washer	HYL2293	24	A/R	A/R	A/R			
14	Thrust washer	HYL2294	26	1	1	1			
15	Side cover	HYL2279	31	1	1	1			
16	Gasket	HYL2284	32	1	1	1			
17	Thrust screw	17H6098	34	1	1	1			
18	Lock nut	7H6229		1	1	1			
19	Bolt — side cover	HBZ0510	33	4	4	4			
20	Spring washer — side cover	LWZ205		4	4	4			
21	Oil plug	7H6391	35	1	1	1			
22	Washer	7H6392		1	1	1			
23	END COVER & STATOR TUBE ASSY.	HYL2285	8	1	1	1			
24	Gasket	HYL2289	10	1	1	1			
25	Shim .002"	HYL2286	9	A/R	A/R	A/R			
26	Shim .005"	HYL2287	9	A/R	A/R	A/R			
27	Shim .010"	HYL2288	9	A/R	A/R	A/R			
28	Screw — end cover	HZS0506	11	3	3	3			
29	Washer — end cover	LWZ205		3	3	3			
30	Tab washer	AYB6013	17	1	1	1			
31	Nut – lever to steering gear	FNZ612	18	1	1	1			
32	DUST SEAL	1G6236	15	1	1	1			
33	R/H SIDE LEVER & CROSS ROD	AYB6002	16	1	1	1			
34	Bracket – steering box	1G6324	14	1	1	1			

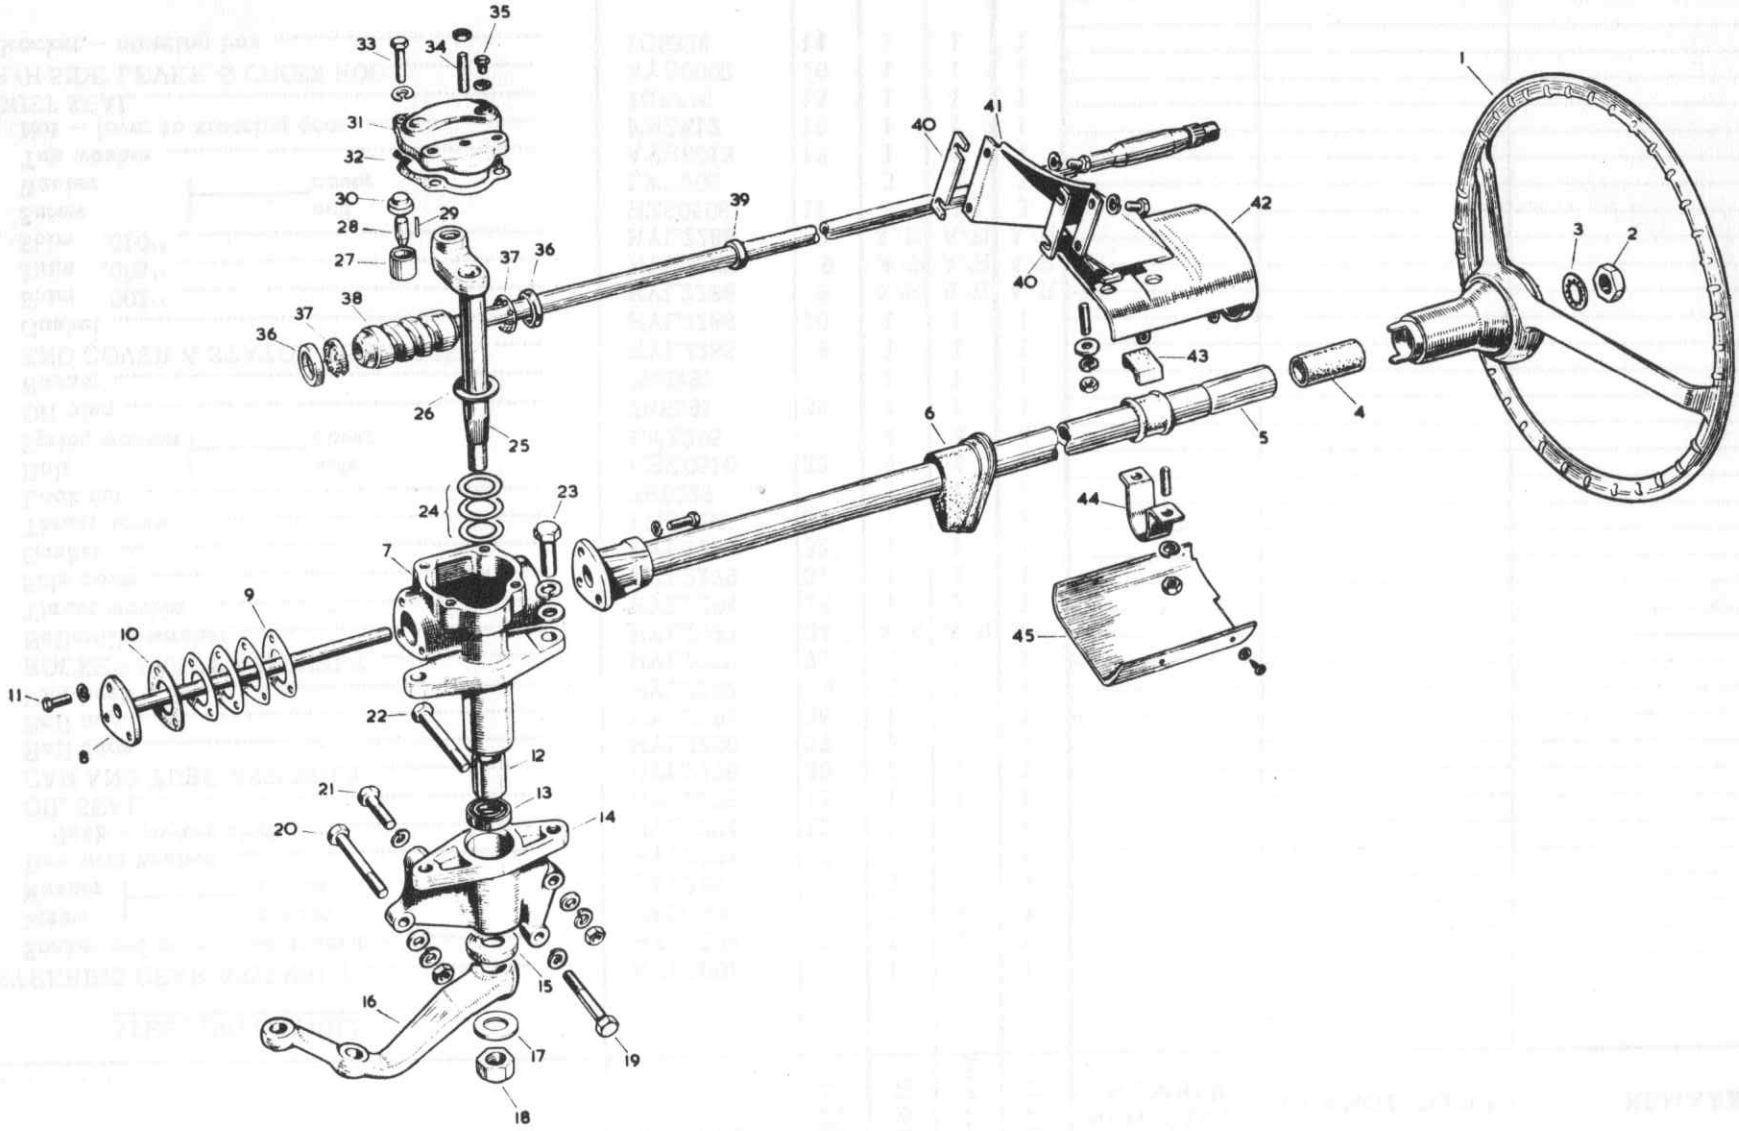


ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE J1 and J2

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	STEERING DETAILS CONTINUED:								
1	Bolt — steering box to bracket	HZS0711	23	2	2	2			
2	Plain washer — steering box to bracket	PWZ107		2	2	2			
3	Spring washer — steering box to bracket	LWZ307		2	2	2			
4	Bolt — bracket to frame	HBZ0524	20	2	2	2			
5	Nut — bracket to frame	FNZ105		2	2	2			
6	Spring washer — bracket to frame	LWZ205		4	4	4			
7	Plain washer — bracket to frame	PWZ105		2	2	2			
8	Bolt — bracket to body	HBZ0520	19	1	1	1			
9	Screw — bracket to body	HBZ0510	21	1	1	1			
10	BRACKET SUPPORT – STEERING COLUMN ...	24G779	41	1	1	1			
11	Screw — bracket to dash	HZS0404		4	4	4			
12	Stud — bracket to dash	24G1403		2	2	2			
13	Washer — bracket to dash	PWZ204		2	2	2			
14	Nut — bracket to dash	FNZ104		2	2	2			
15	Spring washer — bracket to dash	LWZ204		6	6	6			
16	Grommet – steering column	14G4790	6	1	1	1			
17	UPPER COVER ASSY.–STEERING COLUMN ...	24G768	42	1	–	1			
18	UPPER COVER ASSY.–STEERING COLUMN ...	HYB0349	42	–	1	–			
19	LOWER COVER – STEERING COLUMN	HYB0820	45	1	–	1			
20	LOWER COVER – STEERING COLUMN	HYB0821	45	–	1	–			
21	Screw – upper cover to lower cover	PMZ0206		4	4	4			
22	Plug	RFR206		1	–	1			
23	Clip – steering column	4G8553	44	1	1	1			
24	Packing piece	4B2502	40	1	1	1			
25	Distance piece – clip	14G3893	43	1	1	1			
26	Stud – clip to column	24G1402		2	2	2			
27	Spring washer — stud	LWZ204		2	2	2			
28	Nut — stud	FNZ104		2	2	2			
29	Plain washer — stud	PWZ204		2	2	2			
30	STEERING WHEEL COMPLETE	11H132	1	1	1	1			Alt. 11H133
31	Nut — steering wheel	53K382	2	1	1	1			
32	Washer — steering wheel	53K3480	3	1	1	1			

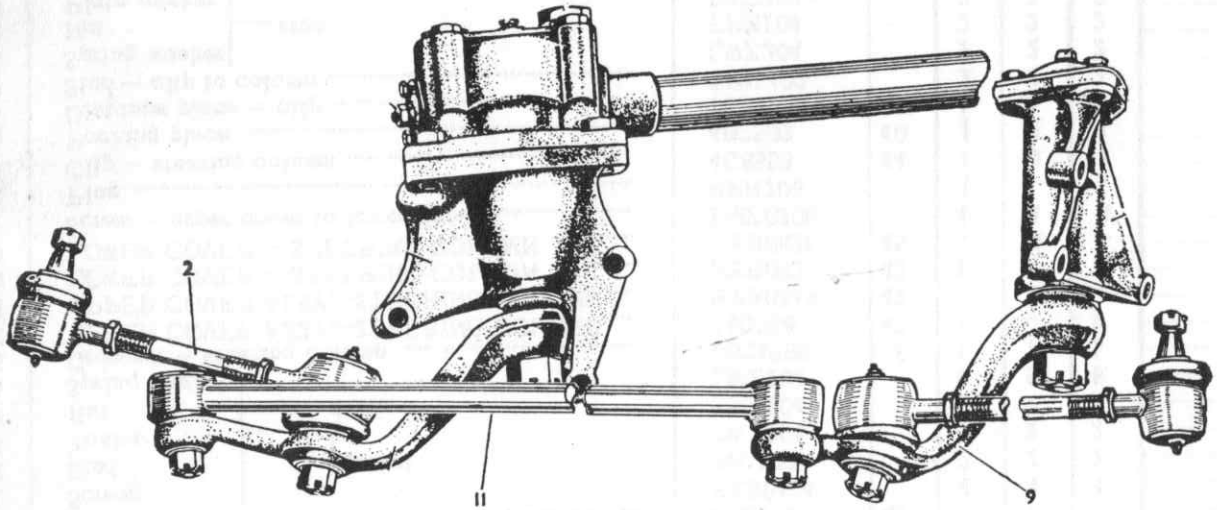

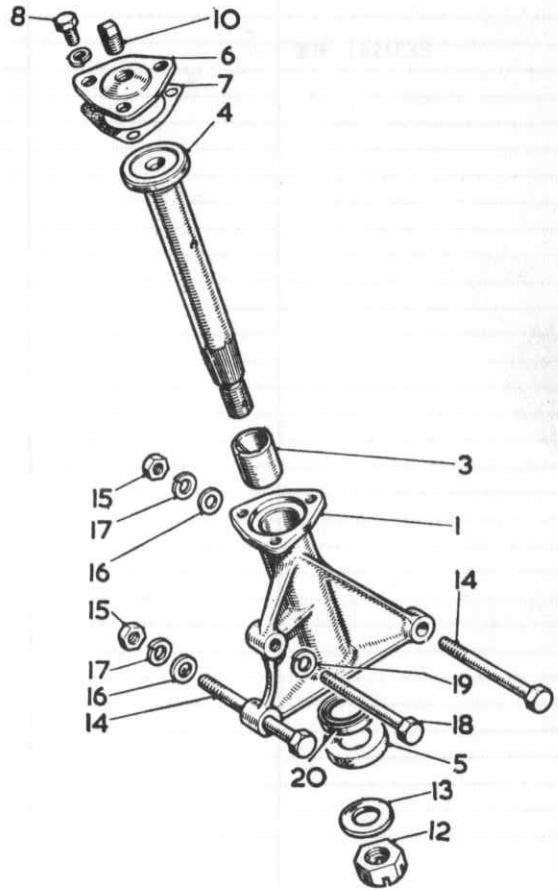

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE J 3

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	STEERING DETAILS CONTINUED:								
1	IDLER GEAR	11H830		1	1	1			
2	Body	1G6320	1	1	1	1			
3	Seal	3H3132	20	1	1	1			
4	Bush	1A6679	3	2	2	2			
5	Idler shaft	11H831	4	1	1	1			
6	Dust seal	1G6236	5	1	1	1			
7	Cover – idler body	1B6137	6	1	1	1			
8	Gasket	1B6138	7	A/R	A/R	A/R			
9	Screw – cover to body	HZS0505	8	3	3	3			
10	Washer – spring for screw	LWZ305		3	3	3			
11	Plug – oil filler	2K8209	10	1	1	1			
12	Washer – tab for lever	11H770	13	1	1	1			
13	Locknut for lever	FNZ210	12	1	1	1			
14	LEVER – SIDE AND CROSS ROD – L/H	AYB6003	9	1	1	1			
15	Bolt – idler gear to frame	HBZ0524	14	2	2	2			
16	Nut for bolt	FNZ105	15	2	2	2			
17	Washer – plain for bolt	PWZ105	16	2	2	2			
18	Washer – spring for bolt	LWZ205	17	2	2	2			
19	Bolt – idler to frame	HBZ0522	18	1	1	1			
20	Washer – spring for bolt	LWZ205	19	1	1	1			
21	CROSS ROD ASSEMBLY	AYB6000	11	1	1	1			
22	SIDE ROD ASSEMBLY	AYB6006	2	2	2	2			
23	Rod	HYL2315		2	2	2			
24	Nut – lock – R.H.T.	K24107		2	2	2			
25	Nut – lock – L.H.T.	HYL2316		2	2	2			
26	Socket assembly – R.H.T.	ACH6168		2	2	2			
27	Socket assembly – L.H.T.	AYB6007		2	2	2			
28	Boot	7H3762		4	4	4			
29	Clip for boot	7H3565		4	4	4			
30	Washer – fibre	ACH6173		4	4	4			
31	Washer – cup	ACH6170		4	4	4			
32	Nut – ball pin	FNZ407		4	4	4			
33	Grease nipple	UHN405		4	4	4			