
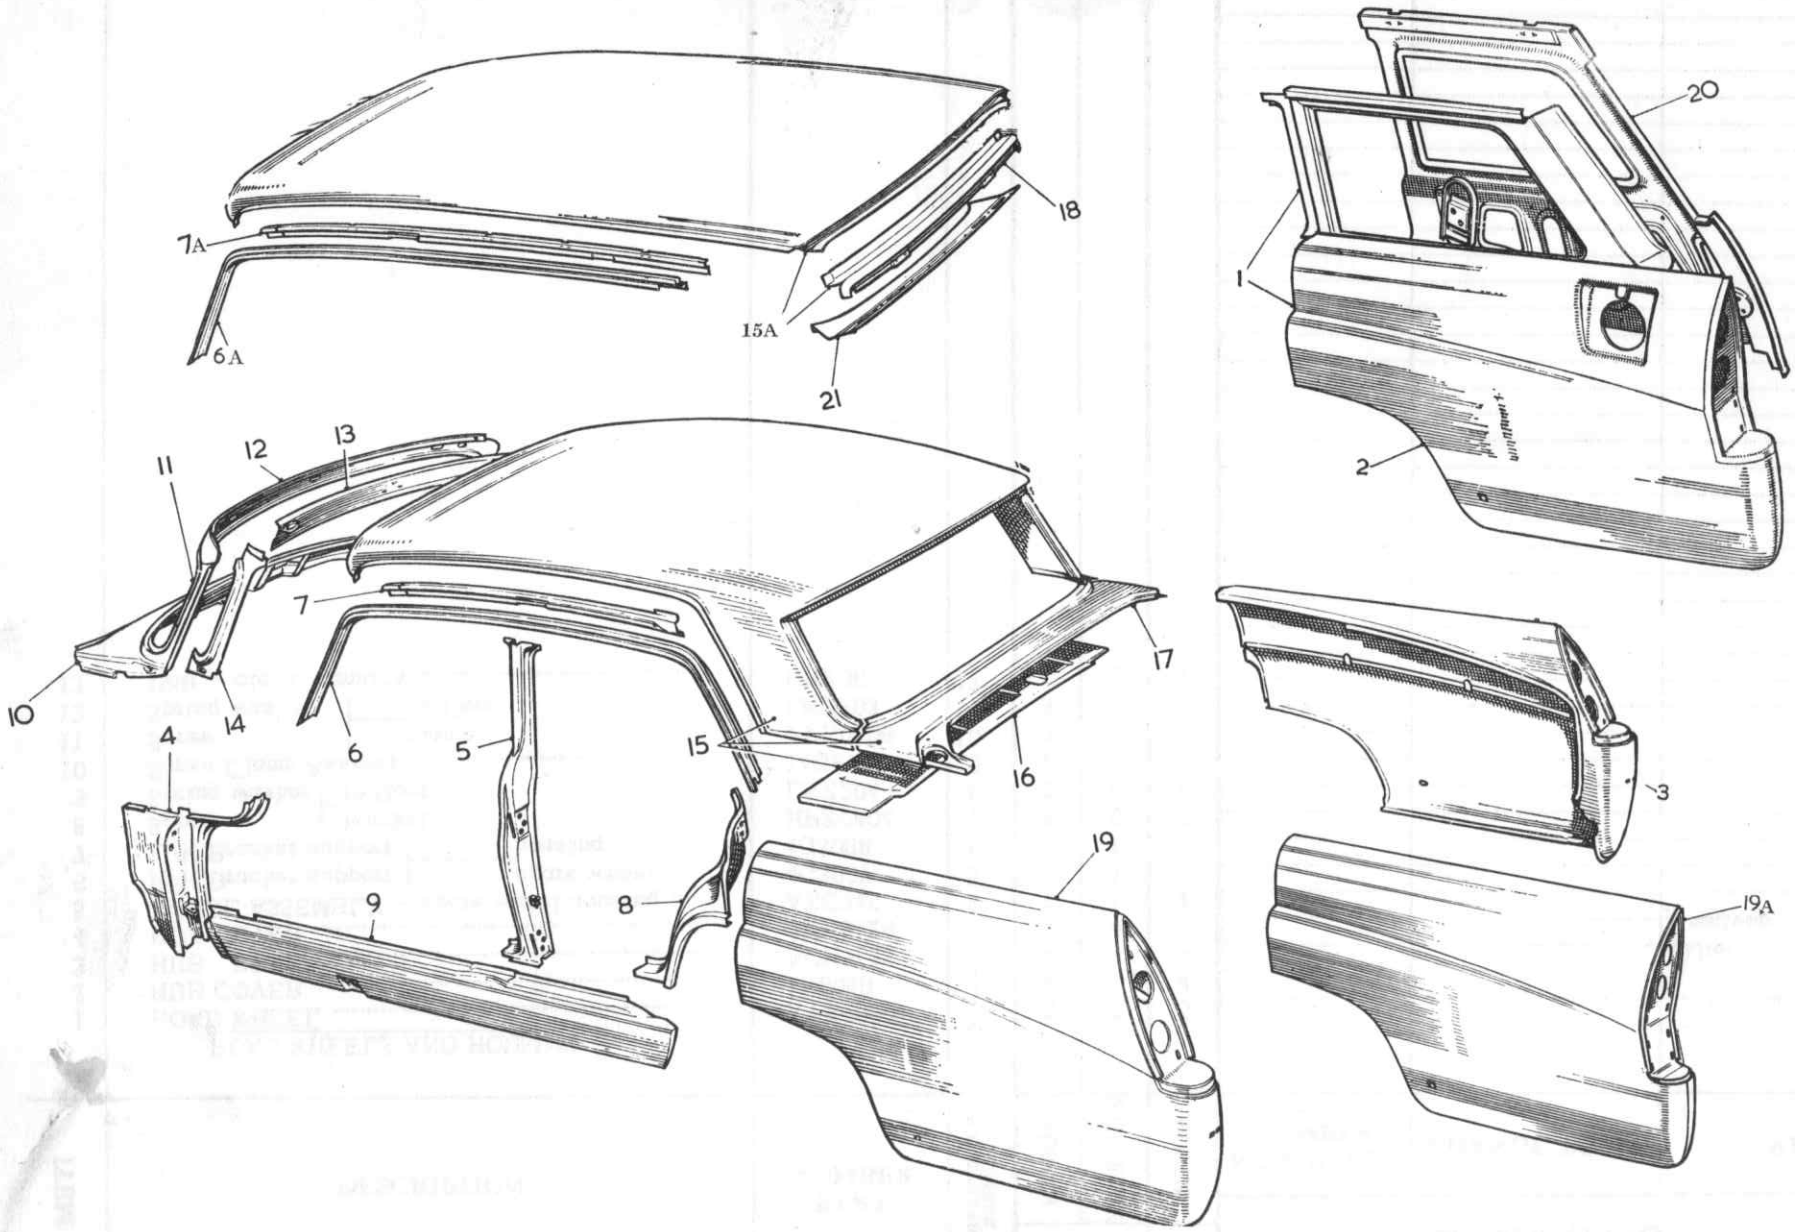



TO FACE PAGE R1 and R2

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BODY SHELL ASSEMBLY								
1	BODY SHELL (LESS DOORS, BONNET, BOOT LID AND FRONT WINGS)	HYB205		1	–	–			
2	BODY SHELL (LESS DOORS, BONNET, BOOT LID AND FRONT WINGS)	HYB206		–	1	–			
3	BODY SHELL(LESS DOORS, BONNET, BOOT LID AND FRONT WINGS)	HYB204		–	–	1			
4	BODY SIDE PANEL ASSY. – R/H	HYB0200		1	1	–			
5	BODY SIDE PANEL ASSY. – R/H	HYB0344		–	–	1			
6	BODY SIDE PANEL ASSY. – L/H	HYB0201		1	1	–			
7	BODY SIDE PANEL ASSY. – L/H	HYB0345		–	–	1			
8	"A" Post panel assembly – R/H	24G2414		1	1	1			
9	"A" Post panel assembly – L/H	24G2415	4	1	1	1			
10	Centre pillar panel assembly – R/H	24G2120		1	1	–			
11	Centre pillar panel assembly – R/H	BZC1628		–	–	1			
12	Centre pillar panel assembly – L/H	24G2121	5	1	1	–			
13	Centre pillar panel assembly – L/H	BZC1629		–	–	1			
14	Cantrail assembly R/H	14G9712		1	1	–			
15	Cantrail assembly R/H	BZC1528		–	–	1			
16	Cantrail assembly – L/H	14G9713	6	1	1	–			
17	Cantrail assembly – L/H	BZC1529	6A	–	–	1			
18	Cantrail closing plate – R/H	HYB0614		1	–	–			
19	Cantrail closing plate – R/H	14G9710		–	1	–			
20	Cantrail closing plate – R/H	HYB0616		–	–	1			
21	Cantrail closing plate – L/H	14G9711	7	1	1	–			
22	Cantrail closing plate – L/H	BZA1639	7A	–	–	1			
23	"D" Post – lower R/H	BZC692		1	1	–			
24	"D" Post – lower R/H	HYB0390		–	–	1			
25	"D" Post – lower L/H	BZC693	8	1	1	–			
26	"D" Post – lower L/H	HYB0391	8	–	–	1			
27	Outer sill panel – R/H	HYB0456		1	1	1			
28	Outer sill panel – L/H	HYB0457	9	1	1	1			
29	Rear Quarter and wing assembly – R/H	HYB0346		–	–	1			
30	Rear wing assembly – R/H	HYB0422		–	–	1			
31	Rear Quarter and wing assembly – L/H	HYB0347	1	–	–	1			
32	Rear wing assembly – L/H	HYB0423	2	–	–	1			
33	WINDSHIELD PANEL ASSEMBLY	24G2122	10	1	1	1			
34	"A"Post – upper R/H	14G9782		1	1	1			

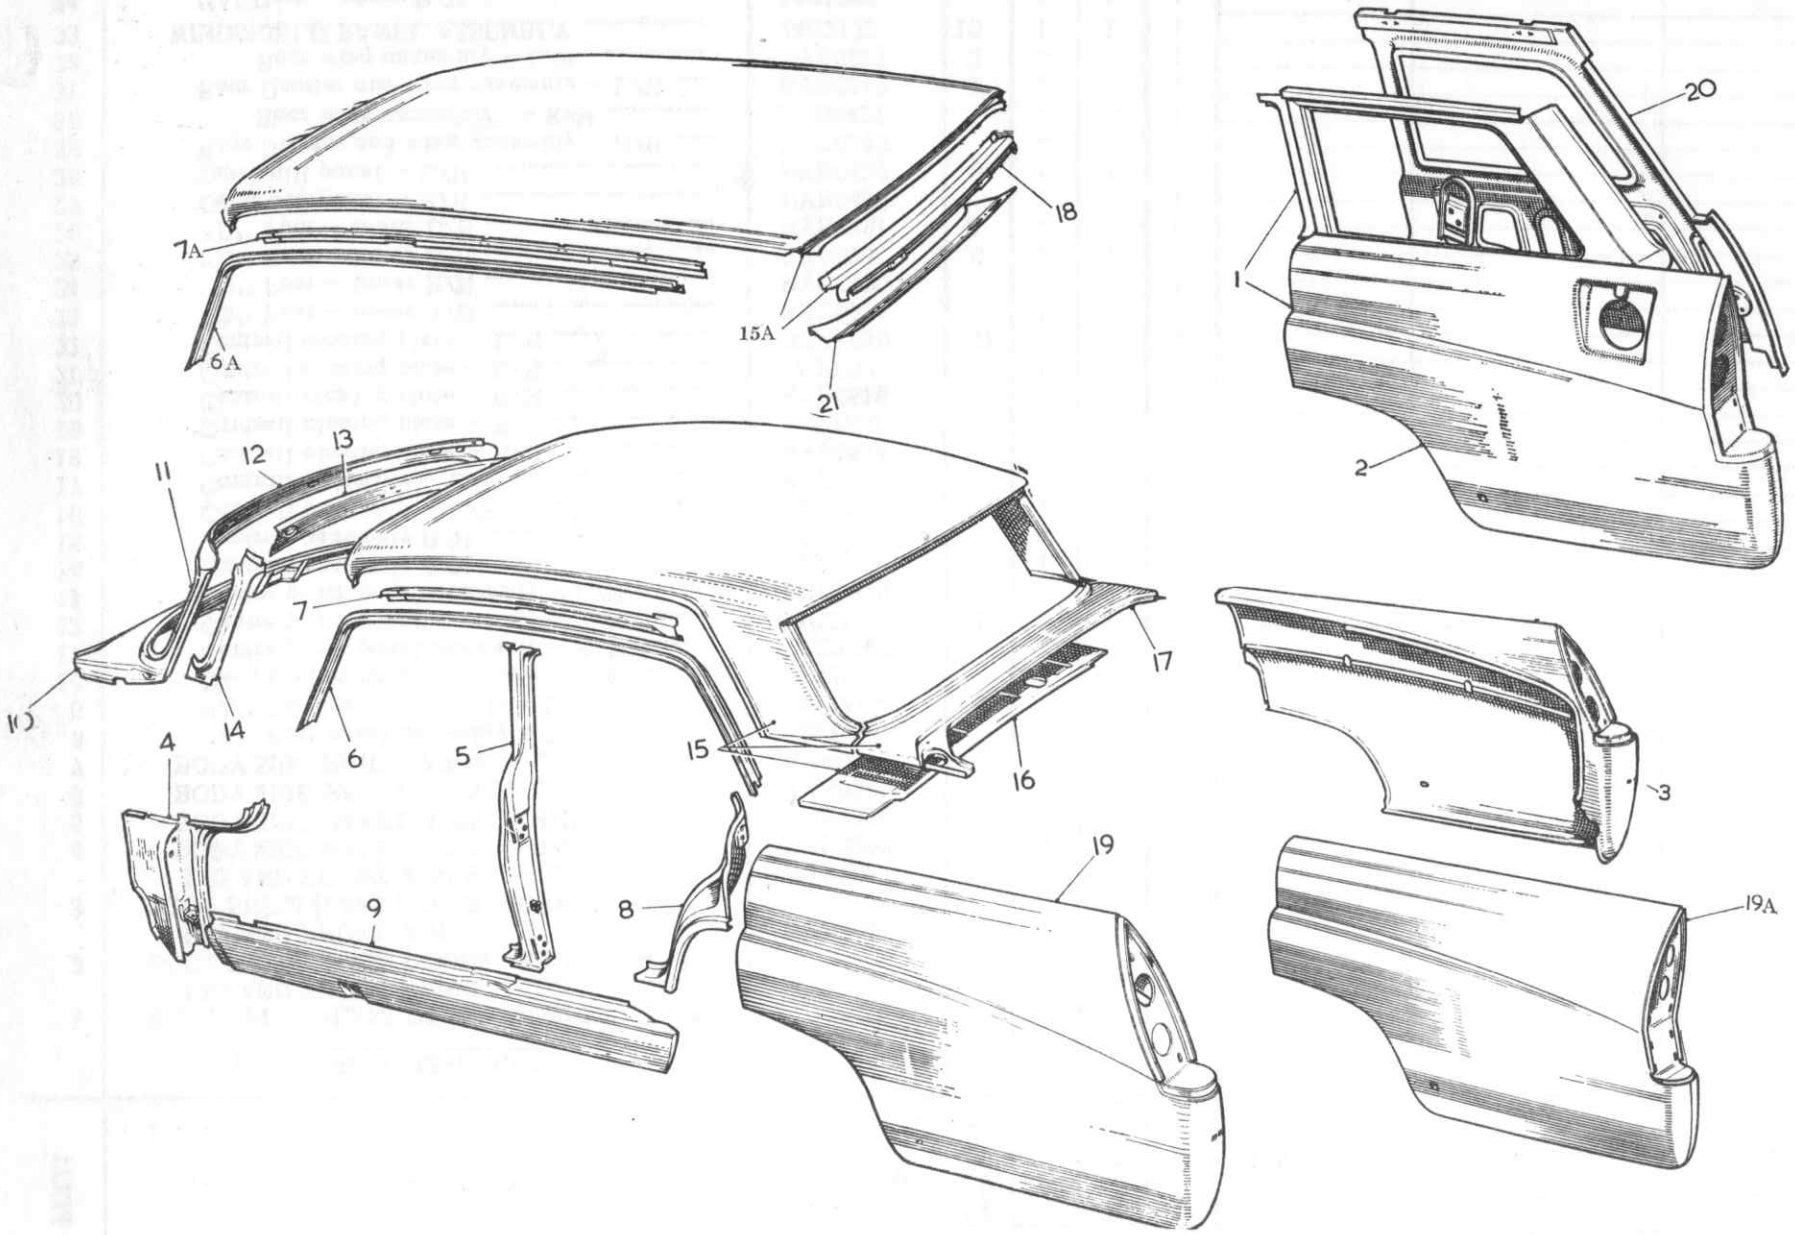


TO FACE PAGE R1 and R2

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	BODY SHELL ASSEMBLY CONTINUED:								
1	"A" post – upper L/H	14G9783	11	1	1	1			
2	Header panel	14G9684	12	1	1	1			
3	Closing panel – windshield header	14G9793	13	1	1	1			
4	Closing panel – "A" post upper R/H	14G9703		1	1	1			
5	Closing panel – "A post upper L/H	14G9704	14	1	1	1			
6	ROOF PANEL ASSEMBLY	HYB0117	15	1	–	–			
7	ROOF PANEL ASSEMBLY	HYB0356	15	–	1	–			
8	ROOF PANEL ASSEMBLY	BZC1502	15A	–	–	1			
9	Rear parcel shelf panel	HYB0269	16	1	1	–			
10	Top panel – boot	14G9787	17	1	1	–			
11	Tail gate aperture – cantrail panel	BZC1520	18	–	–	1			
12	REAR WING – R/H	HYB0410		1	–	–			
13	REAR WING – R/H	HYB0408	3	–	1	–			
14	REAR WING – L/H	HYB0411	19	1	–	–			
15	REAR WING – L/H	HYB0409	19A	–	1	–			
16	R/H INNER QUARTER PANEL	HYB0342		–	–	1			
17	L/H INNER QUARTER PANEL	HYB0343	20	–	–	1			
18	Closing panel – tailgate aperture cantrail	BZA1611	21	–	–	1			
19	Reinforcement – lower tailgate stay	BZC1544		–	–	2			

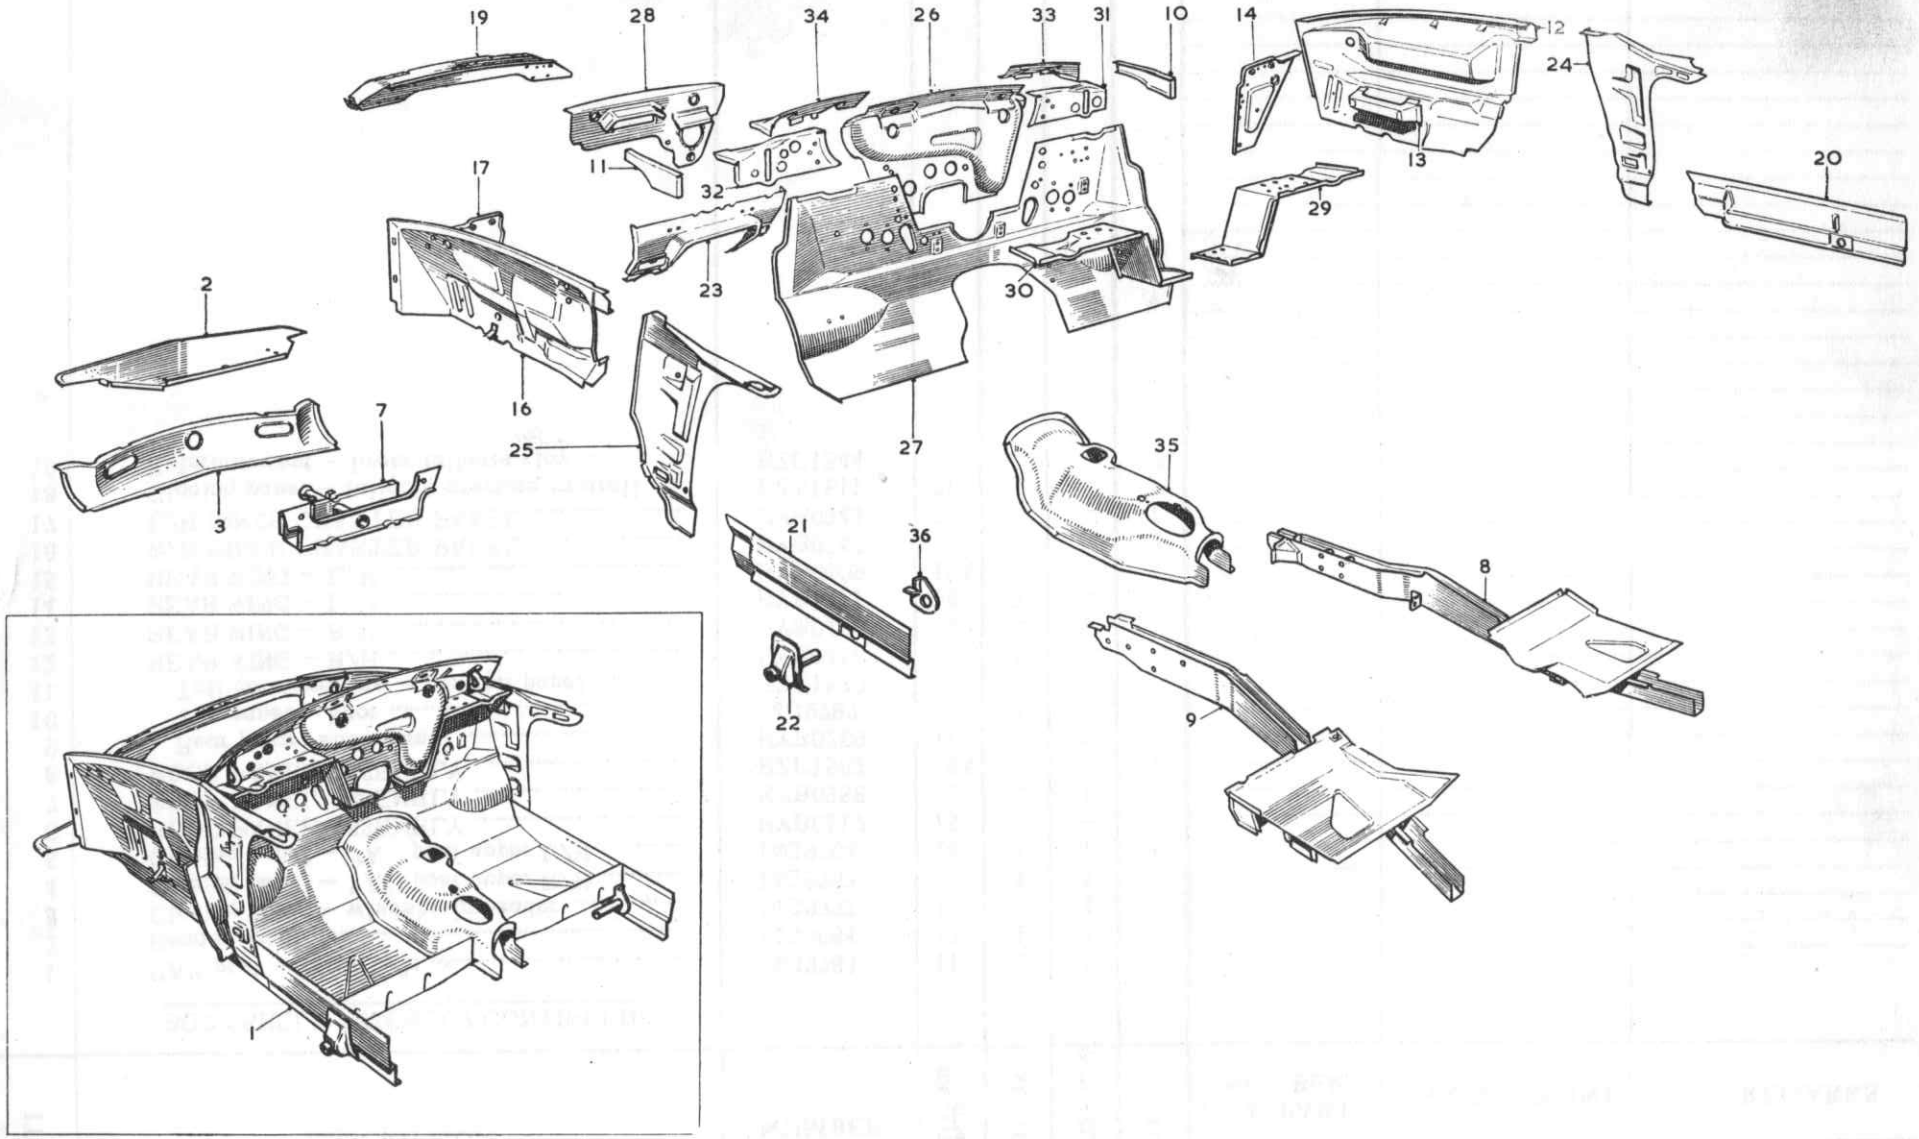


TO FACE PAGE R3 and R4

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	BODY SHELL ASSEMBLY CONTINUED:								
1	FRONT END ASSEMBLY	HYB0023	1	1	–	1			
2	FRONT END ASSEMBLY	HYB0024	1	–	1	–			
3	Front fairing panel	HYB0271	2	1	–	1			
4	Front fairing panel	HYB0022		–	1	–			
5	Front lower body panel	24G1756	3	1	1	1			
6	FRONT CROSS MEMBER ASSEMBLY	HYB0011	7	1	1	1			
7	Screw fixing cross member	HPZ0606		8	8	8			
8	Spring washer for screw	LWZ206		8	8	8			
9	Washer for screw	PWZ106		8	8	8			
10	Side member assy. & floor panel R.H.	HYB0006	8	1	1	1			
11	Side member assy. – floor panel L.H.	HYB0007	9	1	1	1			
12	R/H reinforcement – valance to dash	14G9870	10	1	1	1			
13	L/H reinforcement – valance to dash	14G9871	11	1	1	1			
14	R/H VALANCE	HYB0020	12	1	–	1			
15	R/H VALANCE	HYB0626	12	–	1	–			
16	Bracket – battery support	14G9831	13	1	1	1			
17	Bracket – battery support	HYH0759	13	2	2	2			
18	Plain washer	PWN207		2	2	2			
19	Side support – radiator mounting	HYB0018	14	1	1	1			
20	L/H VALANCE	HYB0021	16	1	–	1			
21	L/H VALANCE	HYB0627	16	–	1	–			
22	Side support – radiator mounting	HYB0019	17	1	1	1			
23	Bridge piece – radiator mounting	24G1904	19	1	1	1			
24	Screw – bridge piece to radiator mounting assembly	HZS0405		12	12	12			
25	Spring washer – bridge piece to radiator mounting assembly	LWZ204		12	12	12			
26	Plain washer – bridge piece to radiator mounting assembly	PWZ104		12	12	12			
27	R/H INNER SILL PANEL	24G1509	20	1	1	1			
28	L/H INNER SILL PANEL	24G1510	21	1	1	1			
29	Jacking bracket	24G665	22	2	2	2			
30	Reinforcement – R/H jacking tube	24G1626		1	1	1			
31	Reinforcement – L/H jacking tube	24G1627	36	1	1	1			
32	Reinforcement – side member to dash	HYB0683	23	1	1	1			

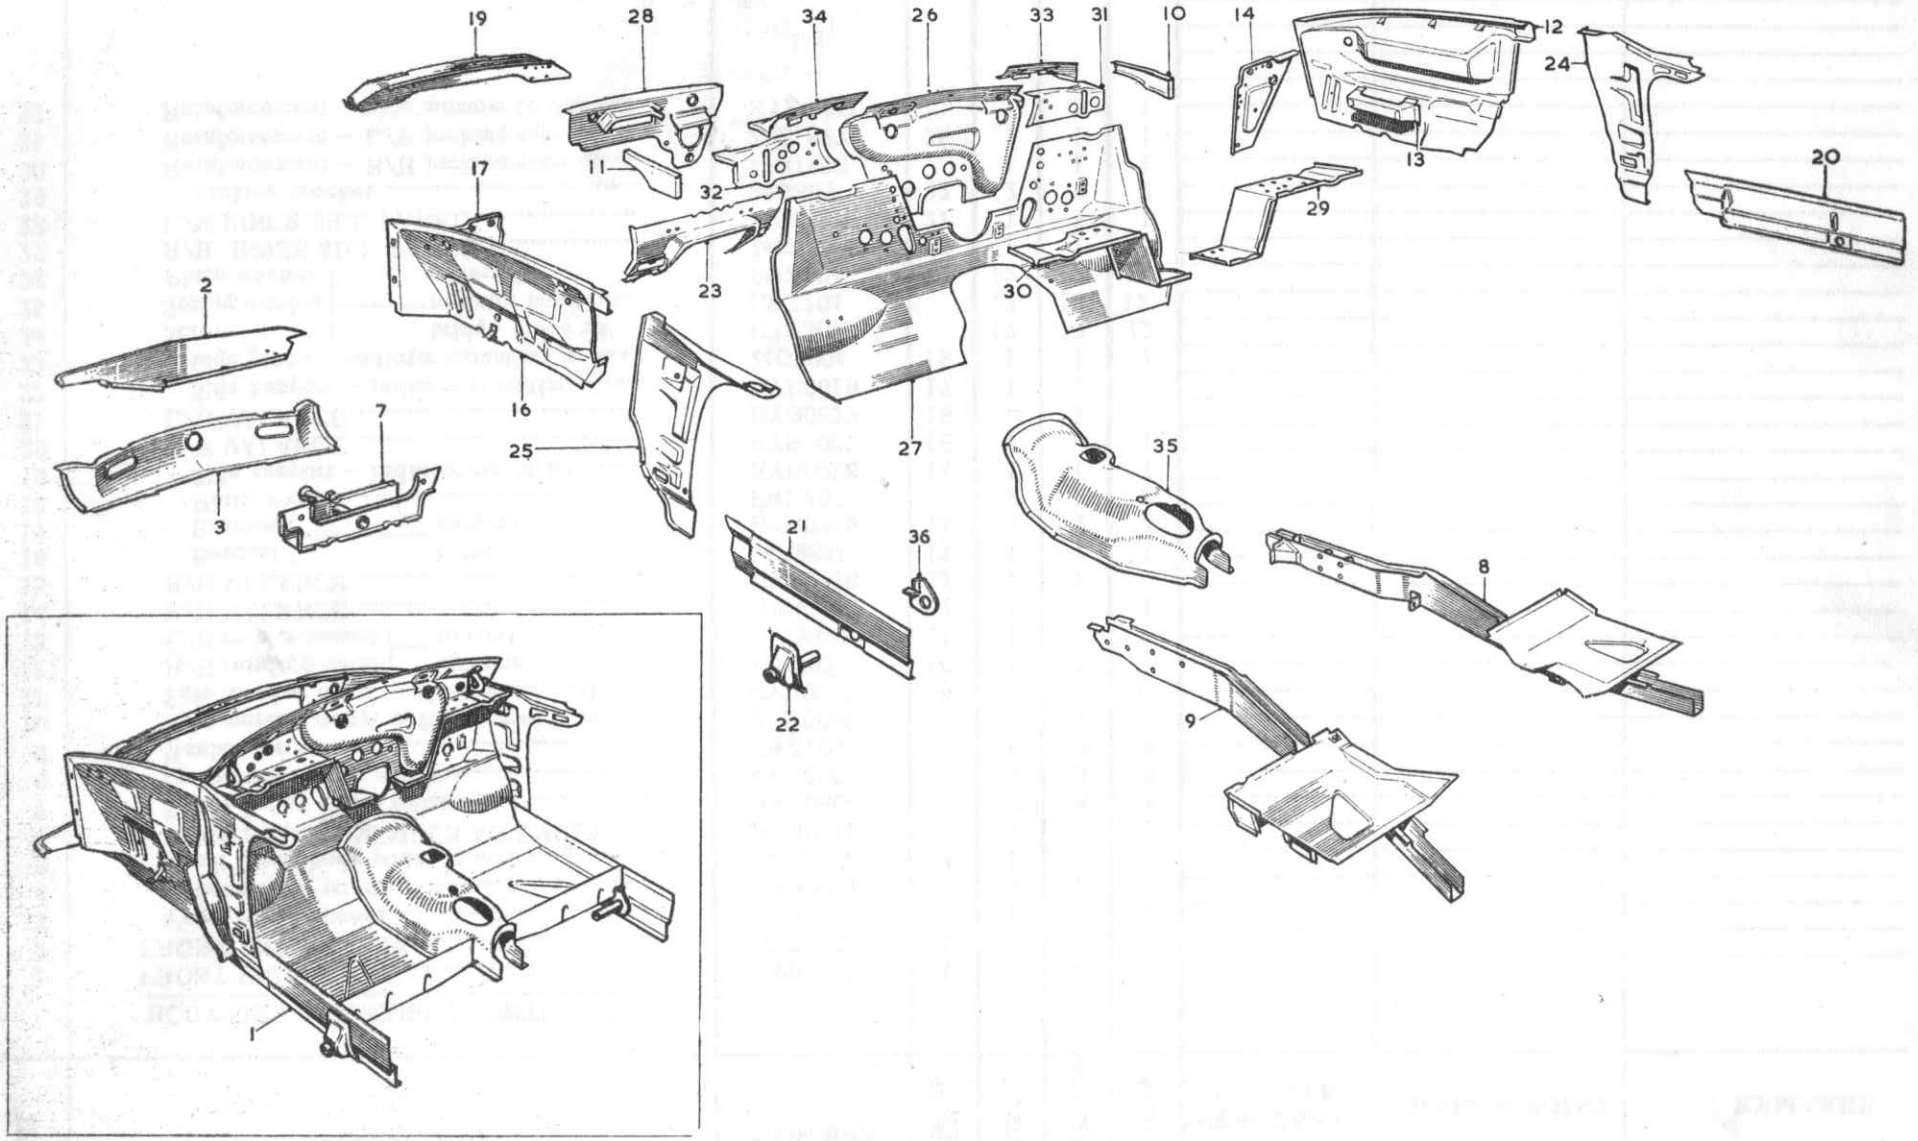


TO FACE PAGE R3 and R4

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
	. . . . .			AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	FRONT END CONTINUED:								
1	Panel – dash side R/H	HYB0432	24	1	1	1			
2	Panel – dash side L/H	HYB0433	25	1	1	1			
3	Panel inner – dash centre upper	14G9607	26	1	1	1			
4	Panel – dash centre lower	HYB0628	27	1	–	1			
5	Panel – dash centre lower	CZC2	27	–	1	–			
6	Closing panel – dash centre	14G9701	28	1	1	1			
7	R/H shelf panel – dash centre	14G9638	29	1	1	1			
8	L/H shelf panel – dash centre	14G9639	30	1	1	1			
9	R/H outer – upper panel	14G9878	31	1	1	1			
10	L/H outer – upper panel	14G9879	32	1	1	1			
11	Reinforcement – R/H lower windshield – centre	14G9860	33	1	1	1			
12	Reinforcement – L/H lower windshield – centre	14G9861	34	1	1	1			
13	Cover – gearbox	CZC3	35	1	1	1			
14	HINGE – bonnet	14G9851		2	2	2			Illustrated in bonnet section
15	Pin – hinge to dash	14G9850		2	2	2			
16	Washer for pin (plain)	PWZ104		2	2	2			
17	Washer for pin (spring)	LWZ304		2	2	2			
18	Nut for hinge pin	FNZ104		2	2	2			

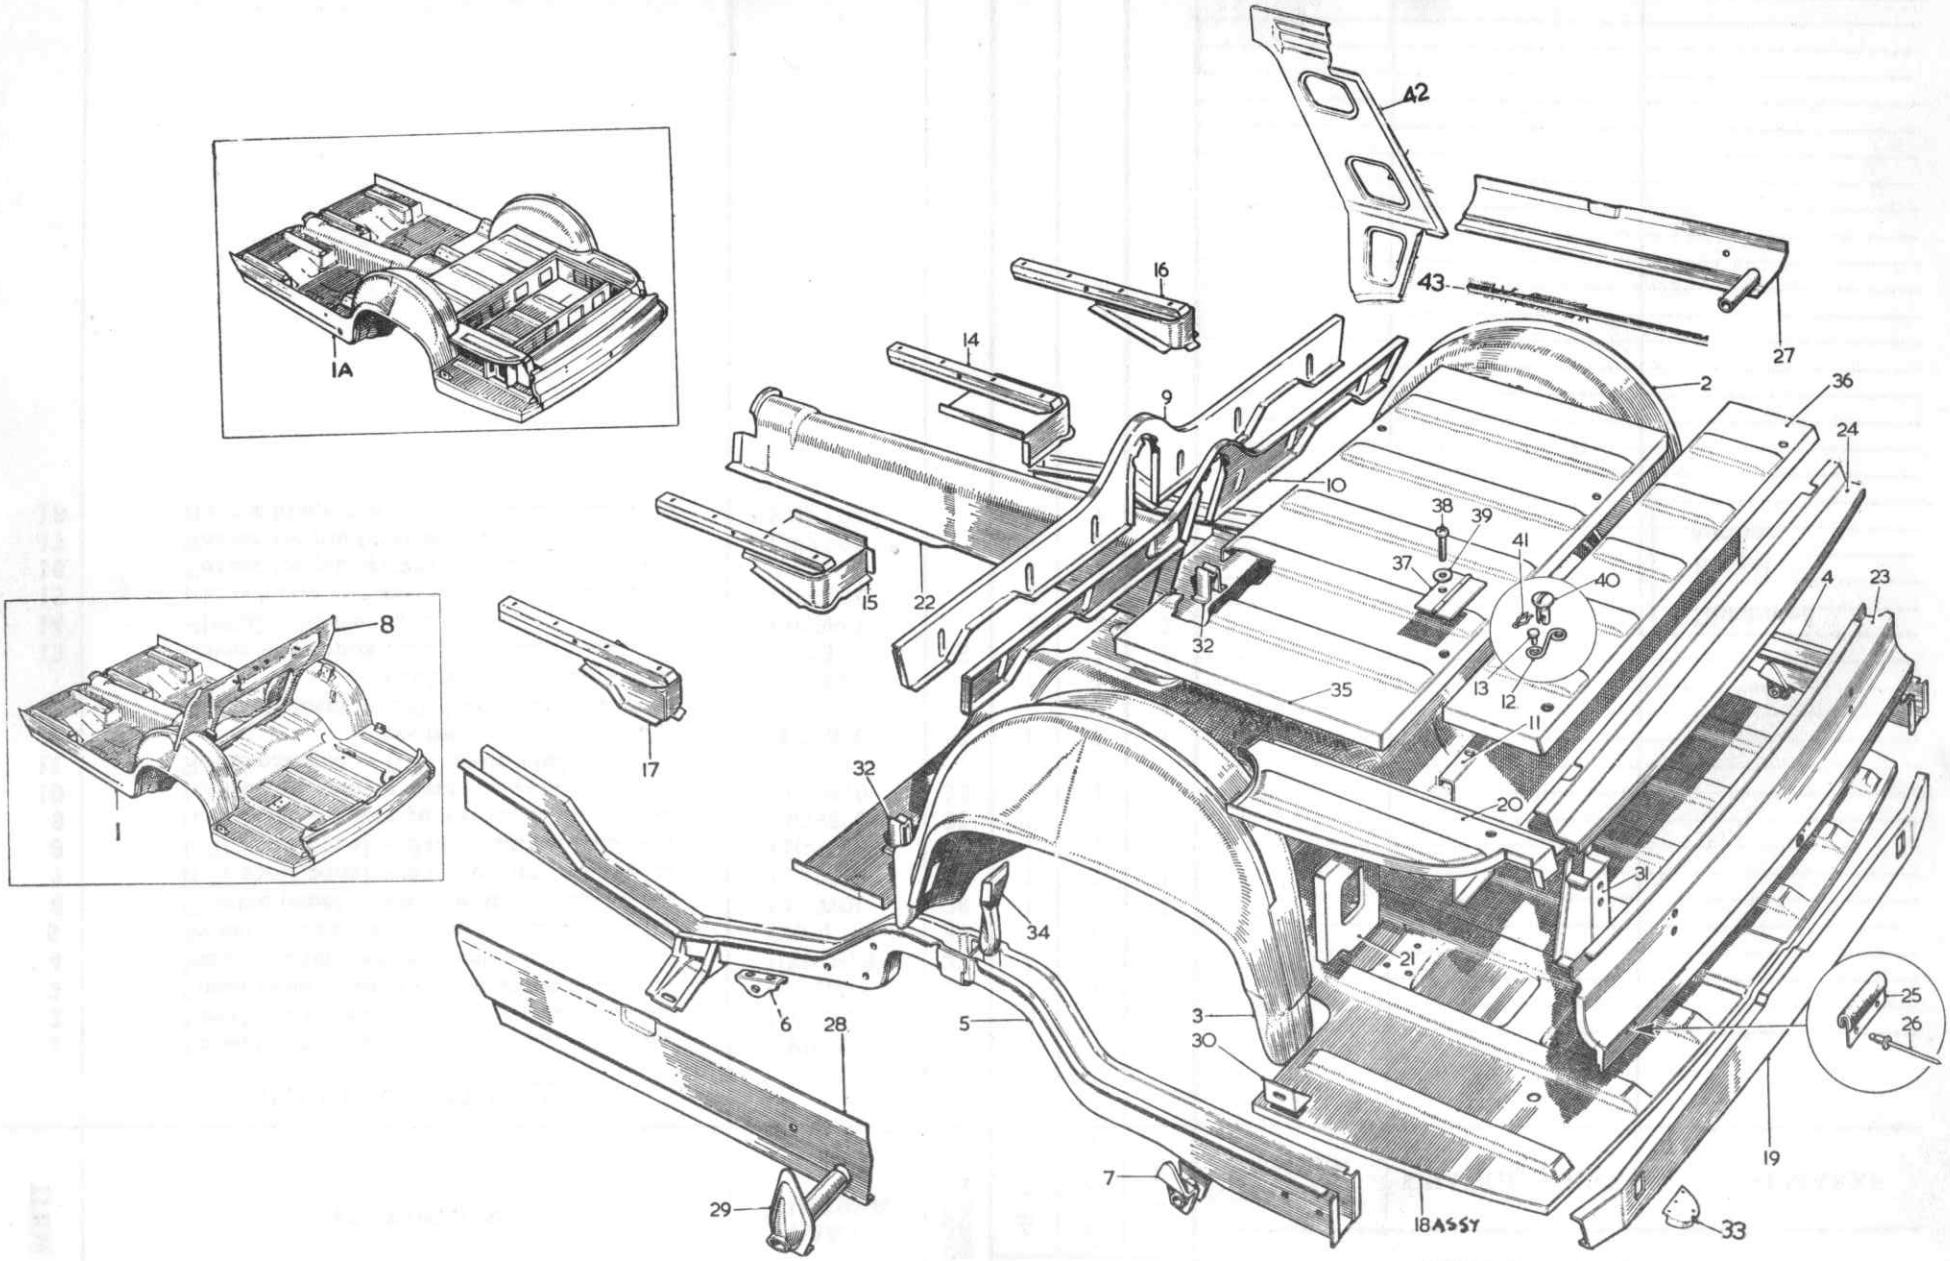


TO FACE PAGE R5 and R6

ITEM 1	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	BODY SHELL ASSEMBLY CONTINUED:								
1	REAR END ASSEMBLY	HYB0202	1	1	1	–			
2	REAR END ASSEMBLY	HYB0203	1A	–	–	1			
3	Panel assembly – wheel arch – R/H	24G1863	2	1	1	–			
4	Panel assembly – wheel arch – R/H	24G1982	2	–	–	1			
5	Panel assembly – wheel arch – L/H	24G1864	3	1	1	–			
6	Panel assembly – wheel arch – L/H	24G1983	3	–	–	1			
7	REAR FLOOR ASSEMBLY	HYB0692	18	1	1	–			
8	REAR FLOOR ASSEMBLY	HYB0693	18	–	–	1			
9	Side member assembly – R/H	24G1879	4	1	1	1			
10	Bracket – front – rear spring	24G1158		1	1	1			
11	Bracket – rear spring shackle R/H	24G1877		1	1	1			
12	Side member assembly – L/H	24G1880	5	1	1	1			
13	Bracket – front – rear spring	24G1158	6	1	1	1			
14	Bracket – rear spring shackle L/H	24G1977	7	1	1	1			
15	Cross member – front	14G9757	9	1	1	1			
16	Cross member – rear	14G9745	10	1	1	1			
17	Bracket assembly – seat support inner R/H	24G1246	14	1	1	1			
18	Bracket assembly – seat support inner L/H	24G1247	15	1	1	1			
19	Bracket assembly – seat support outer R/H	24G1248	16	1	1	1			
20	Bracket assembly – seat support outer L/H	24G1249	17	1	1	1			
21	Reinforcement – rear floor	14G9695	19	1	1	1			
22	CROSS MEMBER ASSEMBLY – rear main floor	BZC1609	11	–	–	1			
23	Fastener (spring)	13H319	12	–	–	2			
24	Rivet – fastener to cross member	RRS0206	13	–	–	4			
25	Panel – main floor outer – R/H	BZC1574		–	–	1			
26	Panel – main floor outer – L/H	BZC1575	20	–	–	1			
27	Reinforcement – outer panel	BZA1507	21	–	–	2			
28	Panel assembly – front – rear main floor	BZC1533		–	–	1			
29	Tunnel – propeller shaft	14G8484	22	1	1	1			
30	Panel assembly – rear squab	HYB0501	8	1	1	–			
31	Panel assembly – rear sill – inner – R/H	BZC1622	27	1	1	1			
32	Bracket – jacking	BZC1577		1	1	1			
33	Panel assembly – rear sill – inner – L/H	BZC1623	28	1	1	1			
34	Bracket – jacking	BZC1577	29	1	1	1			
35	Panel – body lower	14G9663		1	1	–			
36	Panel – body lower	BZA1632	23	–	–	1			
37	Panel – rear floor to body lower	BZA1527	24	–	–	1			
38	Bracket – rear bumper fixing	CZC29	30	2	2	2			

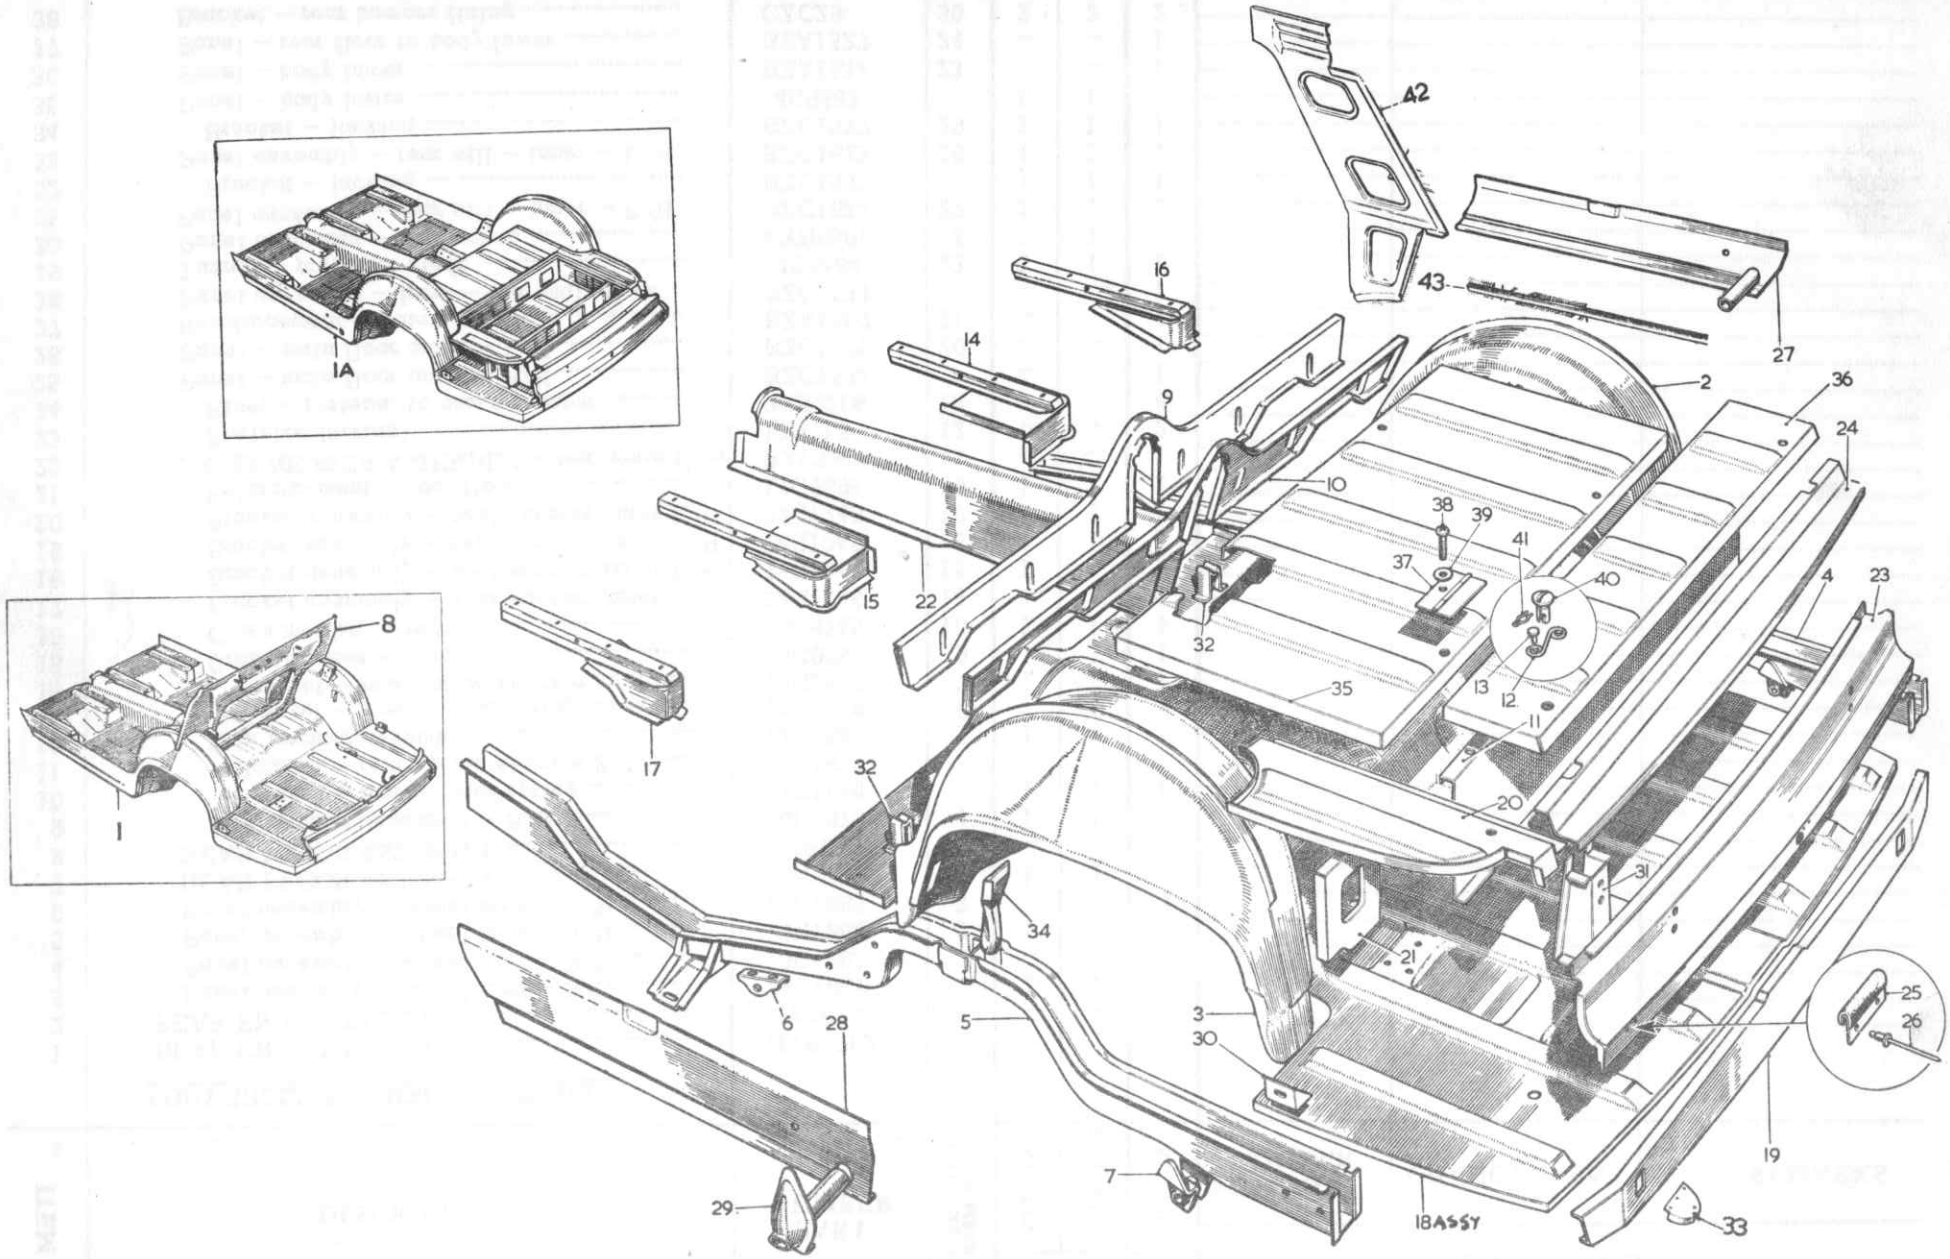


TO FACE PAGE R5 and R6

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BODY SHELL ASSEMBLY CONTINUED:								
1	Bracket – rear seat support tube	BZA1660	32	–	–	2			
2	Panel – filler – luggage floor -- R/H	24G483		1	1	–			
3	Panel – filler – luggage floor – L/H	24G484	33	1	1	–			
4	Plate – closing – sill–rear– R/H	14G9651		1	1	1			
5	Plate – closing –sill–rear– L/H	14G9652	34	1	1	1			
6	Plate – closing – backlight to 'D' post R/H	14G9696	42	1	1	–			
7	Plate – closing – backlight to 'D' post L/H	14G9697		1	1	–			
8	Finisher – tonneau to roof	14G9875	43	2	2	–			
9	Bracket – tailgate hinge support – R/H	BZA1530		–	–	1			
10	Bracket – tailgate hinge support – L/H	BZA1531	31	–	–	1			
11	Buffer – rear bumper	14G6558	25	3	3	3			
12	Rivet for bumper	13H93	26	6	6	6			
13	Panel assembly – centre – rear main floor	BZC1510	35	–	–	1			
14	Panel assembly – rear – rear main floor	BZA1502	36	–	–	1			
15	Hinge – centre panel to rear panel	BZB1500	37	–	–	2			
16	Screw – main floor to body	PPZ0420	38	–	–	4			
17	Washer – plain for screw	PWZ104	39	–	–	4			
18	Fastener – tool box lid	BDA537	40	–	–	2			
19	Circlip for fastener	13H320	41	–	–	2			

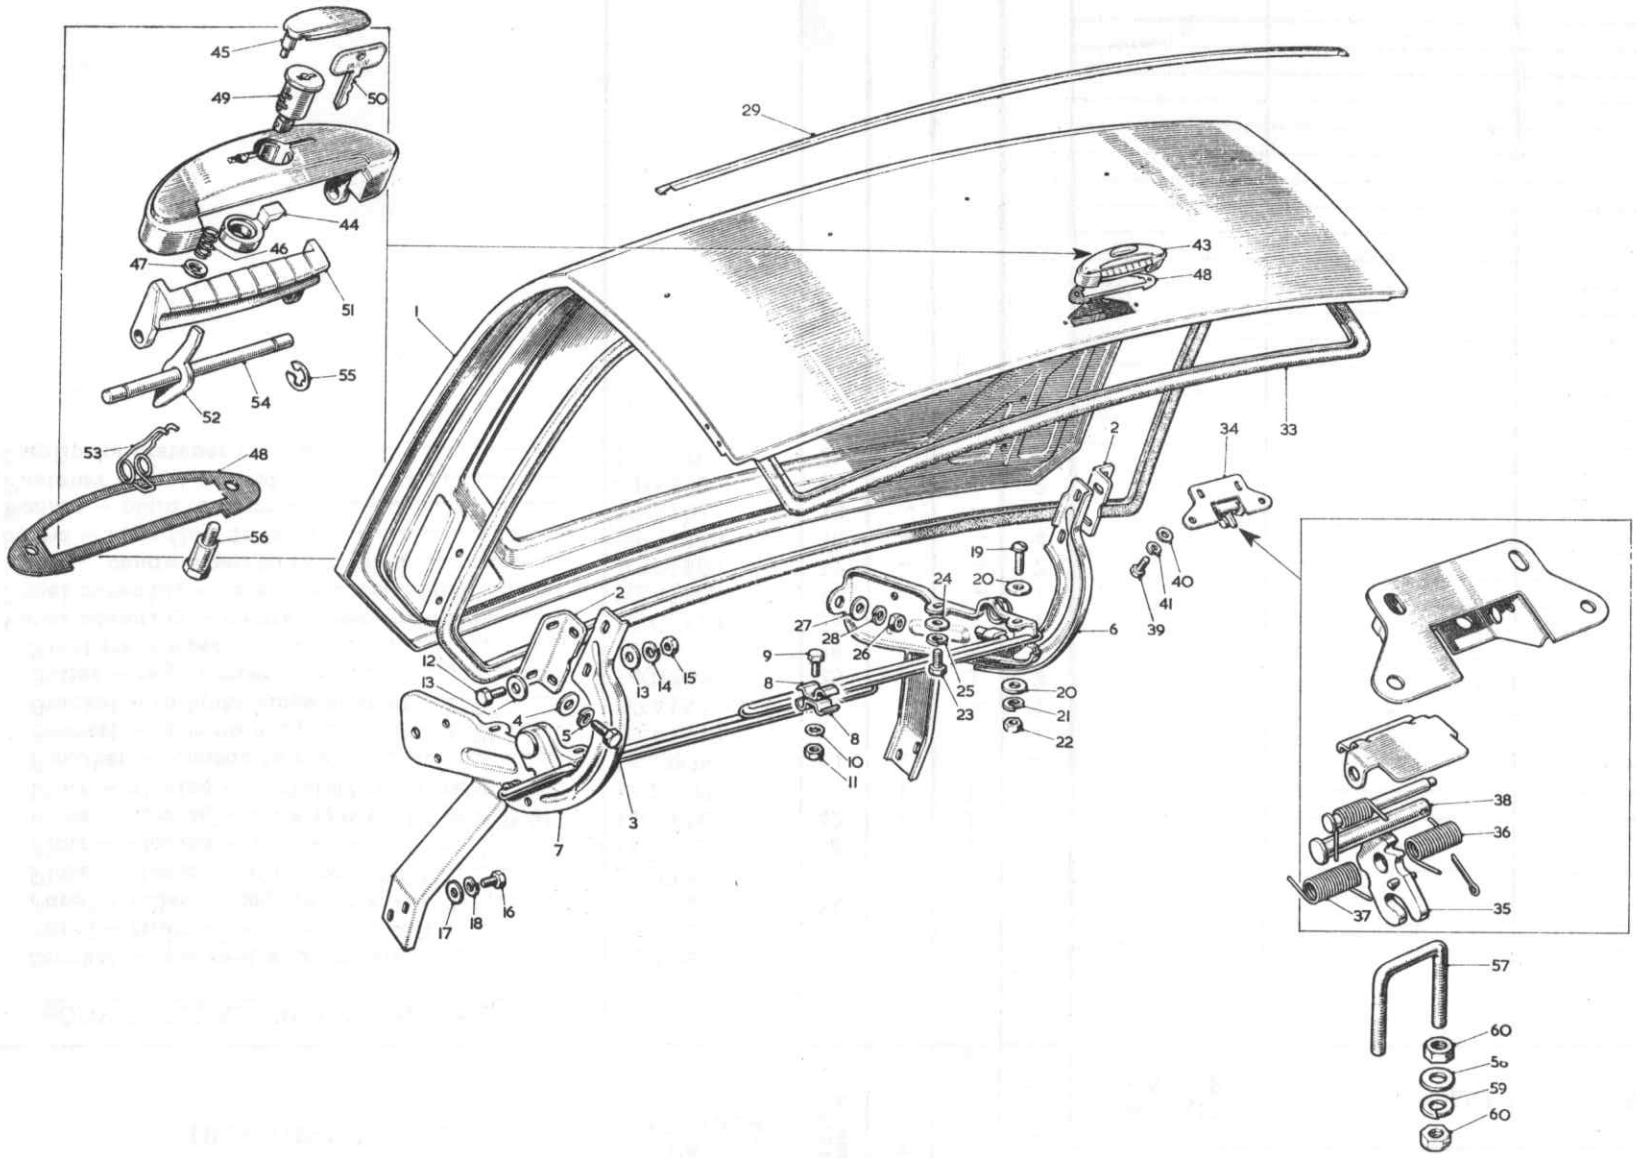


TO FACE PAGE R7, R8 and R9

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BOOT LID & FITTINGS								
1	BOOT LID	HYB0439	1	1	–				
2	BOOT LID	HYB0440	1	–	1				
3	Stiffener assembly	HYH0758	–	1	1				
4	Bracket – hinge mounting	14G9681	2	2	2				
5	Screw – bracket to lid	HZS0505	3	4	4				
6	Plain washer for screw	PWZ205	4	4	4				
7	Spring washer for screw	LWZ205	5	4	4				
8	R/H HINGE	24G903	6	1	1				
9	L/H HINGE	24G904	7	1	1				
10	Clamp – torsion bar – L/H only	24G905	8	2	2				
11	Screw for clamp	HZS0506	9	1	1				
12	Plain washer for screw	PWZ205	10	1	1				
13	Spring washer for screw	LWZ205		1	1				
14	Nut for screw	FNZ105	11	1	1				
15	Screw – hinge to bracket	HZS0506	12	4	4				
16	Plain washer for screw	PWZ205	13	8	8				
17	Spring washer for screw	LWZ205	14	4	4				
18	Nut for screw	FNZ105	15	4	4				
19	Screw – hinge to wheel arch	HZS0404	16	4	4				
20	Plain washer for screw	PWZ104	17	4	4				
21	Spring washer for screw	LWZ204	18	4	4				
22	Screw – hinge to deck panel	PMZ0512	19	2	2				
23	Plain washer for screw	PWZ205	20	2	2				
24	Washer – sealing	SP050		2	2				
25	Spring washer for screw	LWZ205	21	2	2				
26	Nut for screw	FNZ105	22	2	2				
27	Hexagon screw – hinge to parcel shelf	HZS0505	23	2	2				
28	Plain washer for screw	PWZ205	24	2	2				
29	Spring washer for screw	LWZ205	25	2	2				
30	Nut for screw	FNZ105		2	2				
32	Nut – hinge to squab panel	FNZ105	26	2	2				
33	Plain washer for nut	PWZ205	27	2	2				
34	Spring washer for nut	LWZ205	28	2	2				

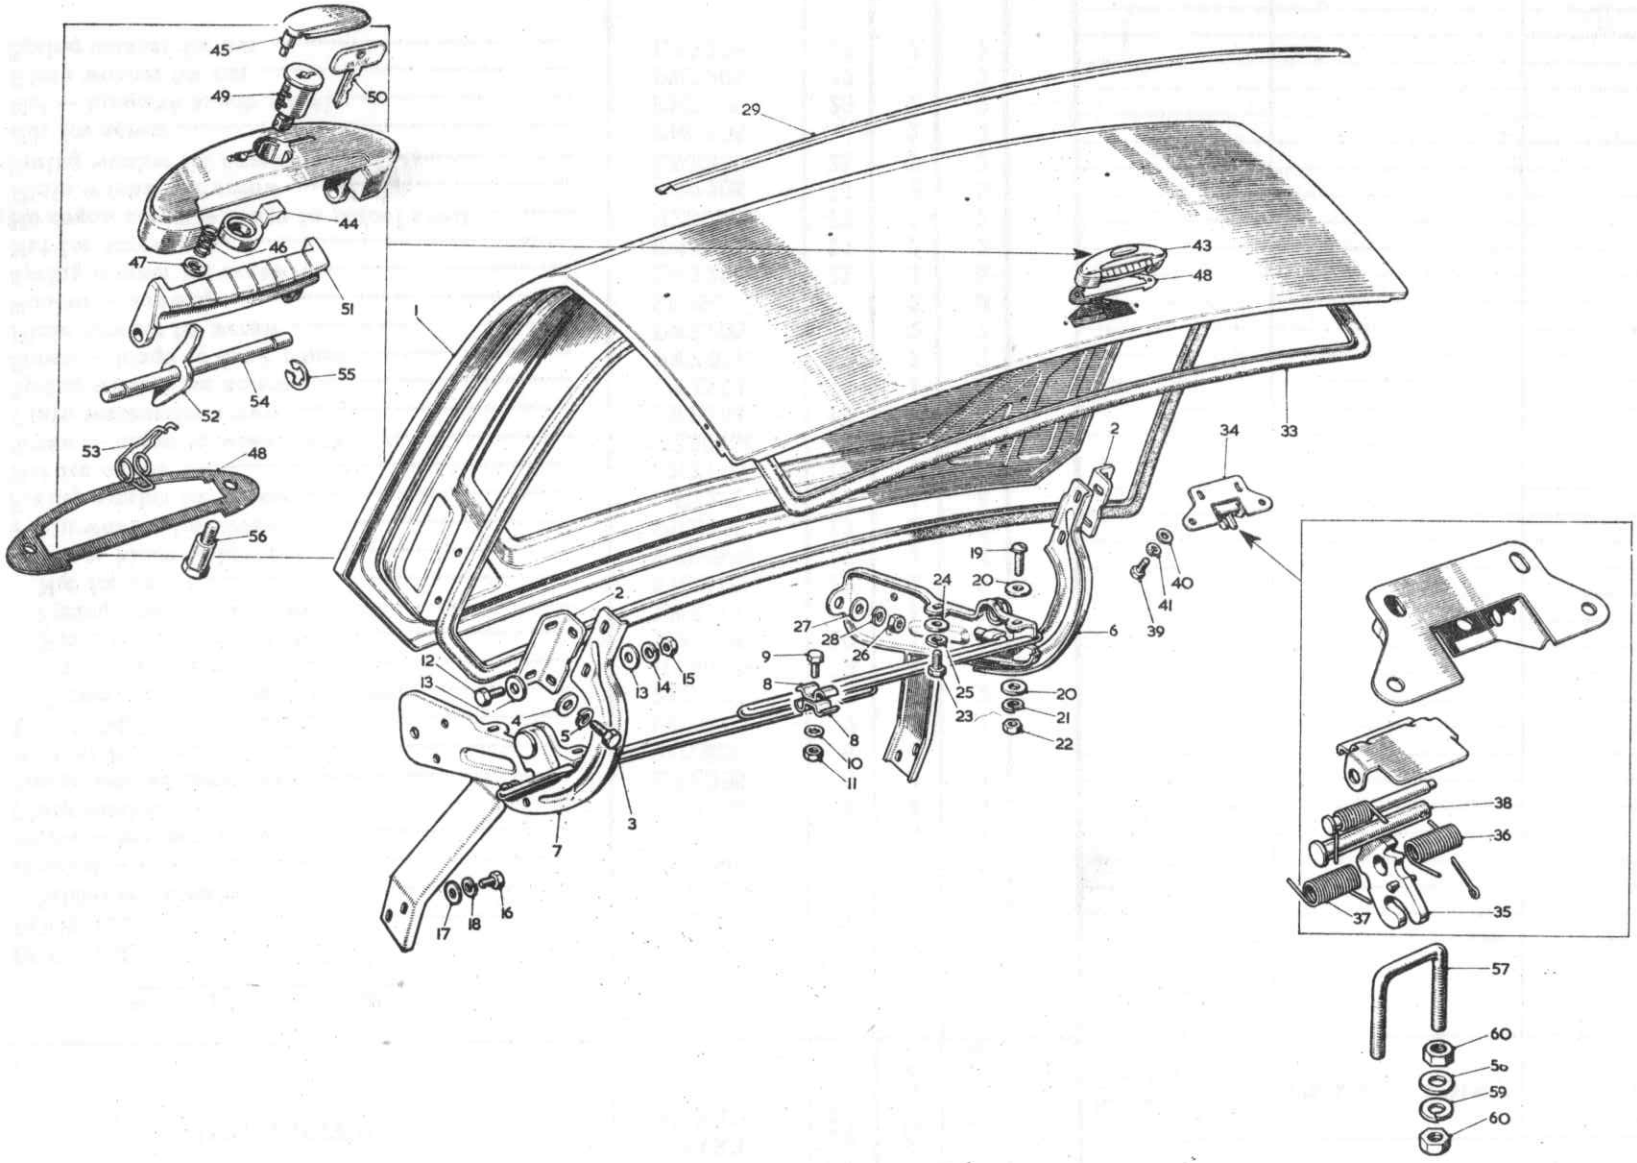


TO FACE PAGE R7, R8 and R9

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	BOOT LID & FITTINGS CONTINUED:								
1	MOULDING	HYB0143	29	1	1				
2	Clip – moulding	SP102		9	9				
3	SEALING RUBBER – BOOT	HYB0596	33	1	1				
4	LOCK ASSEMBLY – BOOT LID	24G2040	34	1	1				
5	Cam	47H9547	35	1	1				
6	Spring catch	47H9546	36	1	1				
7	Spring	27H9907	37	1	1				
8	Clevis pin	27H9896	38	1	1				
9	Screw – lock to lid	HZS0404	39	4	4				
10	Plain washer	PWZ104	40	4	4				
11	Spring washer	LWZ204	41	4	4				
12	LOCKING HANDLE ASSEMBLY	24G1278	43	1	1				
13	Locking cam	17H9698	44	1	1				
14	Weathershield	14G2421	45	1	1				
15	Spring	6K9878	46	1	1				
16	Washer	14G4718	47	1	1				
17	LOCKING BARREL & KEYS	24G1345	49	1	1				
18	Grip handle	37H9614	51	1	1				
19	Lever	37H9612	52	1	1				
20	Torsion spring	37H9615	53	1	1				
21	Pivot rod	37H9613	54	1	1				
22	Clip – pivot rod	37H9616	55	2	2				
23	Gasket – handle seating	HYH1984	48	1	1				
24	Bolt – handle to lid	14G3742	56	2	2				
25	Lock striker	14B6465	57	1	1				
26	Stop bracket	14G9731		1	1				
27	Washer – striker to body	PWZ204	58	4	4				
28	Spring washer	LWZ204	59	2	2				
29	Nut	FNZ104	60	4	4				

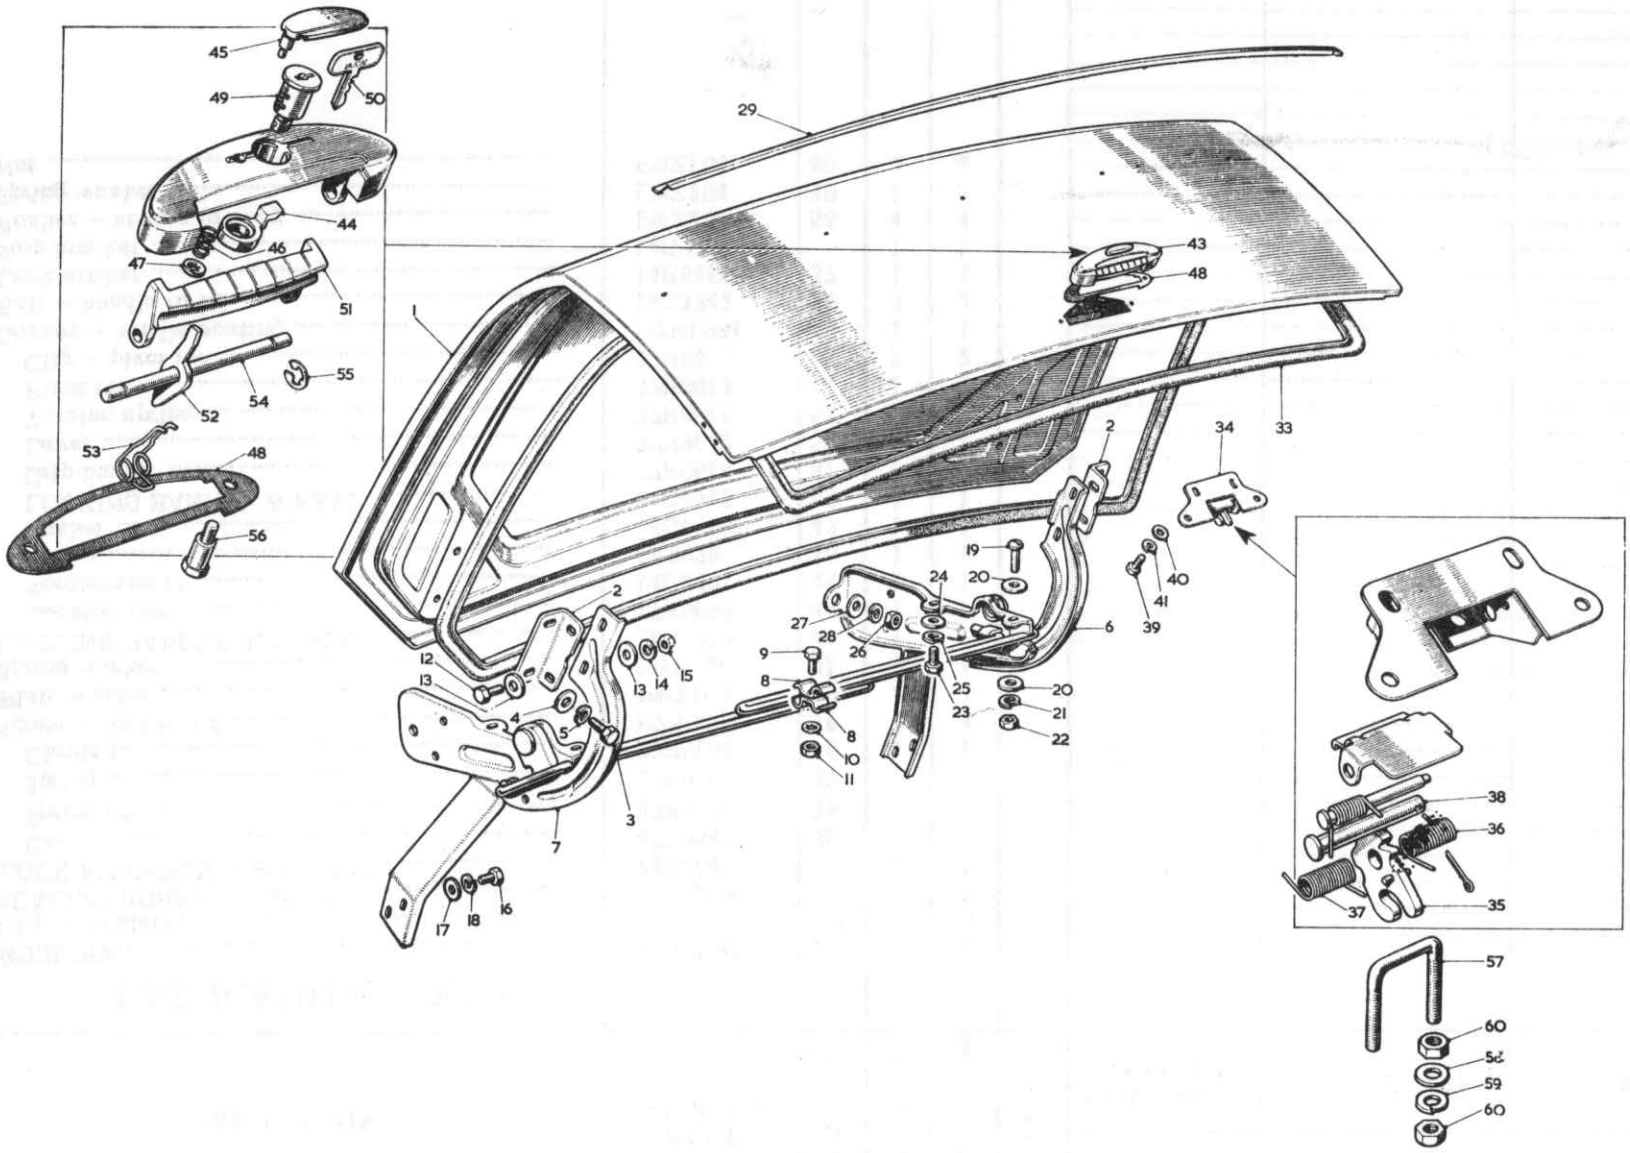

45
49
50
44
46
47
51
54
55
52
53
48
56
29
43
48
1
2
34
33
19
20
24
40
41
39
27
28
26
6
9
8
25
23
20
21
22
12
13
2
13
14
15
4
5
8
10
11
3
7
17
18
16
38
36
37
35
57
60
58
59
60

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	BOOT LID & FITTINGS CONTINUED:								
1	Screw, number plate to boot lid	PMZ0307		4	4				
2	Rawlnut, number plate to boot lid	51K3040		4	4				
3	NAMEPLATE – WOLSELEY 24/80	HYB0039		–	1				
4	NAMEPLATE – AUSTIN Boot lid	HYB0085		1	–				
5	NAMEPLATE – FREEWAY	HYB0084		1	–				
6	Sealing washer – nameplate	SP084		2	–				
7	Clip and sealer assembly	SP003		6	6				

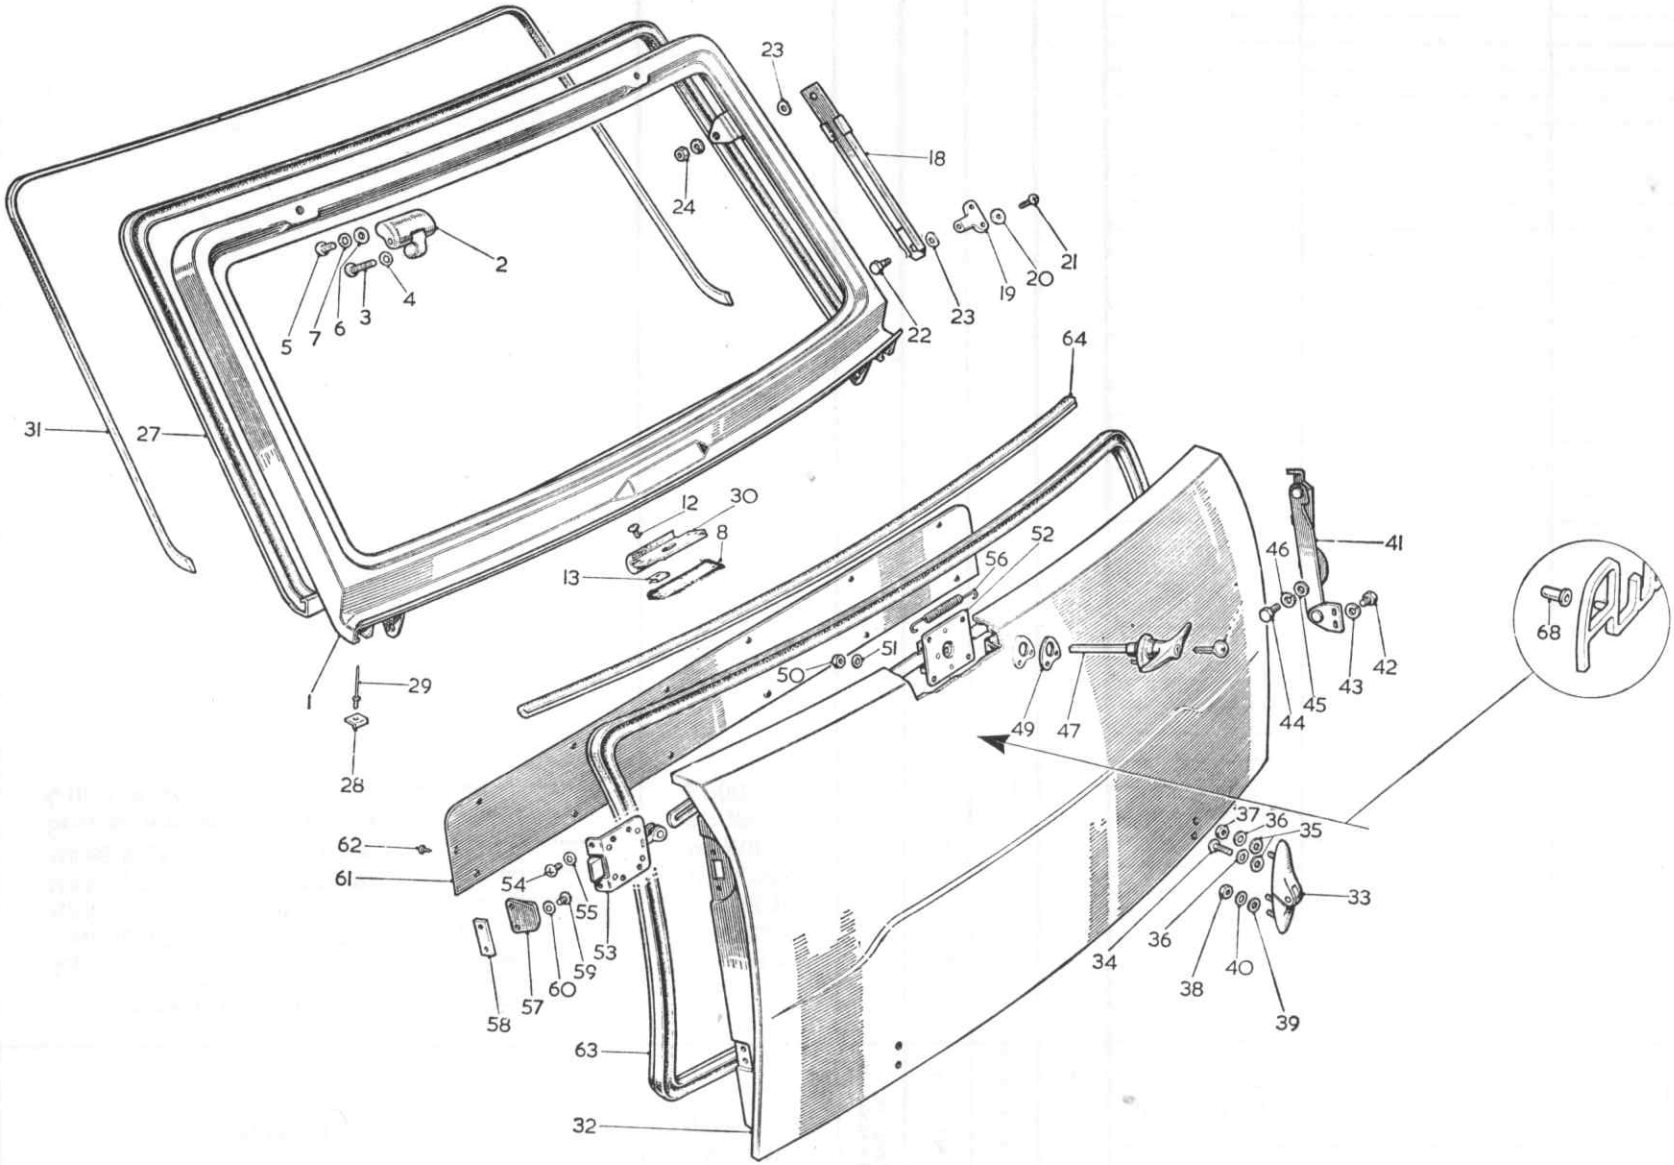


TO FACE PAGE P10 and P11

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	TAILGATE & FITTINGS								
1	TAILGATE – UPPER	HYB0341	1			1			
2	Hinge – upper tailgate – R.H.	BZB1526				1			
3	Hinge – upper tailgate – L.H.	BZB1527	2			1			
4	Screw – hinge to tailgate	PMZ0524	3			2			
5	Washer – shakeproof for screw	LWZ405	4			2			
6	Screw – hinge to body	PMZ0508	5			4			
7	Washer – plain for screw	PWZ105	6			4			
8	Washer – shakeproof for screw	LWZ405	7			4			
9	PROP ASSEMBLY – upper tailgate R.H.	HYH2268	18			1			
10	PROP ASSEMBLY – upper tailgate L.H.	HYH2269				1			
11	Washer – anti rattle – top	AWZ105	23			2			
12	Washer – plain for prop	PWZ204				2			
13	Washer – spring for prop	LWZ304				2			
14	Nut for prop – top	FNZ204	24			2			
15	PIVOT – prop assembly – lower	HYH2282	19			2			
16	Screw – pivot to body	PMZ0408	21			4			
17	Washer – spring for screw	LWZ204	20			4			
18	Screw – prop to pivot	SPO069	22			2			
19	Washer – anti rattle – lower	AWZ105	23			2			
20	RUBBER – sealing – upper tailgate	BDH3783	27			1			
21	Plate – retaining – sealing rubber	BDH4061	28			2			
22	Rivet – retaining plate	N.S.P.	29			2			
23	BUFFER – upper tailgate	BDH3791	30			1			
24	Cover plate for buffer	HYH2283	8			1			
25	Screw – plate and buffer to tailgate	BTZ804	12			4			
26	Spire nut for screw	PFS0308	13			4			
27	STRIP – rubber – sealing upper tailgate	BDH4146	31			1			
28	TAILGATE – LOWER	HYB0393	32			1			
29	Hinge – lower tailgate – R.H.	BZB1522	33			1			
30	Hinge – lower tailgate – L.H.	BZB1523				1			
31	Screw – hinge to tailgate	PMZ0508	34			2			
32	Washer– plain for screw and stud	PWZ105	35			4			
33	Washer – shakeproof for screw and stud	LWZ405	36			4			
34	Nut for stud	FNZ105	37			2			

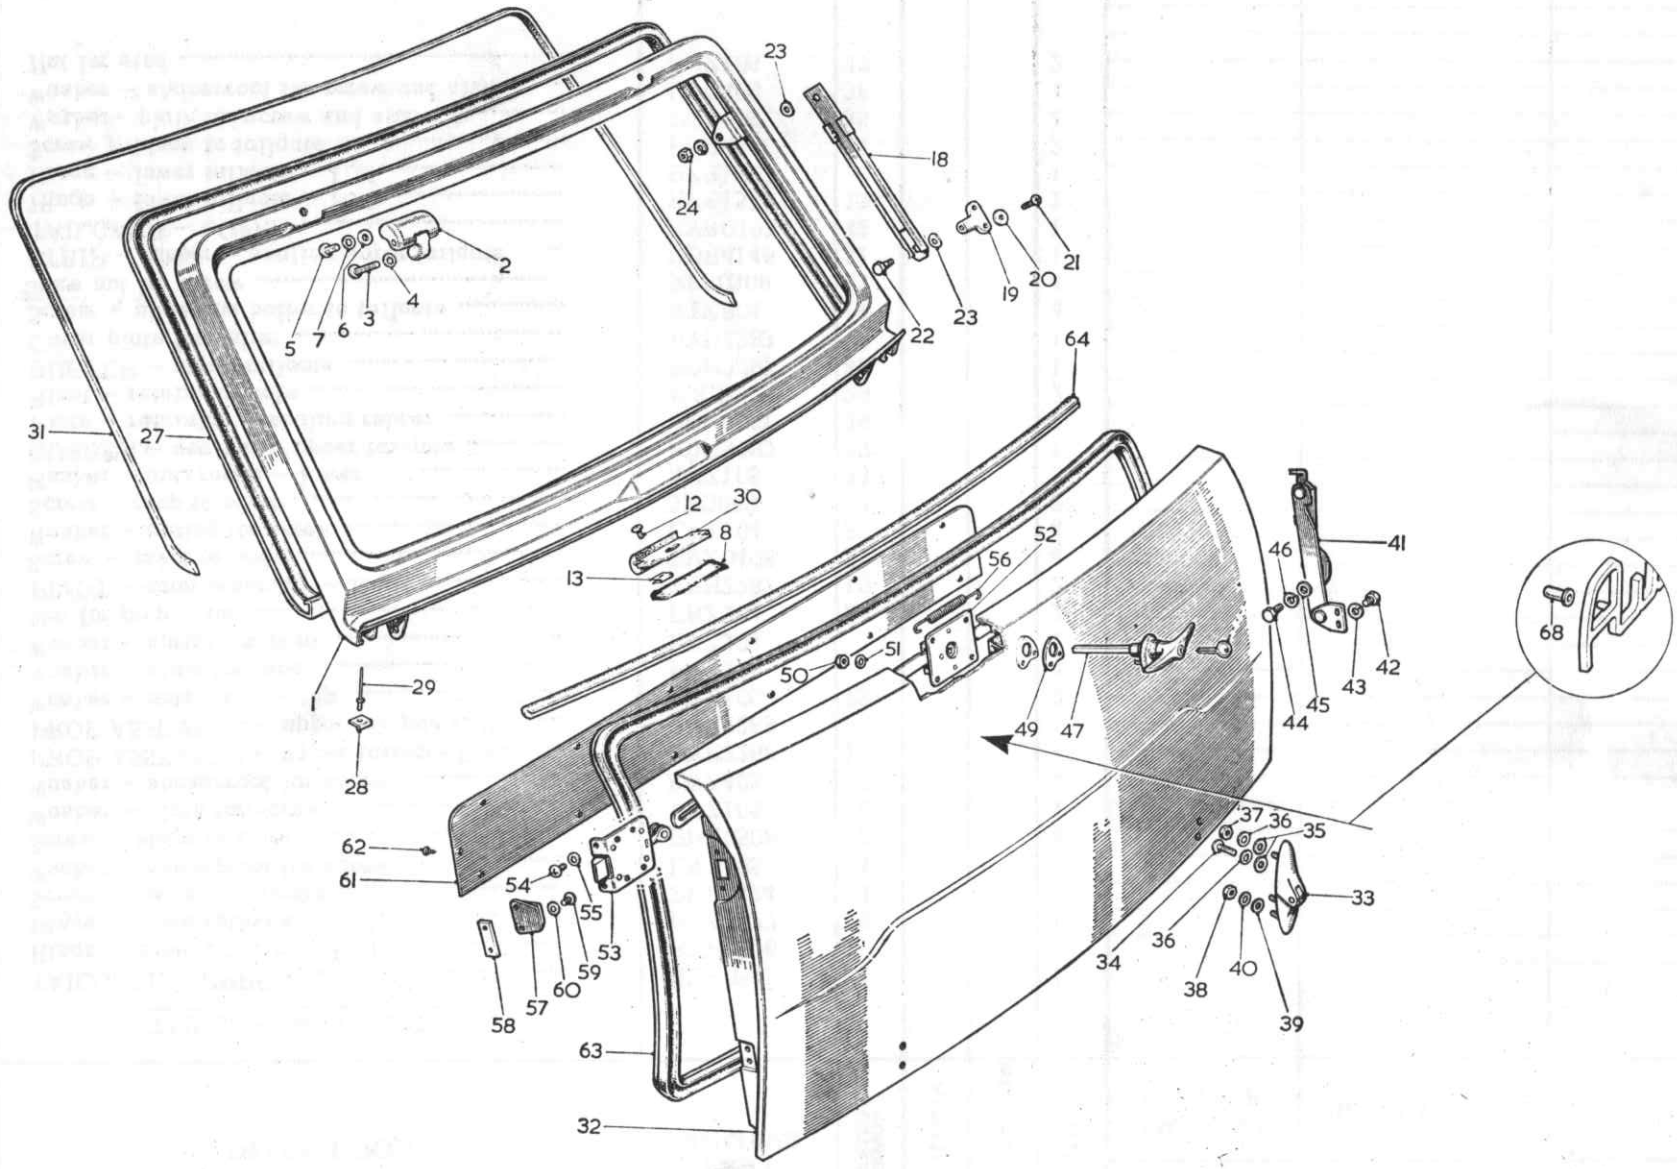


TO FACE PAGE F10 and R11

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	TAILGATE & FITTINGS CONTINUED:								
1	Nut – hinge to body	FNZ105	38			4			
2	Washer – plain for nut	PWZ105	39			4			
3	Washer – shakeproof for nut	LWZ405	40			4			
4	STAY – lower tailgate – R.H.	BZB1528	41			1			
5	STAY – lower tailgate – L.H.	BZB1529				1			
6	Screw – stay to tailgate	HZS0405	42			4			
7	Washer – spring for screw	LWZ204	43			4			
8	Screw – stay to body	HZS0405	44			4			
9	Washer – plain for screw	PWZ104	45			4			
10	Washer – spring for screw	LWZ204	46			4			
11	HANDLE ASSEMBLY – lower tailgate	BDH3759	47			1			
12	Washer – handle seating	ADA2782	49			1			
13	Nut – handle to tailgate	FNZ103	50			2			
14	Washer – shakeproof for nut	LWZ403	51			2			
15	PLATE WITH RODS – LOCK ASSEMBLY	BDH4029	52			1			
16	CATCH ASSEMBLY	BDH4028	53			2			
17	Screw – lock to tailgate	PMZ0306	54			12			
18	Washer – shakeproof for screw	LWZ403	55			12			
19	Nut for screw	FNZ103				4			
20	Spring – lock return	81297	56			1			
21	STRIKER – lock	BDH3761	57			2			
22	Plate – tapping – striker	BDH3787	58			2			
23	Screw – striker to body	PPZ0308	59			4			
24	Washer – shakeproof for screw	LWZ403	60			4			
25	Plate – cover – lower tailgate	BZA1553	61			1			
26	Screw – cover plate to tailgate	RTZ603	62			12			
27	Rubber – sealing – lower tailgate	BDH4471	63			1			
28	Rubber – sealing – lower tailgate flange (soft)	HYB0797	64			1			
29	STRIP – rubber sealing – lower tailgate – outer	HYB0796				1			
30	Weatherseal – lower tailgate aperture	HYB0743				1			
31	NAMEPLATE – AUSTIN	HYB0085				1			
32	NAMEPLATE – FREEWAY	HYB0618				1			
33	Sealing washer – nameplate	SP084				2			
34	Clip and sealer assembly	SP003	68			6			

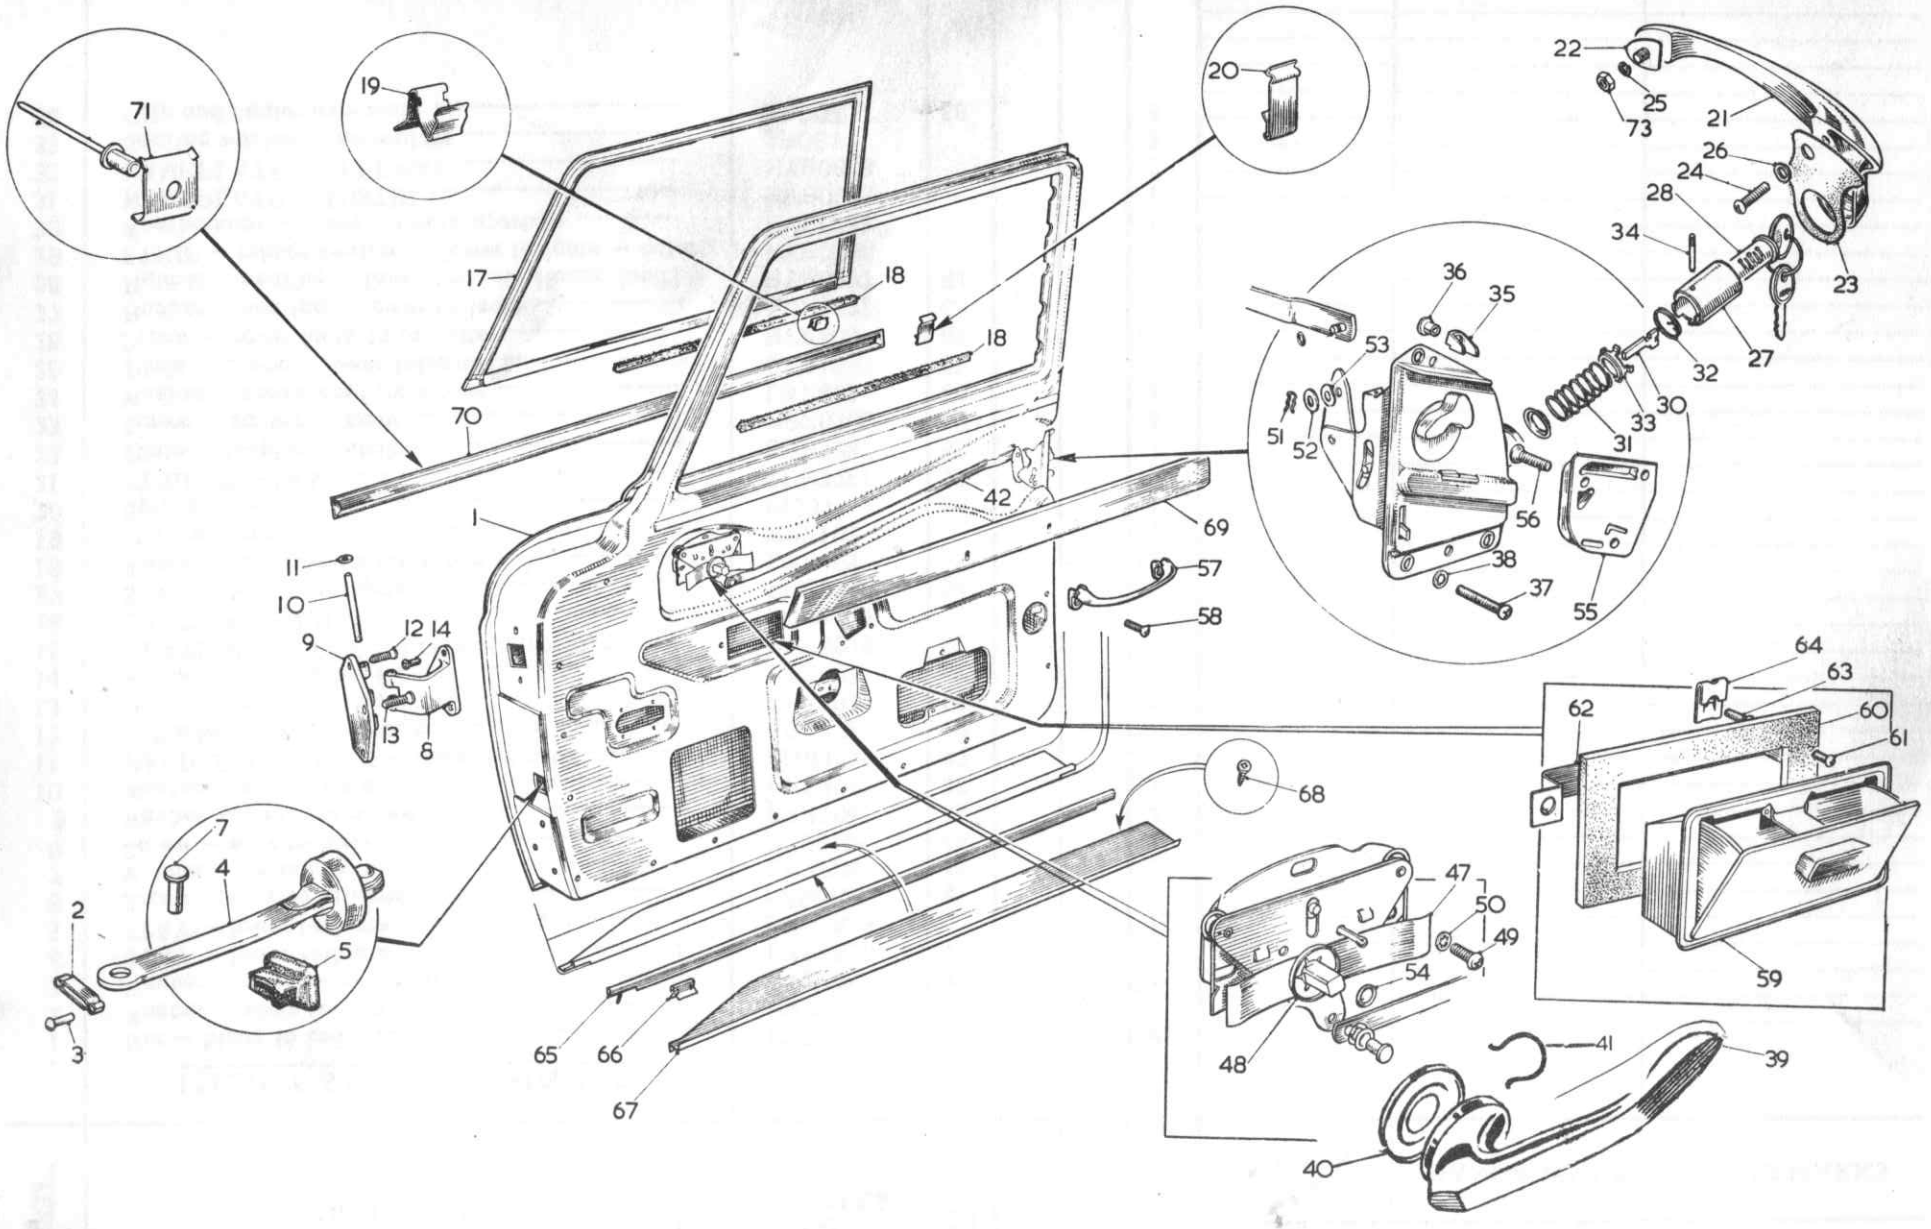

71
19
20
22
25
73
21
26
24
28
34
23
17
18
18
36
35
53
27
32
70
51
52
33
30
31
42
1
69
56
38
37
55
11
10
9
12
14
13
8
57
58
64
63
62
60
61
68
7
4
2
5
3
47
50
49
54
48
59
65
66
67
41
39
40

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	FRONT DOORS AND FITTINGS								
1	R/H FRONT DOOR	HYL2476	1	1	–	1			
2	R/H FRONT DOOR	HYL2478	1	–	1	–			
3	L/H FRONT DOOR	HYL2477		1	–	1			
4	L/H FRONT DOOR	HYL2479		–	1	–			
5	R/H door panel – outer	HYB0398		1	1	1			
6	L/H door panel – outer	HYB0399		1	1	1			
7	Spring guide – check arm	14G7529	2	2	2	2			
8	Rivet – spring to door	TRP0328	3	4	4	4			
9	Leaf – hinge – door front	24G858	8	4	4	4			
10	Leaf – hinge – "A" post	24G859	9	4	4	4			
11	Pin – hinge	24G860	10	4	4	4			
12	Washer – special	24G861	11	16	16	16			
13	Arm – door check	BZB616	4	2	2	2			
14	Grommet – check arm	14G5848	5	2	2	2			
15	Clevis pin – arm to bracket	CLZ0408	7	2	2	2			
16	Screw – 5/16" x 3/4" – hinge to body – alternative	53K166	12	8	8	8			
17	Screw – 5/16" x 3/4" – hinge to body – alternative	RPZ0512	12	8	8	8			
18	Screw – 3/8" x 3/4" – hinge to body – alternative	53K167	13	2	2	2			
19	Screw – 3/8" x 3/4" – hinge to body – alternative	RPZ0612	13	2	2	2			
20	Screw – hinge to door	53K166	14	12	12	12			
21	R/H OUTER FINISHER – TOP	14G9894	17	1	1	1			
22	L/H OUTER FINISHER – TOP	14G9895		1	1	1			
23	Weatherstrip – front door	24G486	18	4	4	4			
24	Clip – weatherstrip to finisher	24G565	19	6	6	6			
25	Clip – weatherstrip to door	24G491	20	8	8	8			
26	R/H DOOR HANDLE	ADB3750	21	1	1	1			
27	L/H DOOR HANDLE	ADB3751		1	1	1			
28	Front seating washer	ADB4844	22	2	2	2			
29	Rear seating washer – handle	ADB4843	23	2	2	2			
30	Screw – handle to door	PMZ0306	24	2	2	2			
31	Plain washer for screw	PWZ203	26	2	2	2			
32	Spring washer for nut	LWZ203	25	2	2	2			
33	Nut for stud	FNZ103	73	2	2	2			

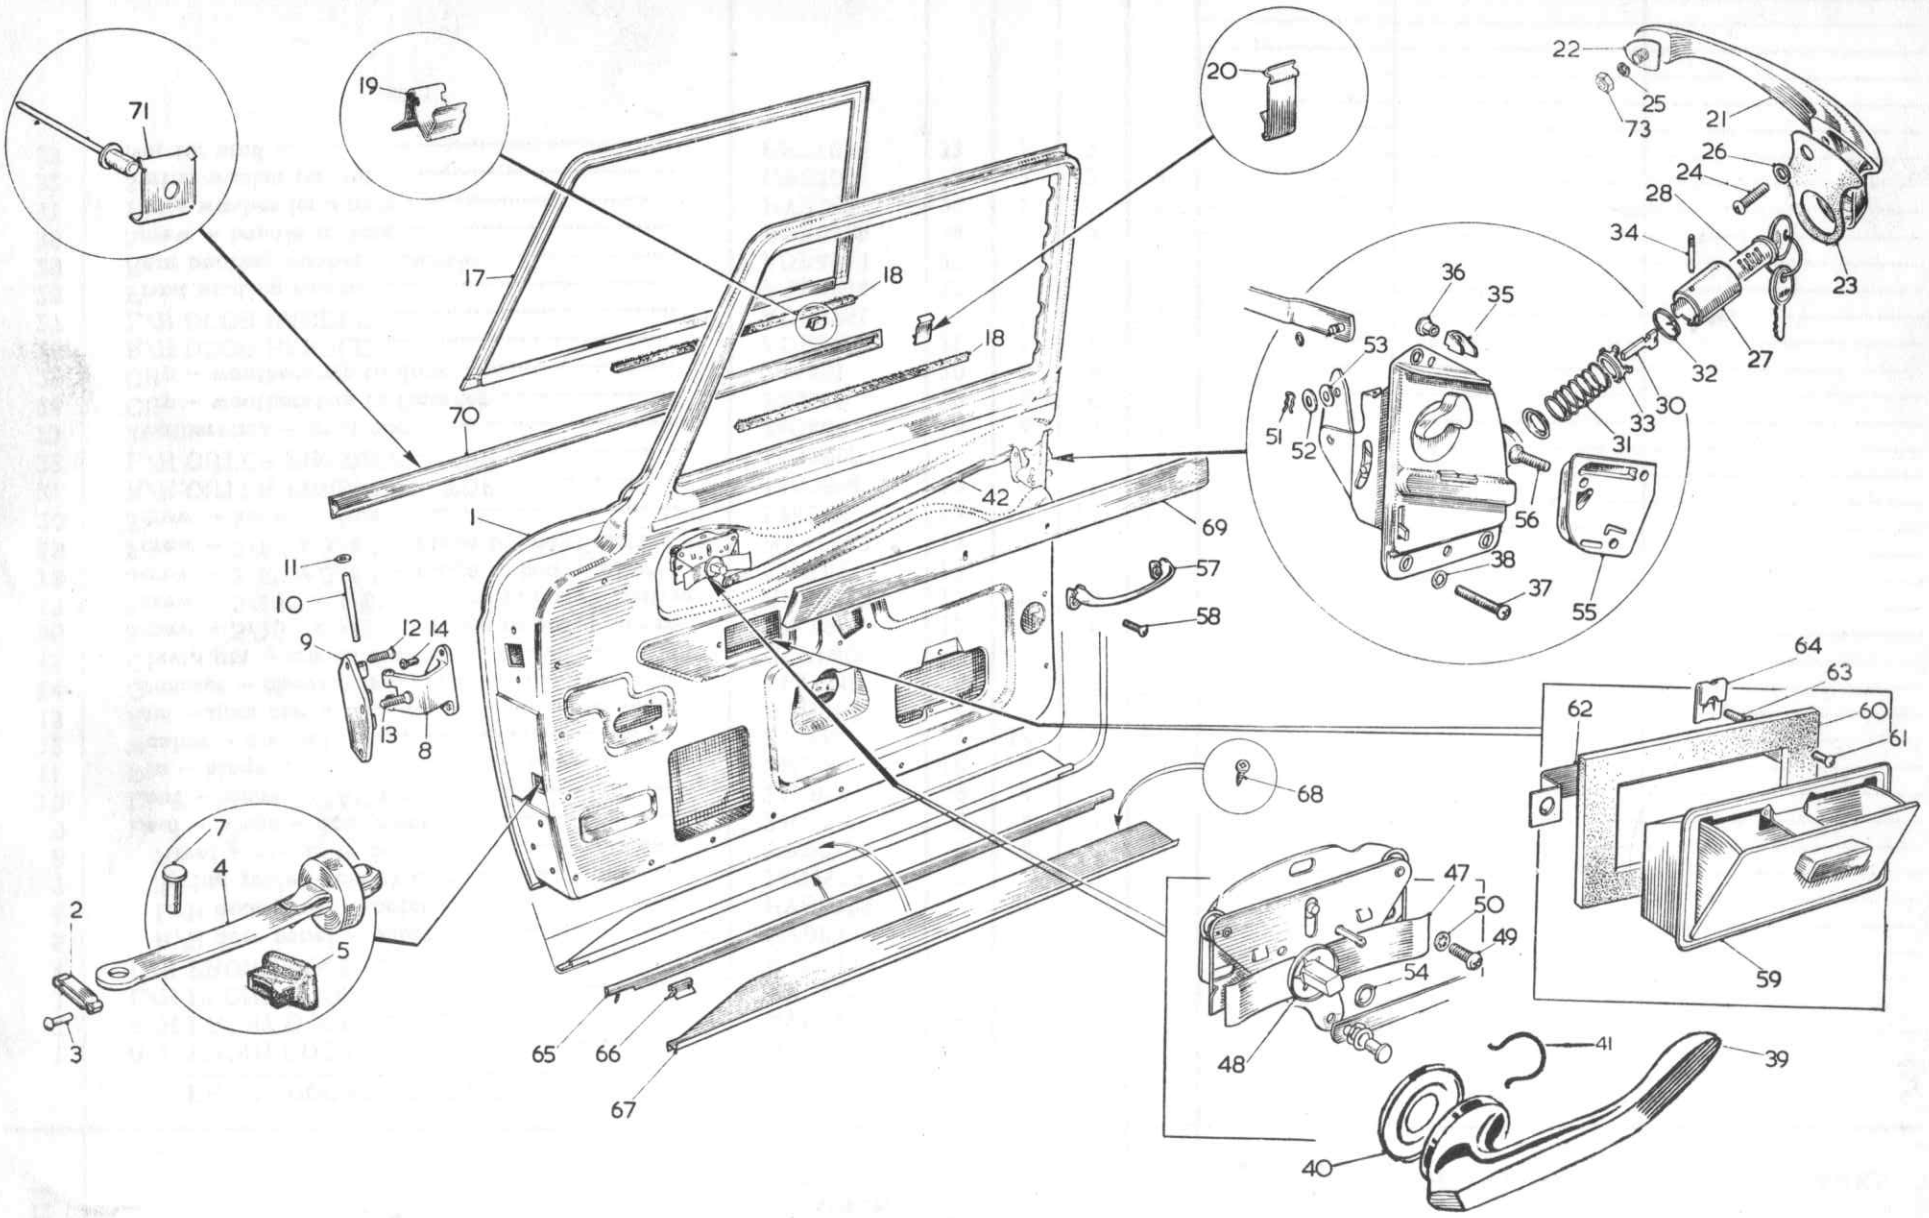


TO FACE PAGE B12, B13 and B14

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	FRONT DOORS & FITTINGS CONTINUED:								
1	LOCK ASSEMBLY – R.H.	HYH2686		1	1	1			
2	LOCK ASSEMBLY – L.H.	HYH2687		1	1	1			
3	Button – R.H.	37H9546	27	1	1	1			
4	Button – L.H.	37H9547		1	1	1			
5	BARREL – LOCK & KEYS – R.H.	37H9550	28	1	1	1			
6	BARREL – LOCK & KEYS – L.H.	37H9551		1	1	1			
7	Shaft	37H9553	30	2	2	2			
8	Spring – return – button	37H9543	31	2	2	2			
9	Spring – return – lock barrel	37H9554	32	2	2	2			
10	Cup – retaining	37H9552	33	2	2	2			
11	Pin – cross	37H9544	34	2	2	2			
12	Spring – tension – self cancelling	27H9906		2	2	2			
13	Wedge – reinforcing	37H9767	35	2	2	2			
14	Rivet for wedge	37H9768	36	2	2	2			
15	Screw – lock to door	PMZ0410	37	6	6	6			
16	Washer – shakeproof for screw	LWZ404	38	6	6	6			
17	HANDLE – REMOTE CONTROL	HYH2492	39	2	2	2			
18	Spring clip – handle retainer	HYH2218	41	2	2	2			
19	Base – handle	HYH2207	40	2	2	2			
20	Washer – anti rattle – escutcheon and handle	SPO24		2	2	2			
21	CONTROL ASSEMBLY – REMOTE – R.H.	HYB0130		1	1	1			
22	CONTROL ASSEMBLY – REMOTE – L.H.	HYB0131		1	1	1			
23	Link – connecting – RH.	HYB0124	42	1	1	1			
24	Link – connecting – L.H.	HYB0125		1	1	1			
25	Spring – trim	24G1690	47	2	2	2			
26	Washer – (starlock)	HYH0518	48	2	2	2			
27	Washer – plain	HYB0128		2	2	2			
28	Screw – remote control to door	PMZ0306	49	6	6	6			
29	Washer for screw (lock)	LWZ403	50	6	6	6			
30	Clip – control link to lock	13H320	51	2	2	2			
31	Washer for clip (plain)	PWZ104	52	2	2	2			
32	Washer for clip (anti rattle)	AWZ104	53	2	2	2			
33	Screw – remote control to inner door panel	PTZ803		4	4	4			
34	Ring – anti rattle – remote control spindle	14A6642	54	2	2	2			
35	STRIKER – door lock – R.H.	ADB6120	55	1	1	1			
36	STRIKER – Door lock – L.H.	ADB6121		1	1	1			
37	Screw – striker to centre pillar	CMZ0416	56	6	6	6			
38	Masking plate – striker	ADB6122		2	2	2			

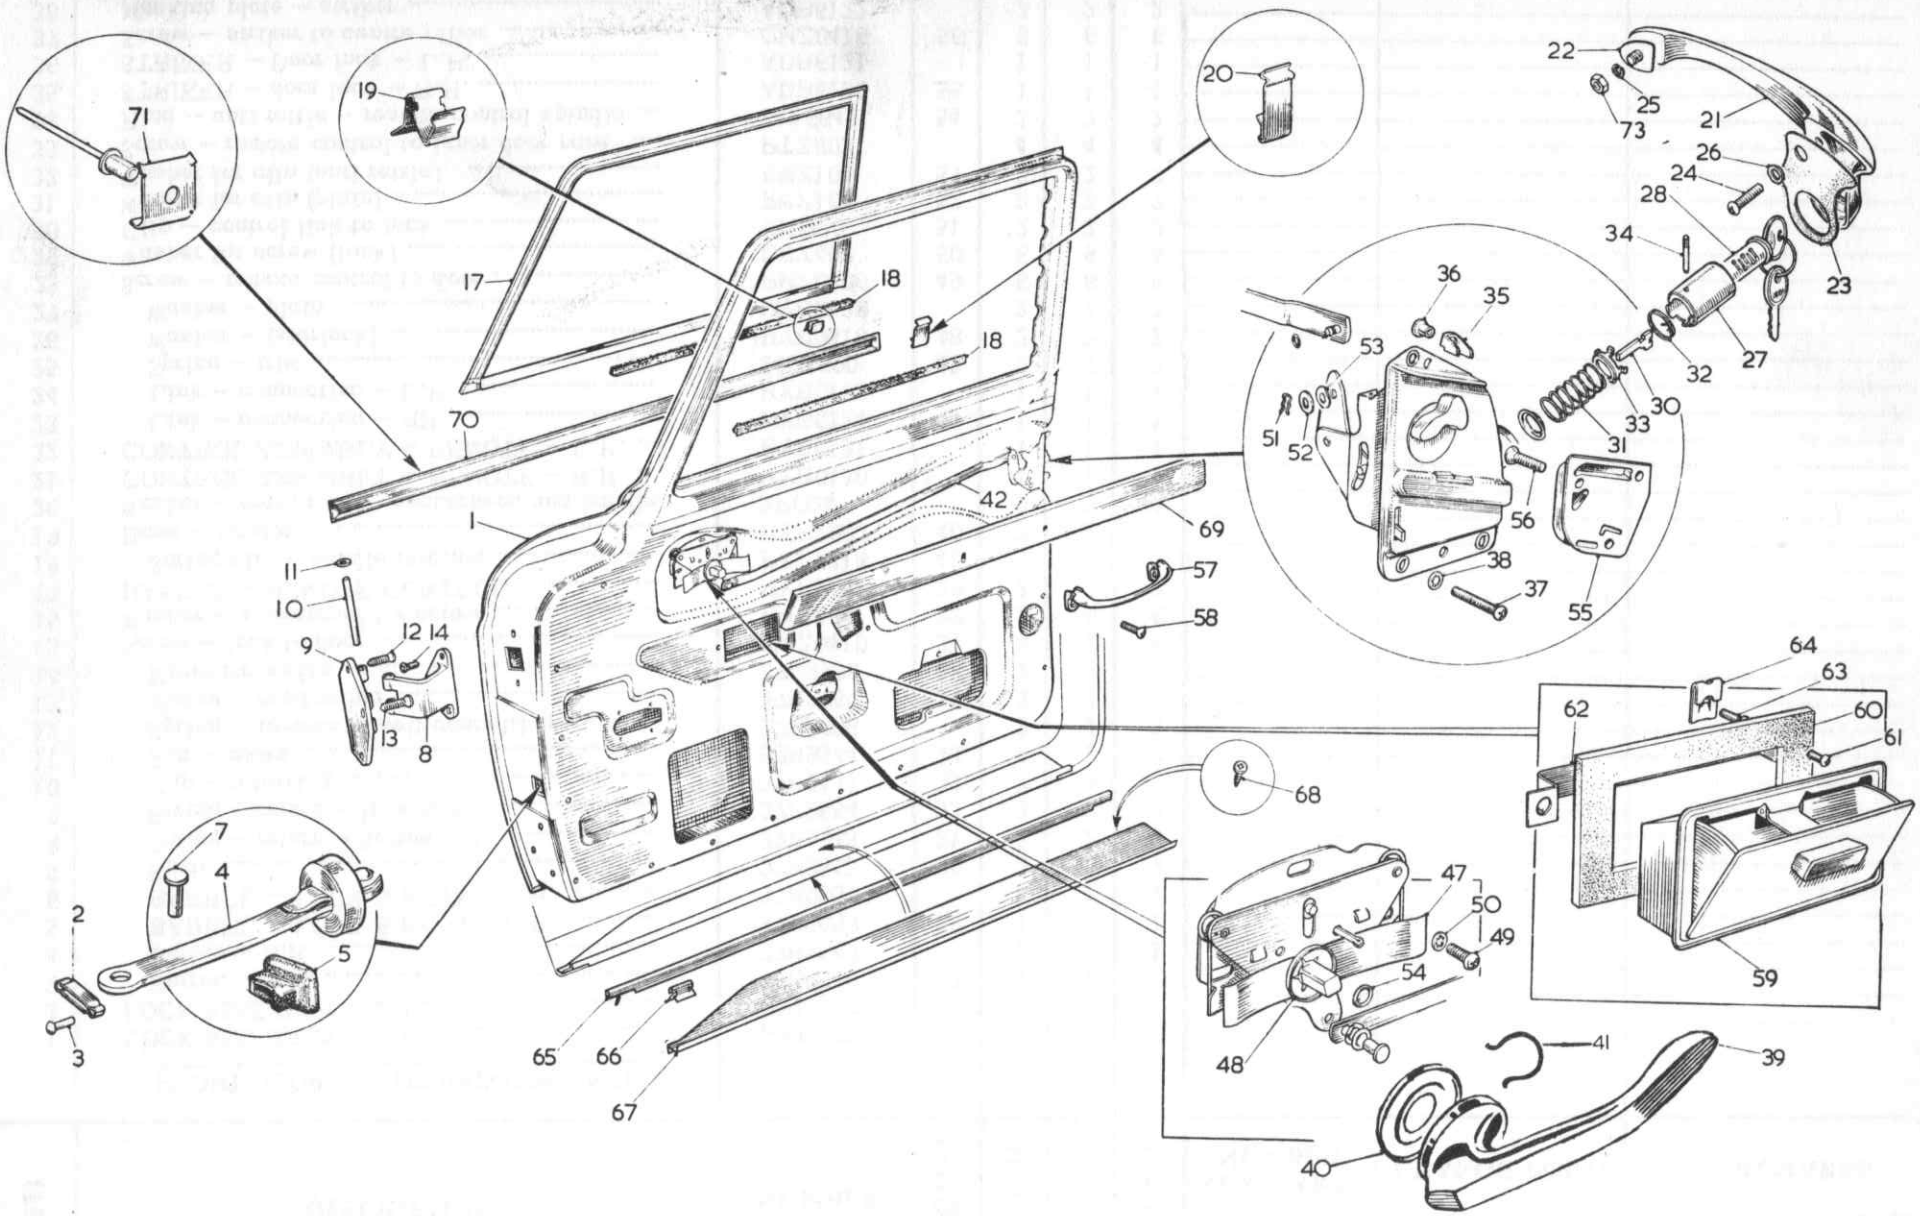

TO FACE PAGE R12, R13 and R14


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
	. . . . .			AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	FRONT DOORS & FITTINGS CONTINUED:								
1	ASHTRAY	HYH1546	59		2				
2	Knob	HYH0185			2				
3	Screw for knob	PTZ604			4				
4	Washer for screw (plain)	PWZ103			4				
5	Sealing ring – ashtray	BDH3560	60		2				
6	Screw – ashtray	PTZ605	61		4				
7	Strap – retaining – ashtray	BDH1450	62		2				
8	Screw – strap to door	PTZ1004	63		4				
9	Spire nut for screw	ACB5599	64		4				
10	Strip – kicking	24G1710	65	2	2	2			
11	Clip – retaining – kicking strip	24G1187	66	18	18	18			
12	PULL – DOOR	HYH0105	57	2	–	2			
13	PULL – DOOR	4B3479	57	–	2	–			
14	Screw – pull to door	RPZ0310	58	4	–	4			
15	Screw – pull to door	RPP0316	58	–	4	–			
16	FINISHER – SILL – FRONT – R.H.	24G1705	67	1	1	1			
17	FINISHER – SILL – FRONT – L.H.	24G1706		1	1	1			
18	Screw – finisher to sill	RTZ603	68	10	10	10			
19	CAPPING ASSEMBLY – FRONT DOOR – R.H.	HYH1514	69	–	1	–			
20	CAPPING ASSEMBLY – FRONT DOOR – L.H.	HYH1515		–	1	–			
21	Screw – capping to doors	RTZ608		–	4	–			
22	Cup washer for screw	SYW0048		–	4	–			
23	MOULDING – FRONT DOOR	HYB0098	70	2	2	2			
24	Clip – moulding to door	SP102	71	16	16	16			

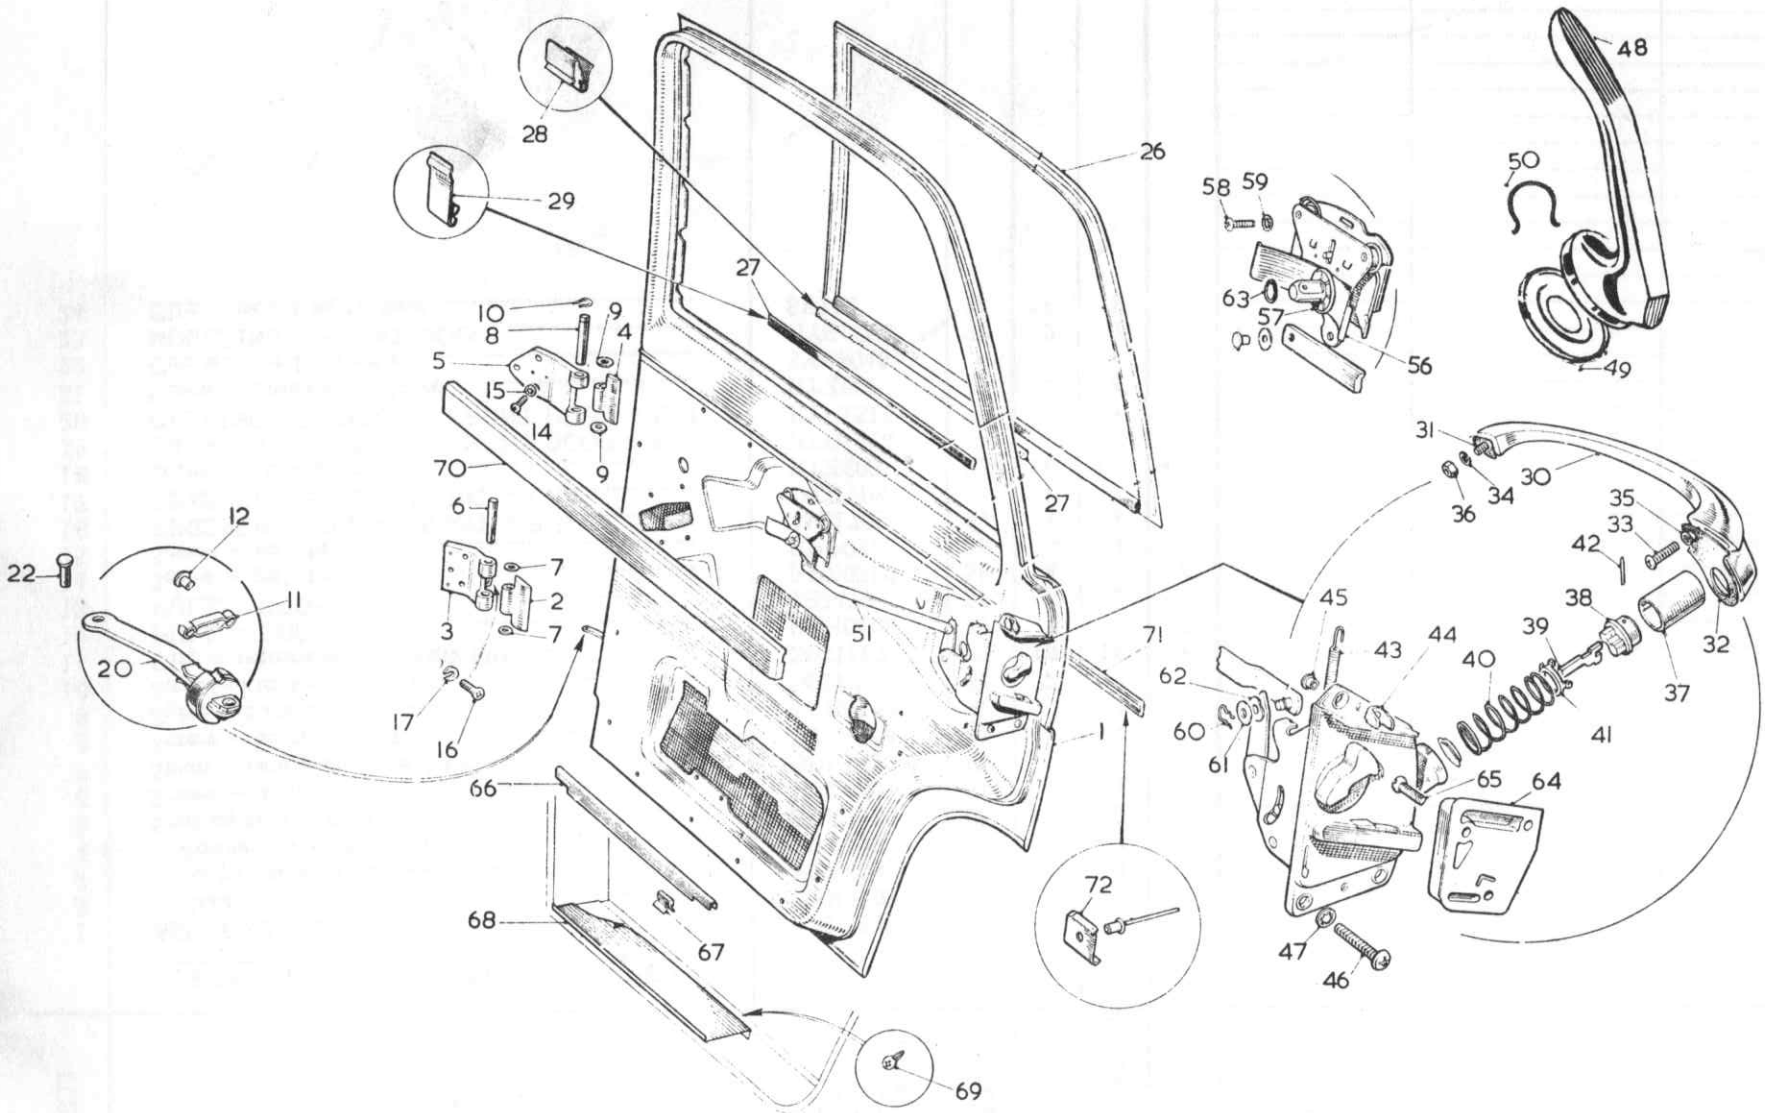

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R15, R16, and R 17


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	REAR DOORS & FITTINGS								
1	R/H REAR DOOR with hinges	HYB0216	1	1	–	–			
2	R/H REAR DOOR with hinges	HYB0416	1	–	1	–			
3	R/H REAR DOOR with hinges	HYB0214	–	–	–	1			
4	L/H REAR DOOR with hinges	HYB0217		1	–	–			
5	L/H REAR DOOR with hinges	HYB0417		–	1	–			
6	L/H REAR DOOR with hinges	HYB0215		–	–	1			
7	Door panel outer R.H.	HYB0412		1	1	1			
8	Door panel outer L.H.	HYB0413		1	1	1			
9	Lower hinge leaf on door	14G9644	2	2	2	2			
10	Lower hinge leaf – centre pillar (lower)	14G9643	3	2	2	2			
11	Upper hinge leaf on door	14G9648	4	2	2	2			
12	Upper hinge leaf – centre pillar	14G9649	5	2	2	2			
13	Hinge pin – lower	14G9645	6	2	2	2			
14	Hinge pin – upper	14G9650	8	2	2	2			
15	Fastener – hinge pin – upper	14G9800	10	2	2	2			
16	Washer – hinge pin	24G861	7,9	8	8	8			
17	Guide spring – check arm	14G7529	11	2	2	2			
18	Rivet – spring to door	TRP0328	12	4	4	4			
19	Screw – hinge to pillar	51K1018	14	12	12	12			
20	Washer	LWZ405	15	12	12	12			
21	Screw – hinge lug to pillar	CPZ0414	16	4	4	4			
22	Slotted washer	24G1700	17	4	4	4			
23	ARM – DOOR CHECK	14G3672	20	2	2	2			
24	Seal – check link	BDH945		4	4	4			
25	Clevis pin – arm to bracket	CLZ0408	22	2	2	2			
26	FINISHER – R/H TOP	14G9896	26	1	1	–			
27	FINISHER – R/H TOP	BDH3766		–	–	1			
28	FINISHER – L/H TOP	14G9897		1	1	–			
29	FINISHER – L/H TOP	BDH3767		–	–	1			
30	WEATHERSTRIP – finisher	24G490	27	4	4	2			
31	Clip – weatherstrip to finisher	24G565	28	6	6	6			
32	Clip – weatherstrip to door	24G491	29	8	8	8			
33	DOOR HANDLE R.H.	ADB3750		1	1	1			
34	DOOR HANDLE L.H.	ADB3751		1	1	1			
35	Front seating washer – handle	ADB4844	31	2	2	2			
36	Rear seating washer – handle	ADB4843	32	2	2	2			

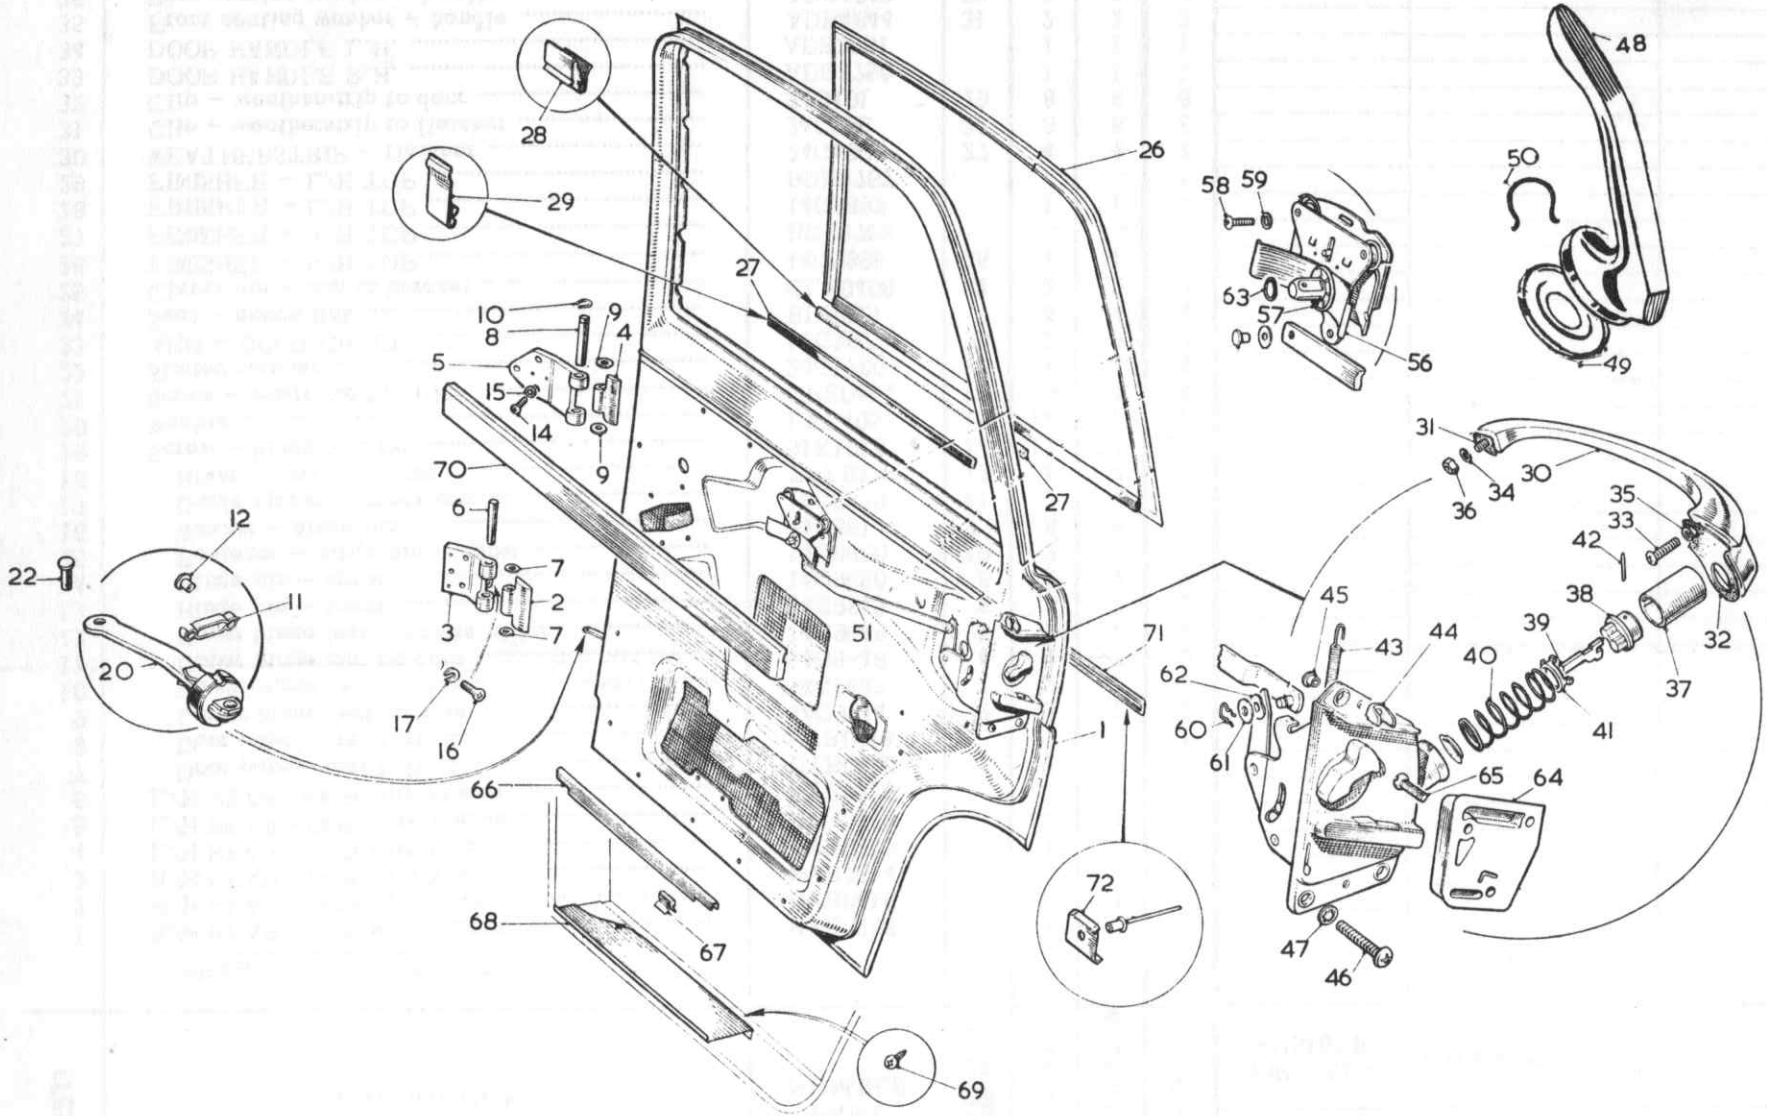

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R15, R16, and R 17


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	REAR DOORS & FITTINGS CONTINUED:								
1	Screw – handle to door	PMZ0306	33	2	2	2			
2	Washer for stud (spring)	LWZ203	34	2	2	2			
3	Washer for screw (plain)	PWZ203	35	2	2	2			
4	Nut for stud	FNZ103	36	2	2	2			
5	LOCK ASSEMBLY – R.H.	HYH2688		1	1	1			
6	LOCK ASSEMBLY – L.H.	HYH2689		1	1	1			
7	Button	37H9545	37	2	2	2			
8	Extension – button	37H9831	38	2	2	2			
9	Shaft	37H9553	39	2	2	2			
10	Spring – return	37H9543	40	2	2	2			
11	Cup – retaining	37H9552	41	2	2	2			
12	Pin – cross	37H9544	42	2	2	2			
13	Spring – return – intermediate	27H9905	43	2	2	2			
14	Wedge – reinforcing	37H9767	44	2	2	2			
15	Rivet for wedge	37H9768	45	2	2	2			
16	Screw – lock to door	PMZ0410	46	6	6	6			
17	Washer for screw (shakeproof)	LWZ404	47	6	6	6			
18	HANDLE – REMOTE CONTROL	HYH2492	48	2	2	2			
19	Spring clip – handle retainer	HYH2218	50	2	2	2			
20	Base – handle	HYH2207	49	2	2	2			
21	Washer – anti rattle – escutcheon and handle	SPO24		2	2	2			
22	CONTROL ASSEMBLY – REMOTE – R.H.	HYB0132		1	1	1			
23	CONTROL ASSEMBLY – REMOTE – LH.	HYB0133		1	1	1			
24	Link – connecting – R.H.	HYB0126	51	1	1	1			
25	Link – connecting – L.H.	HYB0127		1	1	1			
26	Spring – trim	24G1690	56	2	2	2			
27	Washer (Starlock)	HYH0518	57	2	2	2			
28	Washer (plain)	HYB0128		2	2	2			
29	Screw – remote control to door	PMZ0306	58	6	6	6			
30	Washer for screw (shakeproof)	LWZ403	59	6	6	6			
31	Clip – link to lock	13H320	60	2	2	2			
32	Washer for clip (plain)	PWZ104	61	2	2	2			
33	Washer for clip (anti rattle)	AWZ104	62	2	2	2			
34	Screw – remote control to inner door panel	PTZ803		4	4	4			
35	Ring – anti rattle – remote control spindle	14A6642	63	2	2	2			

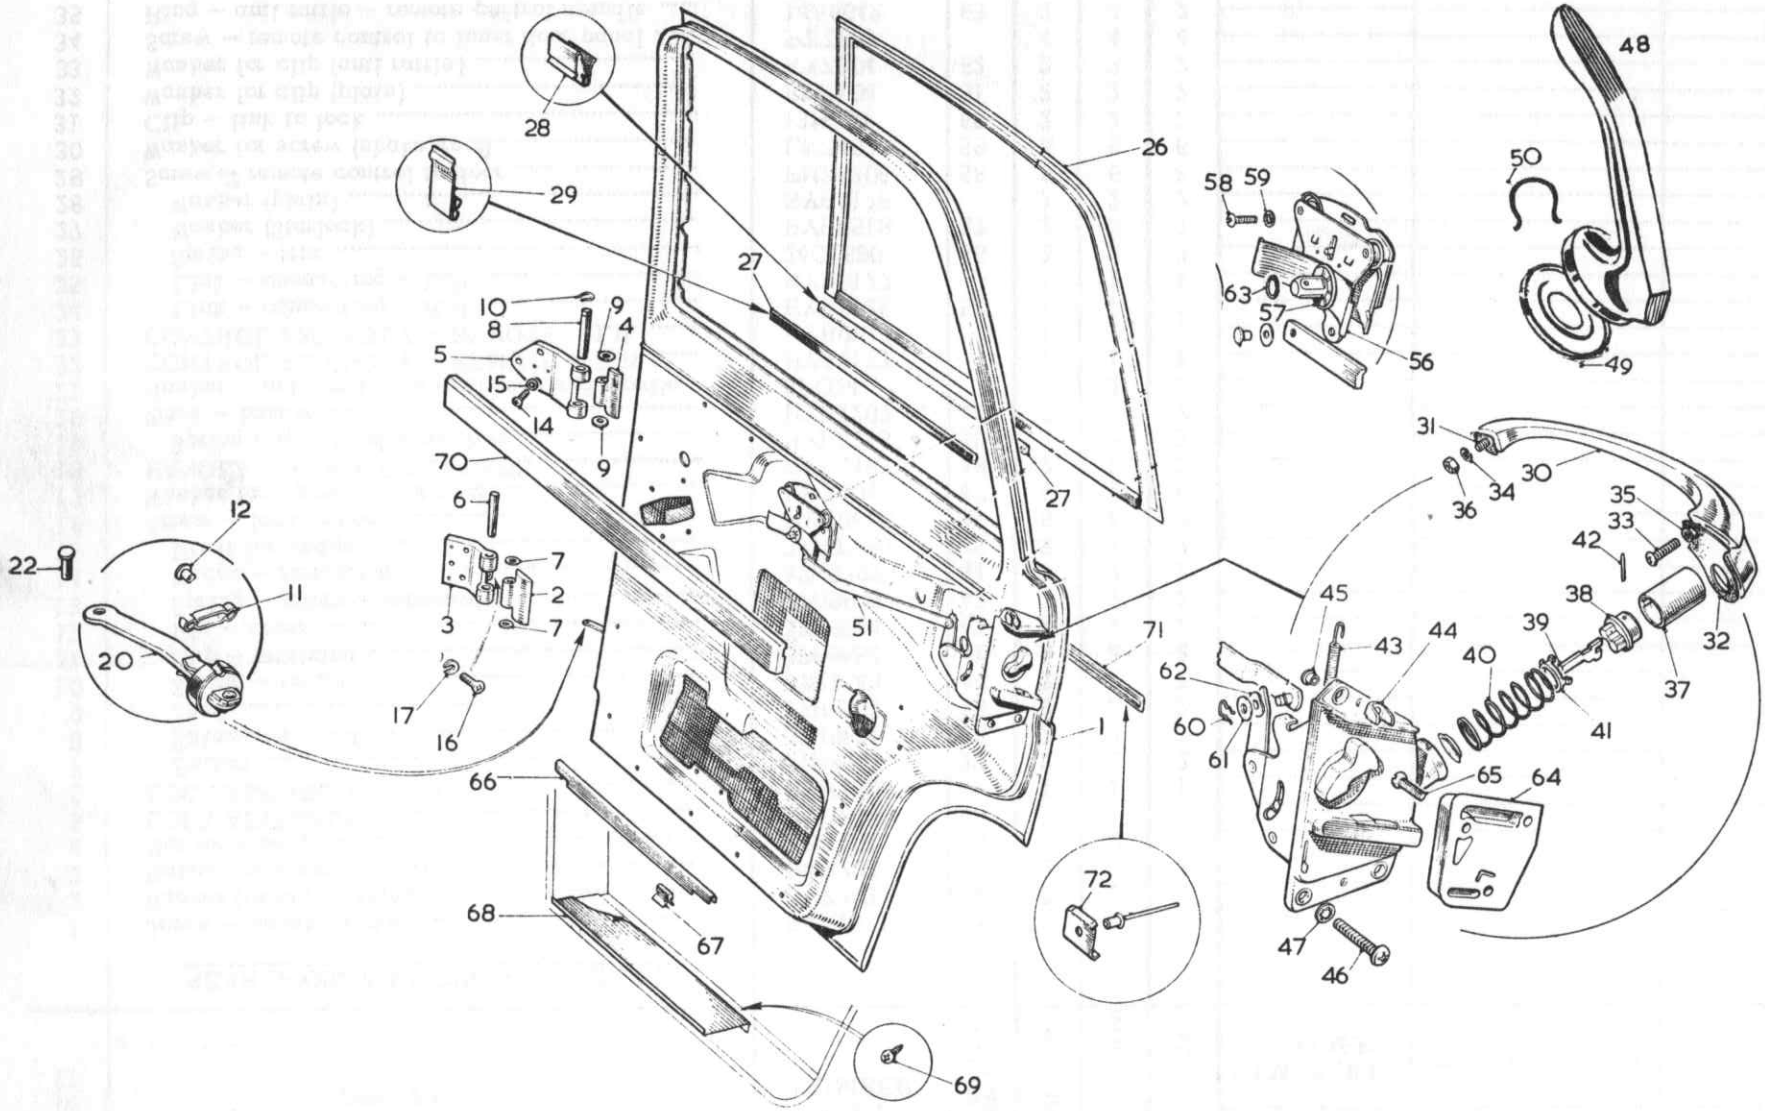

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R15, R16, and R 17


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	REAR DOORS & FITTINGS CONTINUED:								
1	STRIKER – door lock – R.H.	ADB6120	64	1	1	1			
2	STRIKER – door lock – L.H.	ADB6121		1	1	1			
3	Masking plate – striker	ADB6122		2	2	2			
4	Screw – striker to 'D' post	CMZ0416	65	6	6	6			
5	Strip – kicking	24G1709	66	2	2	2			
6	Clip – retaining – kicking strip	24G1187	67	8	8	8			
7	FINISHER – SILL – REAR – R.H.	24G1707	68	1	1	1			
8	FINISHER – SILL – REAR – L.H.	24B1708		1	1	1			
9	Screw – finisher to sill	RTZ603	69	6	6	6			
10	CAPPING ASSEMBLY – REAR DOOR	HYH1513	70	–	2	–			
11	Screw – capping to doors	RTZ608		–	6	–			
12	Cup washer for screw	SYW0048		–	6	–			
13	MOULDING – REAR DOOR	HYB0099	71	2	2	2			
14	Clip – moulding to door	SP102	72	16	16	16			

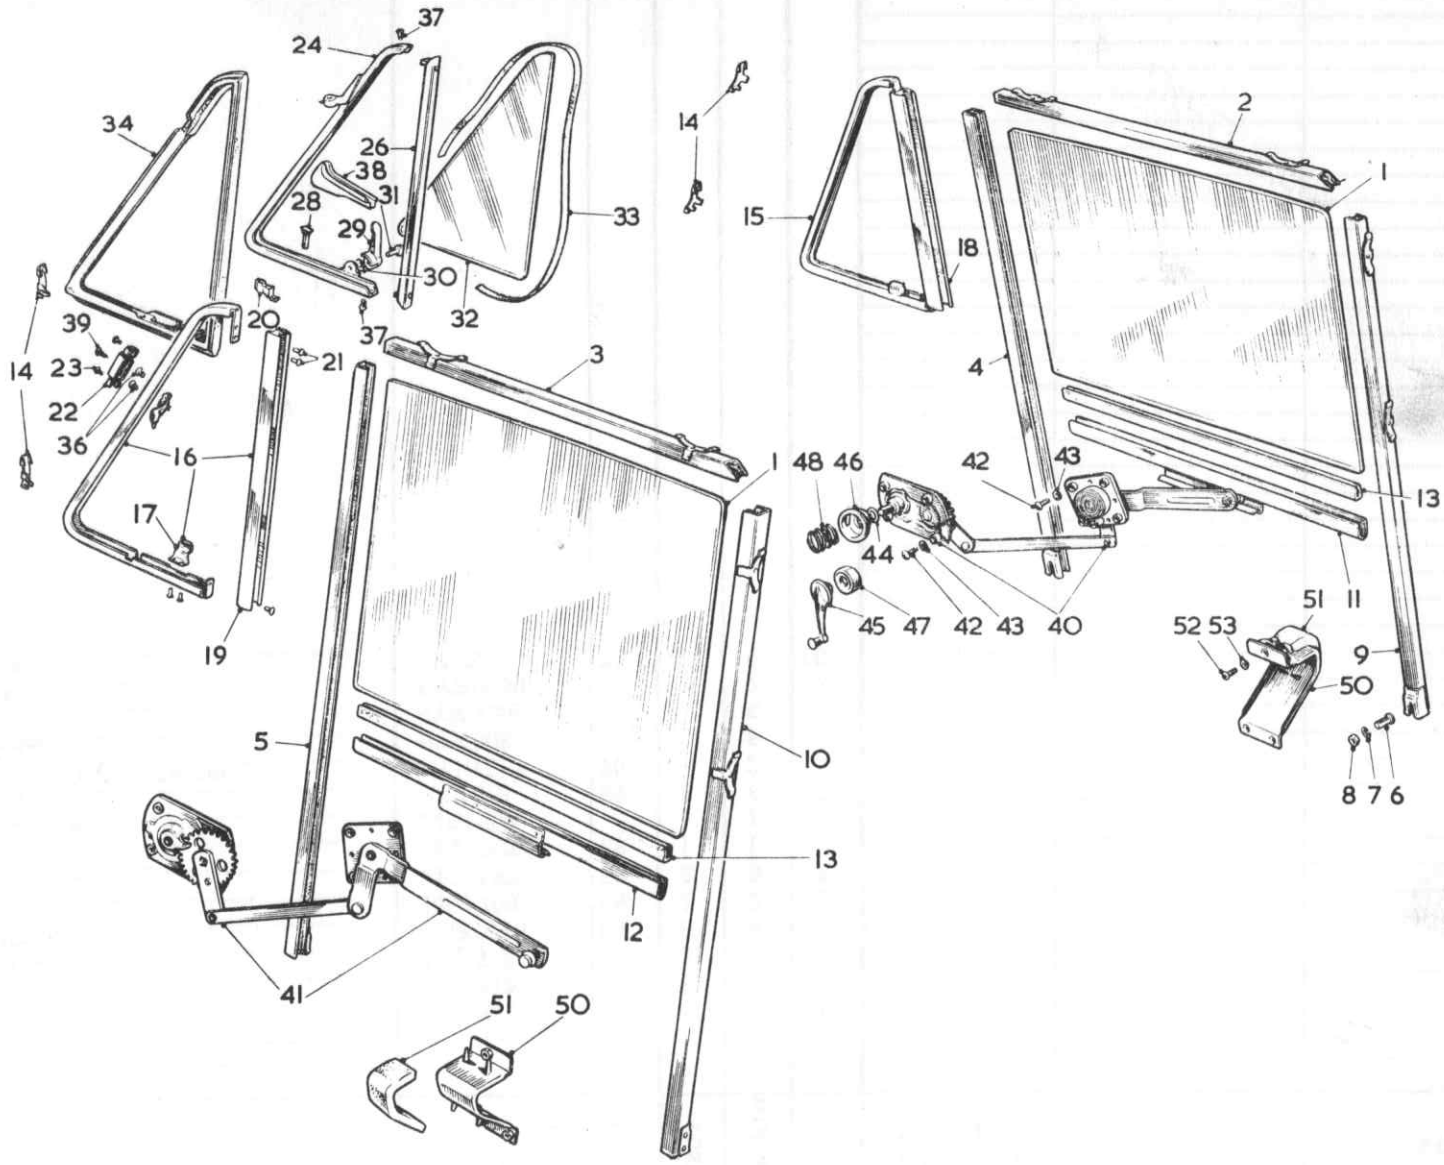

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R 18 and R 19


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	WINDOWS & WINDOW MECHANISM								
1	GLASS – FRONT DOORS	24G473	1	2	2	2			
2	Channel assembly – top R/H	24G451	2	1	1	1			
3	Channel assembly – top L/H	24G452	3	1	1	1			
4	Channel assembly – front R/H	14G9898	4	1	1	1			
5	Channel assembly – front L/H	14G9899	5	1	1	1			
6	Bolt – channel to door	6K9819	6	4	4	4			
7	Spring washer	LWZ204	7	4	4	4			
8	Nut	FNZ104	8	4	4	4			
9	Channel assembly – R/H – rear	24G498	9	1	1	1			
10	Channel assembly – L/H – rear	24G499	10	1	1	1			
11	Channel assembly – bottom – R/H	24G453	11	1	1	1			
12	Channel assembly – bottom – L/H	24G454	12	1	1	1			
13	Glazing rubber	24G502	13	2	2	2			
14	Spring clip – glass channel to door	24G553	14	4	4	4			
15	VENTILATOR ASSY. – FRONT R/H DOOR	ARH137		1	1	1			
16	VENTILATOR ASSY. – FRONT L/H DOOR	ARH138		1	1	1			
17	FRAME ASSY. – OUTER R/H	ARH1525	15	1	1	1			
18	FRAME ASSY. – OUTER L/H	ARH1526	16	1	1	1			
19	Plate – handle locking	ARH1375	17	2	2	2			
20	Glass run channel R/H	ARH1521	18	1	1	1			
21	Glass run channel L/H	ARH1522	19	1	1	1			
22	Clamp – lower pivot	ARH1539	20	2	2	2			
23	Rivet	ARO9399	21	12	12	12			
24	Bracket – outer frame	ARH1473	22	2	2	2			
25	Screw – bracket to frame	ARA1114	23	4	4	4			
26	INNER CONTOURED FRAME – R/H	ARH1636		1	1	1			
27	INNER CONTOURED FRAME – L/H	ARH1637	24	1	1	1			
28	Rivet – bracket to frame	ARO9566		8	8	8			
29	INNER VERTICAL FRAME	ARH1465	26	2	2	2			
30	Bracket – upper pivot – assembly R/H	ARH1629		1	1	1			
31	Bracket – upper pivot – assembly L/H	ARH1630	27	1	1	1			
32	Lower pivot	ARH1553	28	2	2	2			
33	Handle – catch – R/H	ARH1376		1	1	1			
34	Handle – catch – L/H	ARH1377	29	1	1	1			
35	Anti-rattle washer	ARH1711	30	2	2	2			
36	Pin	ARH1710	31	2	2	2			

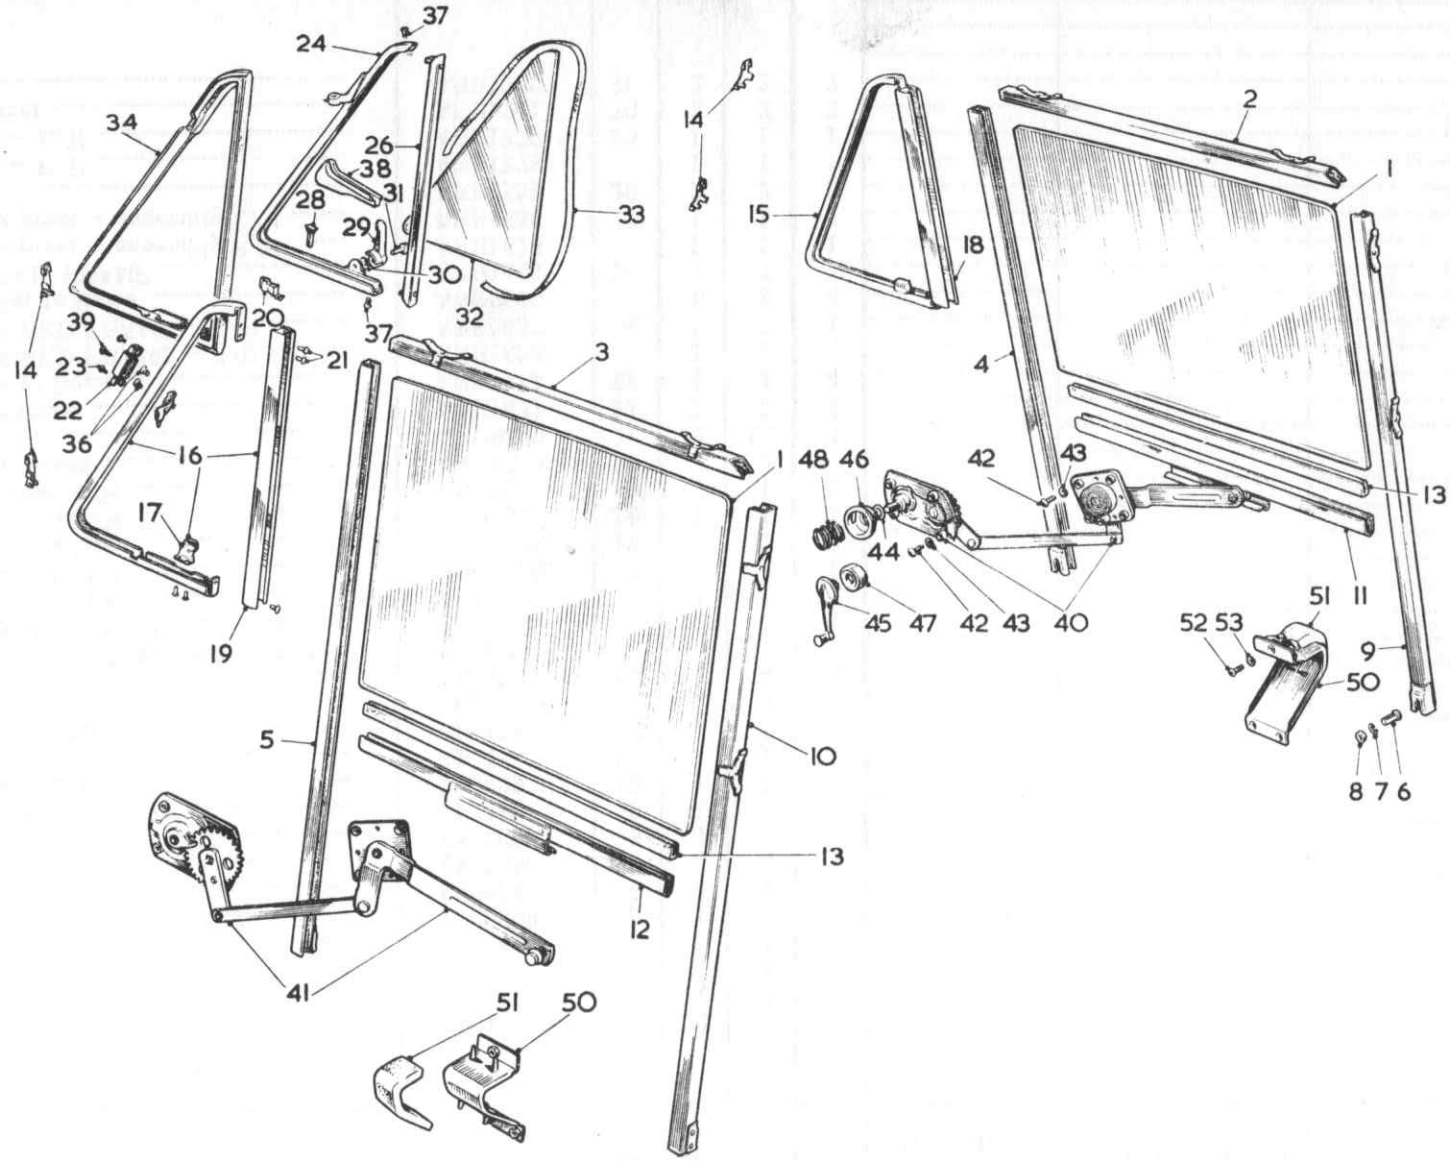

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R 18 and R 19


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	WINDOWS & WINDOW MECHANISM CONTD.:								
1	GLASS – VENTILATOR ASSEMBLY	ARH1303	32	2	2	2			
2	Glazing rubber	27H9919	33	A/R	A/R	A/R			
3	R/H sealing rubber	ARH1517		1	1	1			
4	L/H sealing rubber	ARH1518	34	1	1	1			
5	Screw – outer pivot bracket	ARK984	36	4	4	4			
6	Screw – vertical to contour frame	ARA1122	37	4	4	4			
7	R/H drain channel	ARH1488		1	1	1			
8	L/H drain channel	ARH1489	38	1	1	1			
9	Screw – ventilator to front door	CTZ0604	39	2	2	2			
10	WINDOW REGULATOR – FRONT R/H	HYB0186	40	1	1	1			
11	WINDOW REGULATOR – FRONT L/H	HYB0187	41	1	1	1			
12	Screw – regulator to door	PMZ0406	42	16	16	16			
13	Shakeproof washer	LWZ404	43	16	16	16			
14	Ring – anti-rattle – regulator spindle	14A6642	44	2	2	2			
15	HANDLE – WINDOW REGULATOR	HYH2211	45	2	2	2			
16	Spring clip – handle retainer	HYH2218		2	2	2			
17	Escutcheon	HYH2573	46	2	2	2			
18	Spacer	HYH2212	47	2	2	2			
19	Spring	14G6506	48	2	2	2			
20	Rubber washer	SP101		2	2	2			
21	Bracket – glass stop	24G720	50	2	2	2			
22	Rubber pad – glass stop	24G541	51	2	2	2			
23	Screw – bracket to door	PMZ0305	52	6	6	6			
24	Shakeproof washer	LWZ403	53	6	6	6			

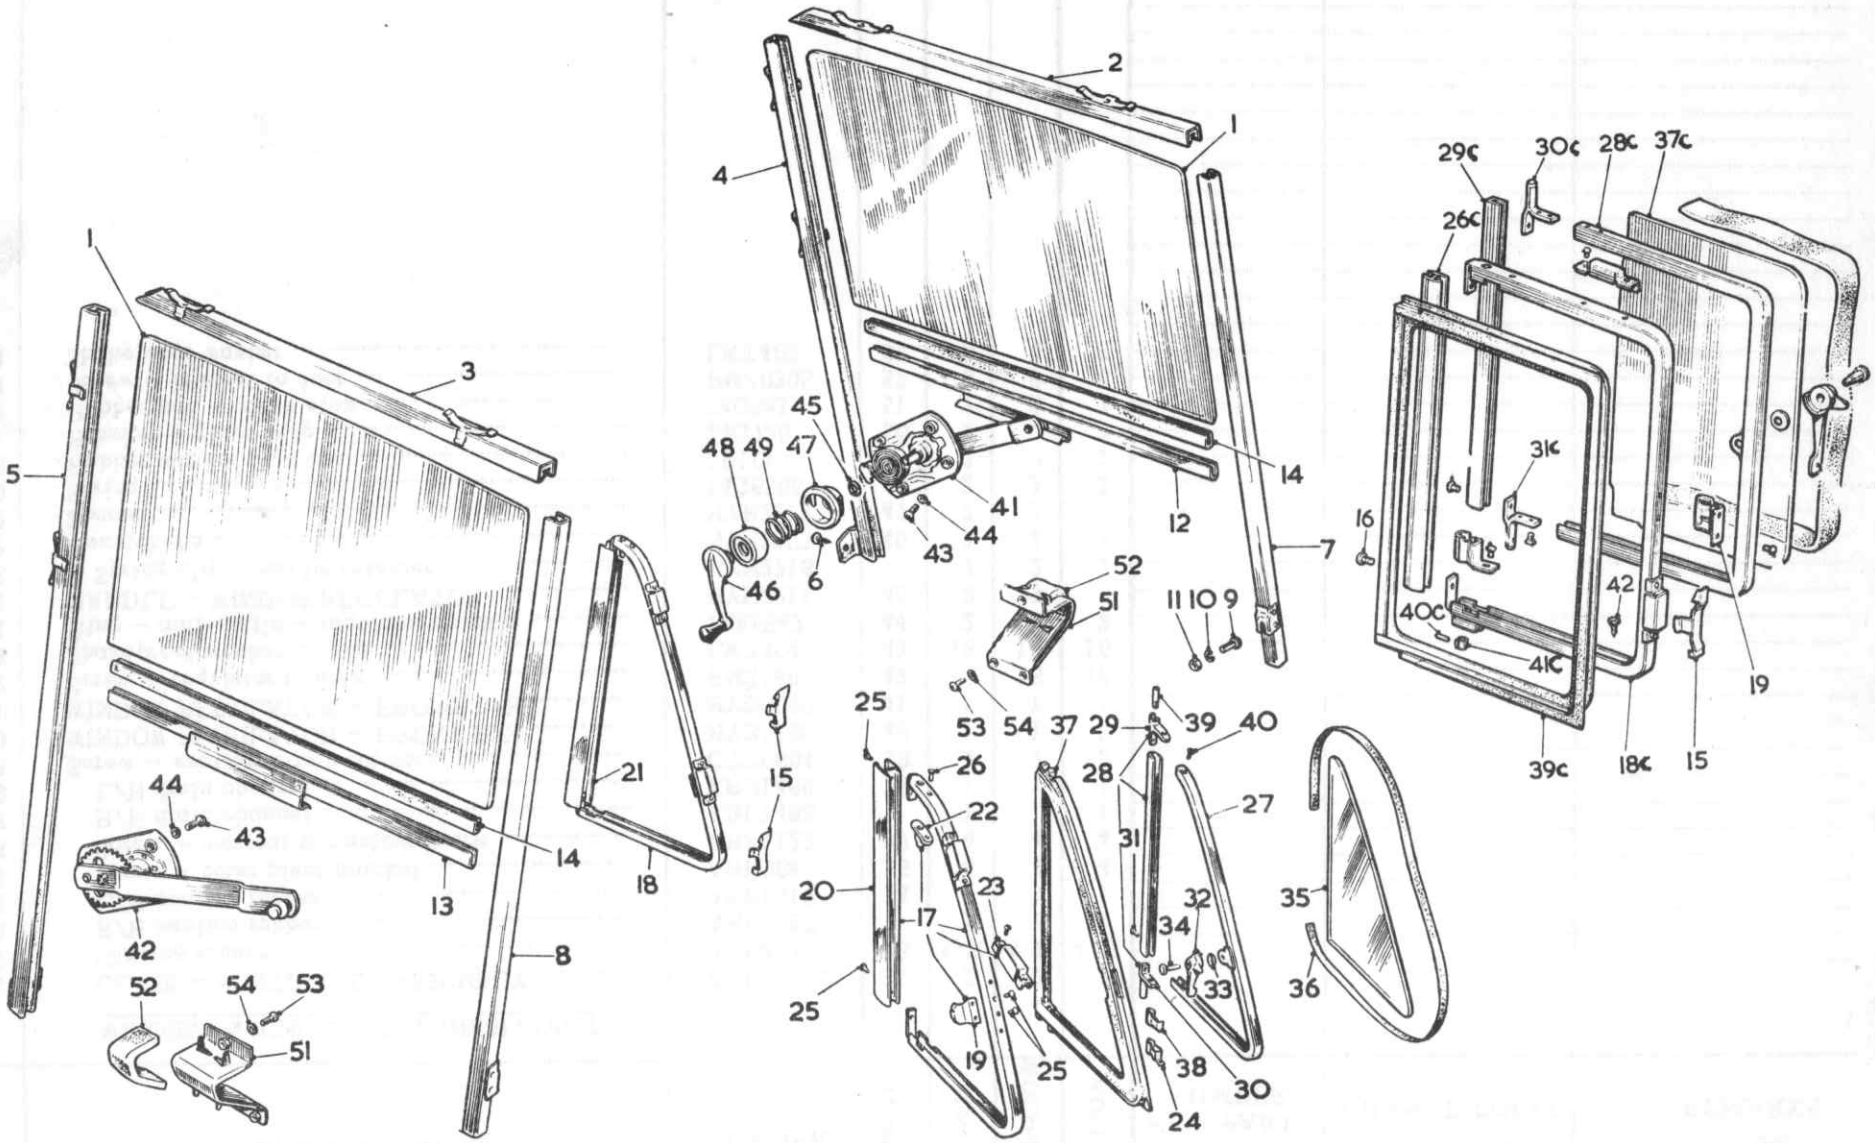

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R 20, R21 and R 22


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	WINDOWS & WINDOW MECHANISM CONTINUED:								
1	WINDOW GLASS – REAR DOORS	BDH3770	1	–	–	2			
2	WINDOW GLASS – REAR DOORS	24G464	1	2	2	–			
3	Channel assembly – top – R/H	24G467	2	1	1	1			
4	Channel assembly – top – L/H	24G468	3	1	1	1			
5	Channel assembly – front – R/H	24G456	4	1	1	1			
6	Channel assembly – front – L/H	24G457	5	1	1	1			
7	Screw – channel to door	PJZ1004	6	2	2	2			
8	Channel assembly – rear – R/H	24G461	7	1	1	–			
9	Channel assembly – rear – R/H	BDH3775	7	–	–	1			
10	Channel assembly – rear – L/H	24G462	8	1	1	–			
11	Channel assembly – rear – L/H	BDH3776	8	–	–	1			
12	Bolt – channel to door	6K9819	9	2	2	2			
13	Spring washer	LWZ204	10	2	2	2			
14	Nut	FNZ104	11	2	2	2			
15	Channel assembly – bottom – R/H	24G465	12	1	1	1			
16	Channel assembly – bottom – L/H	24G466	13	1	1	1			
17	Glazing rubber	24G492	14	2	2	2			
18	Spring clip – rear glass channel to door	24G553	15	6	6	6			
19	VENTILATOR ASSEMBLY – REAR R/H DOOR	ARH125		–	1	–			
20	VENTILATOR ASSEMBLY – REAR R/H DOOR	ARH150		–	–	1			
21	VENTILATOR ASSEMBLY – REAR L/H DOOR	ARH126		–	1	–			
22	VENTILATOR ASSEMBLY – REAR L/H DOOR	ARH151		–	–	1			
23	FRAME ASSEMBLY – OUTER R/H	ARH1535	17	–	1	–			
24	FRAME ASSEMBLY – OUTER R/H	ARH1580		–	–	1			
25	FRAME ASSEMBLY – OUTER L/H	ARH1536	18	–	1	–			
26	FRAME ASSEMBLY – OUTER L/H	ARH1581	18C	–	–	1			
27	Plate – handle locking	ARH1375	19	–	2	2			
28	Glass run channel – R/H	ARH1529	20	–	1	–			
29	Glass run channel – R/H	ARH1586		–	–	1			
30	Glass run channel – L/H	ARH1530	21	–	1	–			
31	Glass run channel – L/H	ARH1587	26C	–	–	1			
32	Bracket – upper pivot – outer	ARH1327	22	–	2	–			
33	Bracket – outer frame	ARH1473	23	–	4	4			
34	Screw – bracket to frame	ARA1114	16	–	–	4			
35	Clamp – lower pivot	ARH1539	24	–	2	4			
36	Rivet	ARO9399	25	–	18	18			
37	Rivet – upper pivot bracket	ARH1507	26	–	6	–			

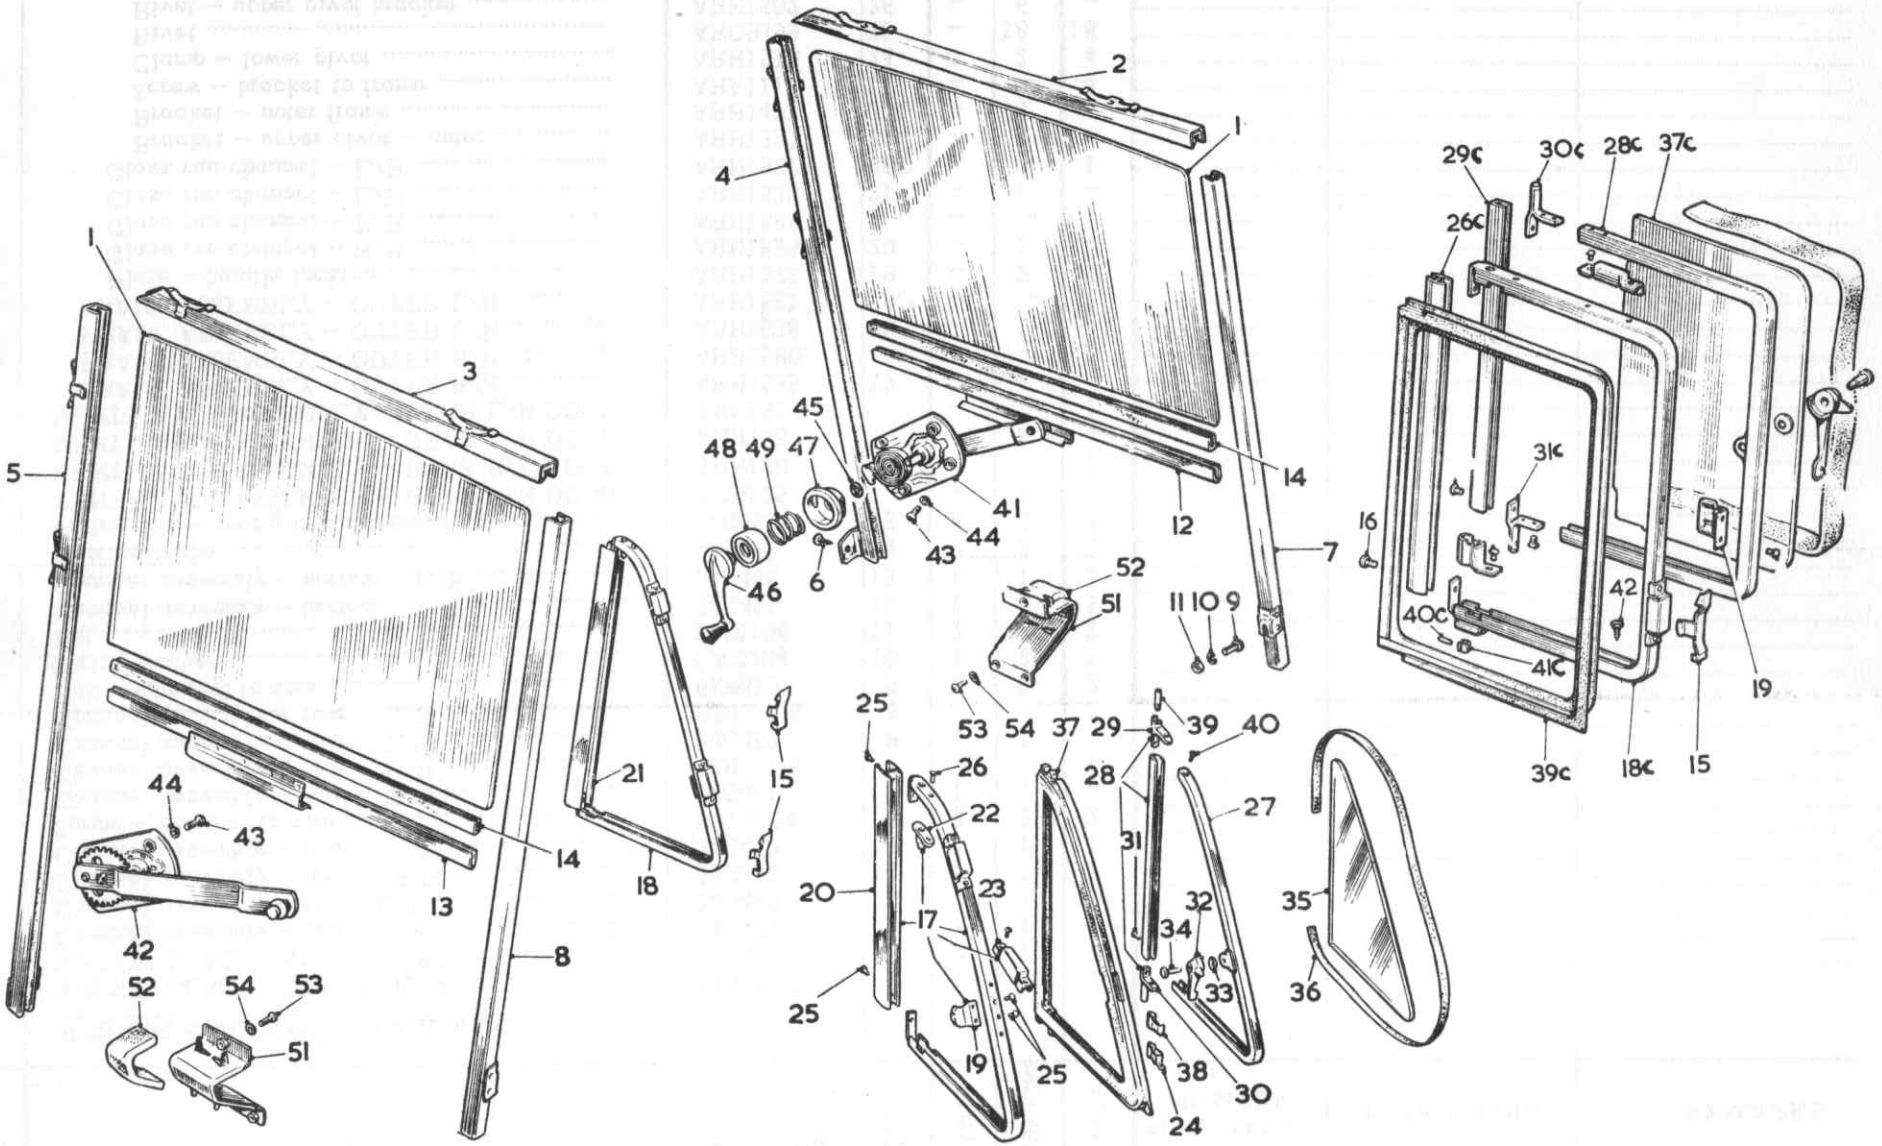

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R 20, R21 and R 22


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	WINDOWS & WINDOW MECHANISM CONTD:								
1	INNER CONTOURED FRAME – R/H	ARH1387	27	–	1	–			
2	INNER CONTOURED FRAME – R/H	ARH1573		–	–	1			
3	INNER CONTOURED FRAME – L/H	ARH1388		–	1	–			
4	INNER CONTOURED FRAME – L/H	ARH1574	28C	–	–	1			
5	INNER VERTICAL FRAME	ARH1578	29C	–	–	2			
6	INNER VERTICAL FRAME	ARH1464	28	–	2	–			
7	Bracket – upper pivot – inner	ARH1328	29	–	2	–			
8	Pivot upper	ARH1554	30C	–	–	2			
9	Lower pivot	ARH1386	30	–	2	–			
10	Lower pivot	ARH1589	31C	–	–	2			
11	R/H drain channel	ARH1489		–	1	–			
12	L/H drain channel	ARH1488		–	1	–			
13	Rivet – bracket – pivot to frame	ARH1507	31	–	4	4			
14	Handle – catch – R.H.	ARH1376	32	–	1	1			
15	Handle – catch – L.H.	ARH1377		–	1	1			
16	Anti-rattle washer – R/H	ARA770	33	–	1	–			
17	Anti-rattle washer – L/H	ARH1711		–	1	–			
18	Anti-rattle washer – R/H & L/H	ARA770	33	–	–	2			
19	Pin for handle – R/H	ARH1501	34	–	1	–			
20	Pin for handle – L/H	ARH1710		–	1	–			
21	Pin for handle – R/H & L/H	ARH1501	34	–	–	2			
22	GLASS	ARH1333	35	–	2	–			
23	GLASS	ARH1588	37C	–	–	2			
24	Glazing rubber	27H9919	36	–	A/R	A/R			
25	R/H sealing rubber	ARH1531	37	–	1	–			
26	R/H sealing rubber	ARH1690		–	–	1			
27	L/H sealing rubber	ARH1532		–	1	–			
28	L/H sealing rubber	ARH1691	39C	–	–	1			

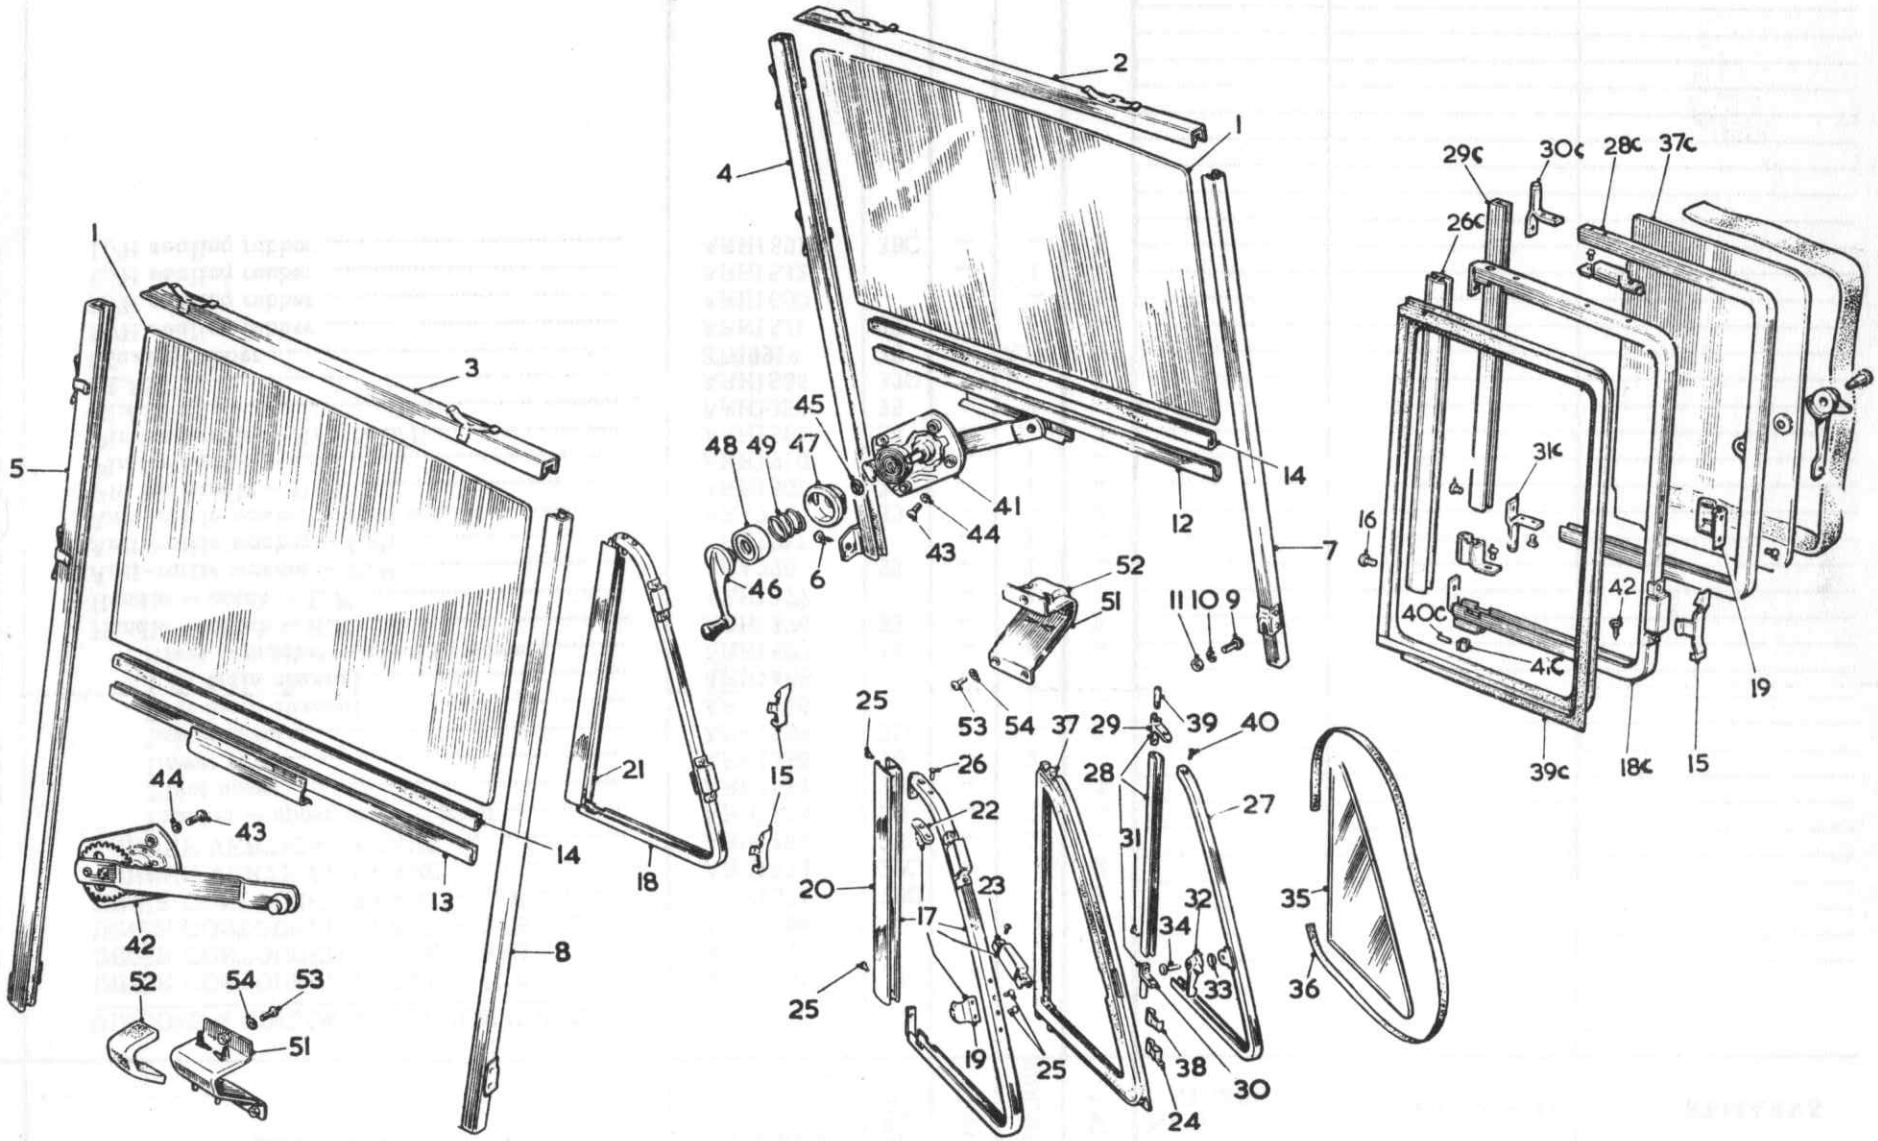

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R 20, R21 and R 22


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	WINDOWS & WINDOW MECHANISM CONTD:								
1	Clamp – lower pivot	ARH1539	38	–	2	–			
2	Pin – upper pivot	ARG699	39	–	2	–			
3	Screw – vertical – contoured frame	ARA1122	40	–	6	8			
4	Stop pin	ARA1112	40C	–	–	2			
5	Retainer – stop pin	ARH1594	41C	–	–	2			
6	Screw – quarterlight-door	CTZ604		–	2	2			
7	CHANNEL – GLASS RUN – FIXED GLASS – REAR DOOR – R/H	HYB0108		1	–	–			
8	CHANNEL – GLASS RUN – FIXED GLASS – REAR DOOR L/H	HYB0109		1	–	–			
9	Glass	HYB0105		2	–	–			
10	Weatherstrip – fixed glass R/H	HYB0106		1	–	–			
11	Weatherstrip – fixed glass L/H	HYB0107		1	–	–			
12	Rivet – glass channel to door	SYR0115		2	–	–			
13	WINDOW REGULATOR – REAR R/H	HYB0188	41	1	1	1			
14	WINDOW REGULATOR – REAR L/H	HYB0189	42	1	1	1			
15	Screw – regulator to door	PMZ0405	43	8	8	8			
16	Shakeproof washer	LWZ404	44	8	8	8			
17	Ring – anti rattle – regulator spindle	14A6642	45	2	2	2			
18	HANDLE – WINDOW REGULATOR	HYH2211	46	2	2	2			
19	Spring clip – handle retainer	HYH2218		2	2	2			
20	Escutcheon	HYH2573	47	2	2	2			
21	Spacer	HYH2212	48	2	2	2			
22	Spring	14G6506	49	2	2	2			
23	Rubber washer	SP101		2	2	2			
24	Bracket – glass stop	24G720	51	2	2	2			
25	Rubber pad	24G541	52	2	2	2			
26	Screw – bracket to door	PMZ0305	53	6	6	6			
27	Shakeproof washer	LWZ403	54	6	6	6			

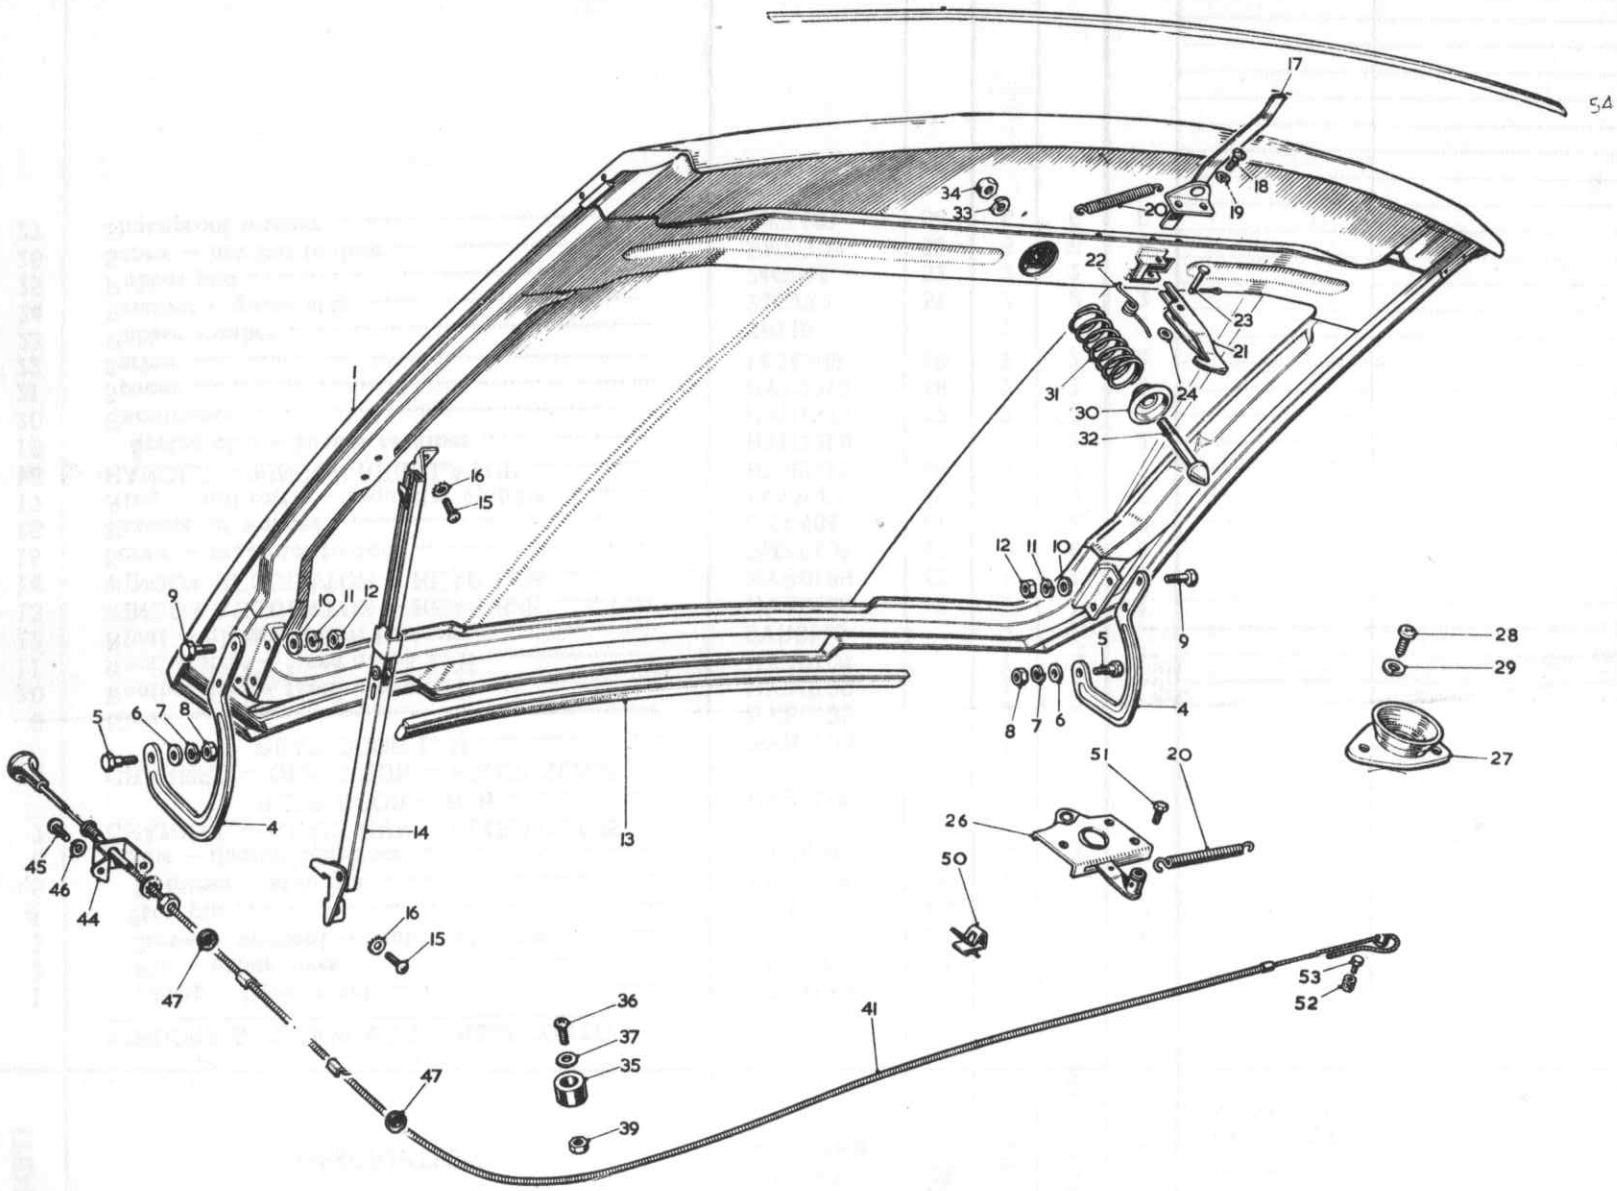

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R23 and R24


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BONNET & FITTINGS								
1	BONNET PANEL	HYB0089	1	1	–	1			
2	BONNET PANEL	BZC318	–	–	1	–			
3	HINGE	14G9851	4	2	2	2			Included part of front end assembly HYB0023 and HYB0024
4	Pin – hinge to dash	14G9850	5	2	2	2			
5	Plain washer	PWZ104	6	2	2	2			
6	Spring washer	LWZ304	7	2	2	2			
7	Nut – hinge pin	FNZ104	8	2	2	2			
8	Screw – hinge to bonnet	HZS0406	9	4	4	4			
9	Plain washer	PWZ104	10	8	8	8			
10	Spring washer	LWZ204	11	4	4	4			
11	Nut	FNZ104	12	4	4	4			
12	SEALING RUBBER	24G1206	13	1	1	1			
13	PROP ASSEMBLY	24G469	14	1	1	1			
14	Screw – prop to dash and bonnet	PMZ0306	15	4	4	4			
15	Washer for screw (shakeproof)	LWZ503	16	4	4	4			
16	LEVER ASSEMBLY – SAFETY CATCH	24G1758	17	1	–	1			
17	LEVER ASSEMBLY – SAFETY CATCH	BDH1472	17	–	1	–			
18	Screw – lever to bonnet	PMZ0306	18	2	2	2			
19	Washer for screw	LWZ203	19	2	2	2			
20	Tension spring – lever	4G2494	20	1	1	1			
21	Bonnet hook	24G1091	21	1	1	1			
22	Spring – hook	24G1092	22	1	1	1			
23	Pin – safety catch	4B8769	23	1	1	1			
24	Washer for pin	PWN104	24	1	1	1			
25	PLATE – BONNET LOCK	24G1860	26	1	1	1			
26	Spring – lever	4G2494	20	1	1	1			
27	LOCATING CUP ASSEMBLY	4G335	27	1	1	1			
28	Screw – lock plate	PPZ0408	28	3	3	3			
29	Washer for screw	LWZ204	29	3	3	3			
30	THIMBLE ASSEMBLY – BONNET LOCK	4G3676	30	1	–	1			
31	THIMBLY ASSEMBLY – BONNET LOCK	ADB5408	30	–	1	–			
32	Spring – bonnet lock	4G1588	31	1	1	1			
32	Pin – bonnet lock	14G2444	32	1	1	1			

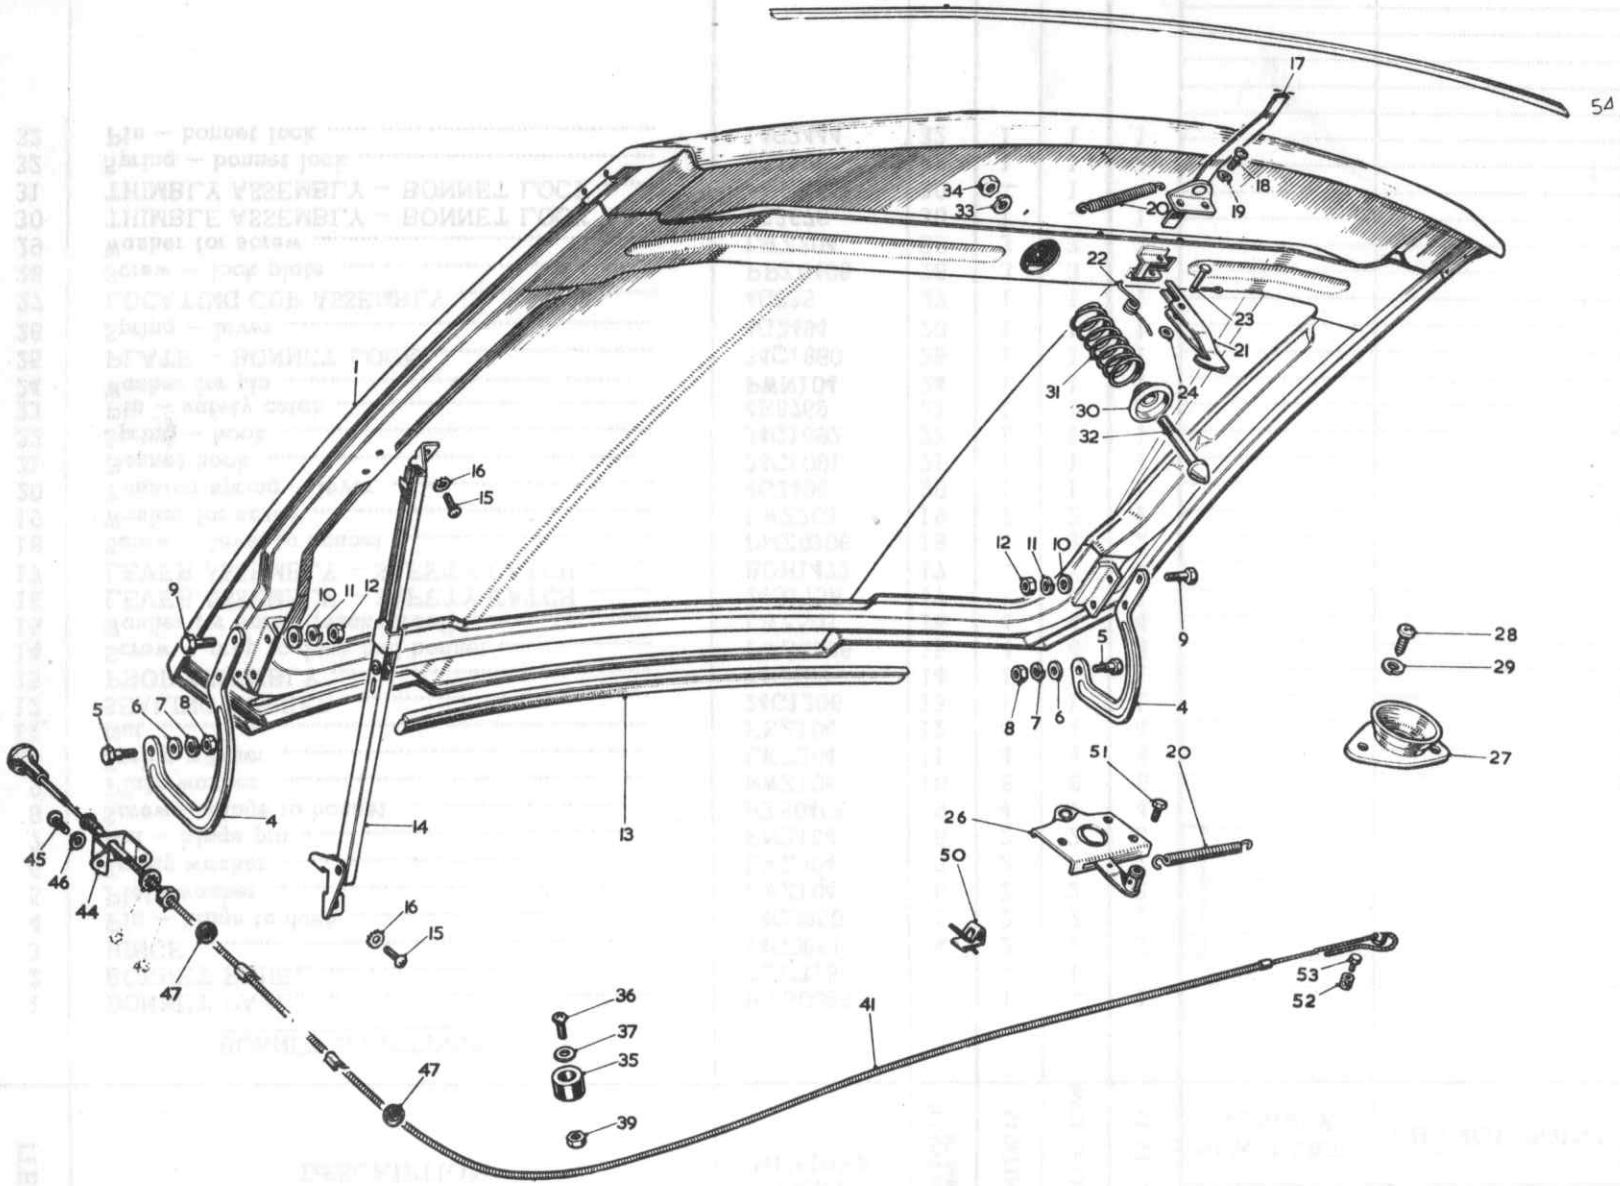

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R23 and R24


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BONNET & FITTINGS CONTINUED:								
1	Spring washer for pin	LWZ306	33	1	1	1			
2	Nut – lock pin	FNZ106	34	1	–	1			
3	Nut – lock pin	FNZ206		–	1	–			
4	Buffer	24G825	35	2	2	2			
5	Screw – buffer to bonnet	PMZ0308	36	2	2	2			
6	Plain washer	PWZ203	37	2	2	2			
7	Nut	FNZ103	39	2	2	2			
8	BONNET CABLE PULL ASSEMBLY	24G1737	41	1	1	1			
9	Rubber tubing – cable	ACA5354		–	1	–			
10	Cable clamp	24G1052	52	1	1	1			
11	Screw for clamp	53K1016	53	1	1	1			
12	Screw – cable pull to release lever	SYS0013	51	1	1	1			
13	Bracket – cable	24G1061	44	1	1	1			
14	Screw – bracket to dash	PMZ0308	45	2	2	2			
15	Spring washer	LWZ203	46	2	2	2			
16	Grommet – cable through dash	3F90	47	2	2	2			
17	Clip – cable to valance	13H489	50	1	1	1			
18	Plate – parcel tray support	HYB0265		1	–	1			
19	Screw	RTZ804		1	–	1			
20	Washer	FWP108		1	–	1			
21	FINISHER – BONNET	HYB0087	54	1	–	1			
22	Clip – finisher	HYB0116		6	–	6			
23	LETTERS – A	HYB0048		1	–	1			
24	U	HYB0049		1	–	1			
25	S	HYB0050		1	–	1			
26	T	HYB0051		1	–	1			
27	I	HYB0052		1	–	1			
28	N	HYB0053		1	–	1			
29	Fastener clip	SP001		7	–	7			

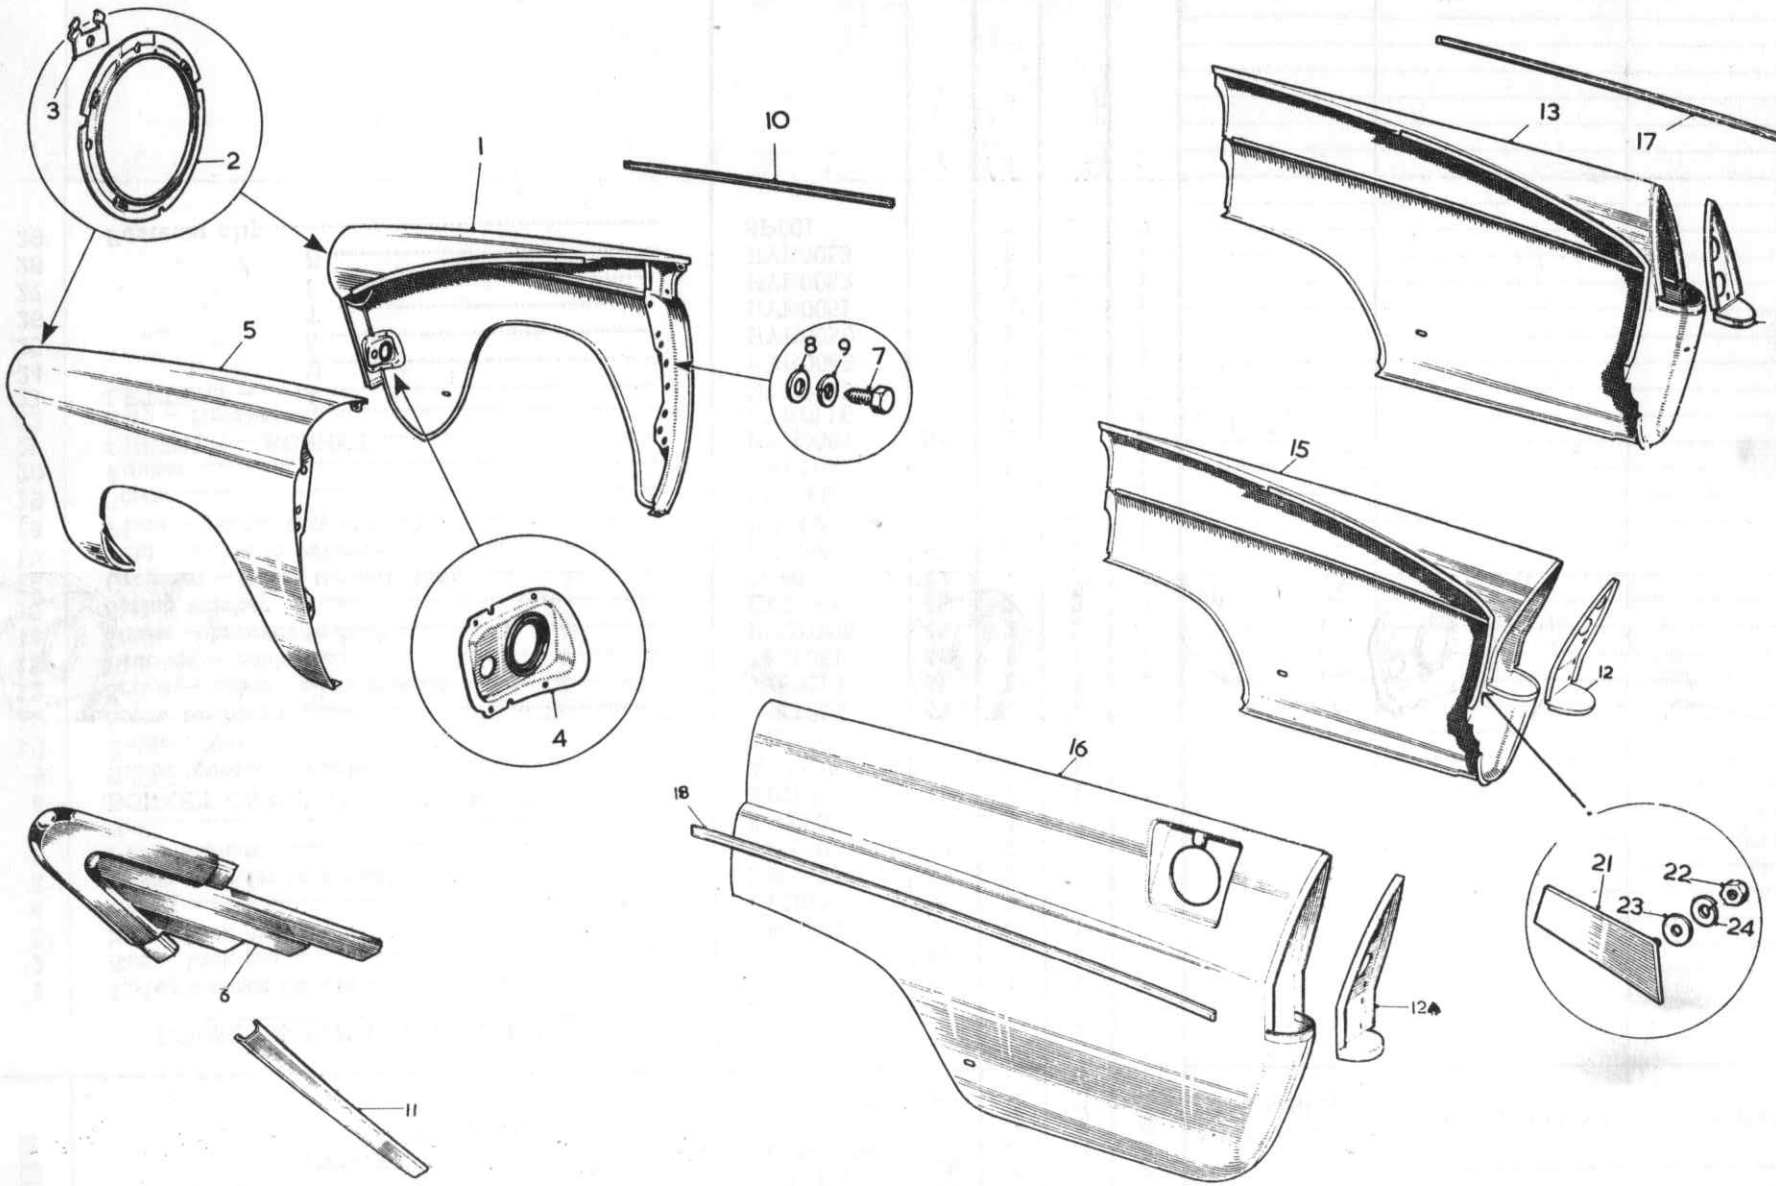

ILLUSTRATIONS TYPICAL ONLY


TO FACE PAGE R25 and R26

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	WING DETAILS								
1	WING ASSEMBLY – FRONT – R/H	HYB0194	1	1	–	1			
2	WING ASSEMBLY – FRONT – R/H	HYB0376	1	–	1	–			
3	Panel assembly – headlamp mounting	24G724	2	1	1	1			
4	Retainer – headlamp mounting	24G726	3	1	1	1			
5	Panel assembly – sidelamp mounting R/H	HYB0382	4	1	–	1			
6	Panel assembly – sidelamp mounting R/H	24G814	4	–	1	–			
7	WING ASSEMBLY – FRONT – L/H	HYB0195	5	1	–	1			
8	WING ASSEMBLY – FRONT – L/H	HYB0377	5	–	1	–			
9	Panel assembly – headlamp mounting	24G724	2	1	1	1			
10	Retainer – headlamp mounting	24G726	3	1	1	1			
11	Panel assembly – sidelamp mounting L/H	HYB0383		1	–	1			
12	Panel assembly – sidelamp mounting L/H	24G815		–	1	–			
13	Screw – wings to body	HPZ0404	7	10	10	10			
14	Washer – spring for screw	LWZ204	9	10	10	10			
15	Washer – plain for screw	PWZ204	8	10	10	10			
16	Motif – side – front wing R/H	BDH899		–	1	–			
17	Motif – side – front wing L/H	BDH900	6	–	1	–			
18	Push on fix – motif to wing	PFS106		–	6	–			
19	Moulding – front wing – R/H	HYB0096	10	1	–	1			
20	Moulding – front wing – R/H	HYB0094		–	1	–			
21	Moulding – front wing – L/H	HYB0097		1	–	1			
22	Moulding – front wing – L/H	HYB0095		–	1	–			
23	Moulding – front wing – front – R/H	HYB0092		–	1	–			
24	Moulding – front wing – front – L/H	HYB0093	11	–	1	–			
25	Clip – moulding to front wings	SP102		18	22	18			
26	NAMEPLATE – WOLSELEY SIX – front wings	HYB0816		–	2	–			
27	Push on fix – nameplate to wing	PFS103		–	6	–			
28	WING ASSEMBLY – Rear – R/H	HYB0410	13	1	–	–			
29	WING ASSEMBLY – rear – R/H	HYB0408	15	–	1	–			
30	WING ASSEMBLY – rear – R/H	HYB0422		–	–	1			
31	Panel assembly – rear lamp filler – R/H	BZA994	14	1	–	–			
32	Panel assembly – rear lamp filler – R/H	BZC676	12	–	1	–			
33	Panel assembly – rear lamp filler – R/H	BZA1627		–	–	1			

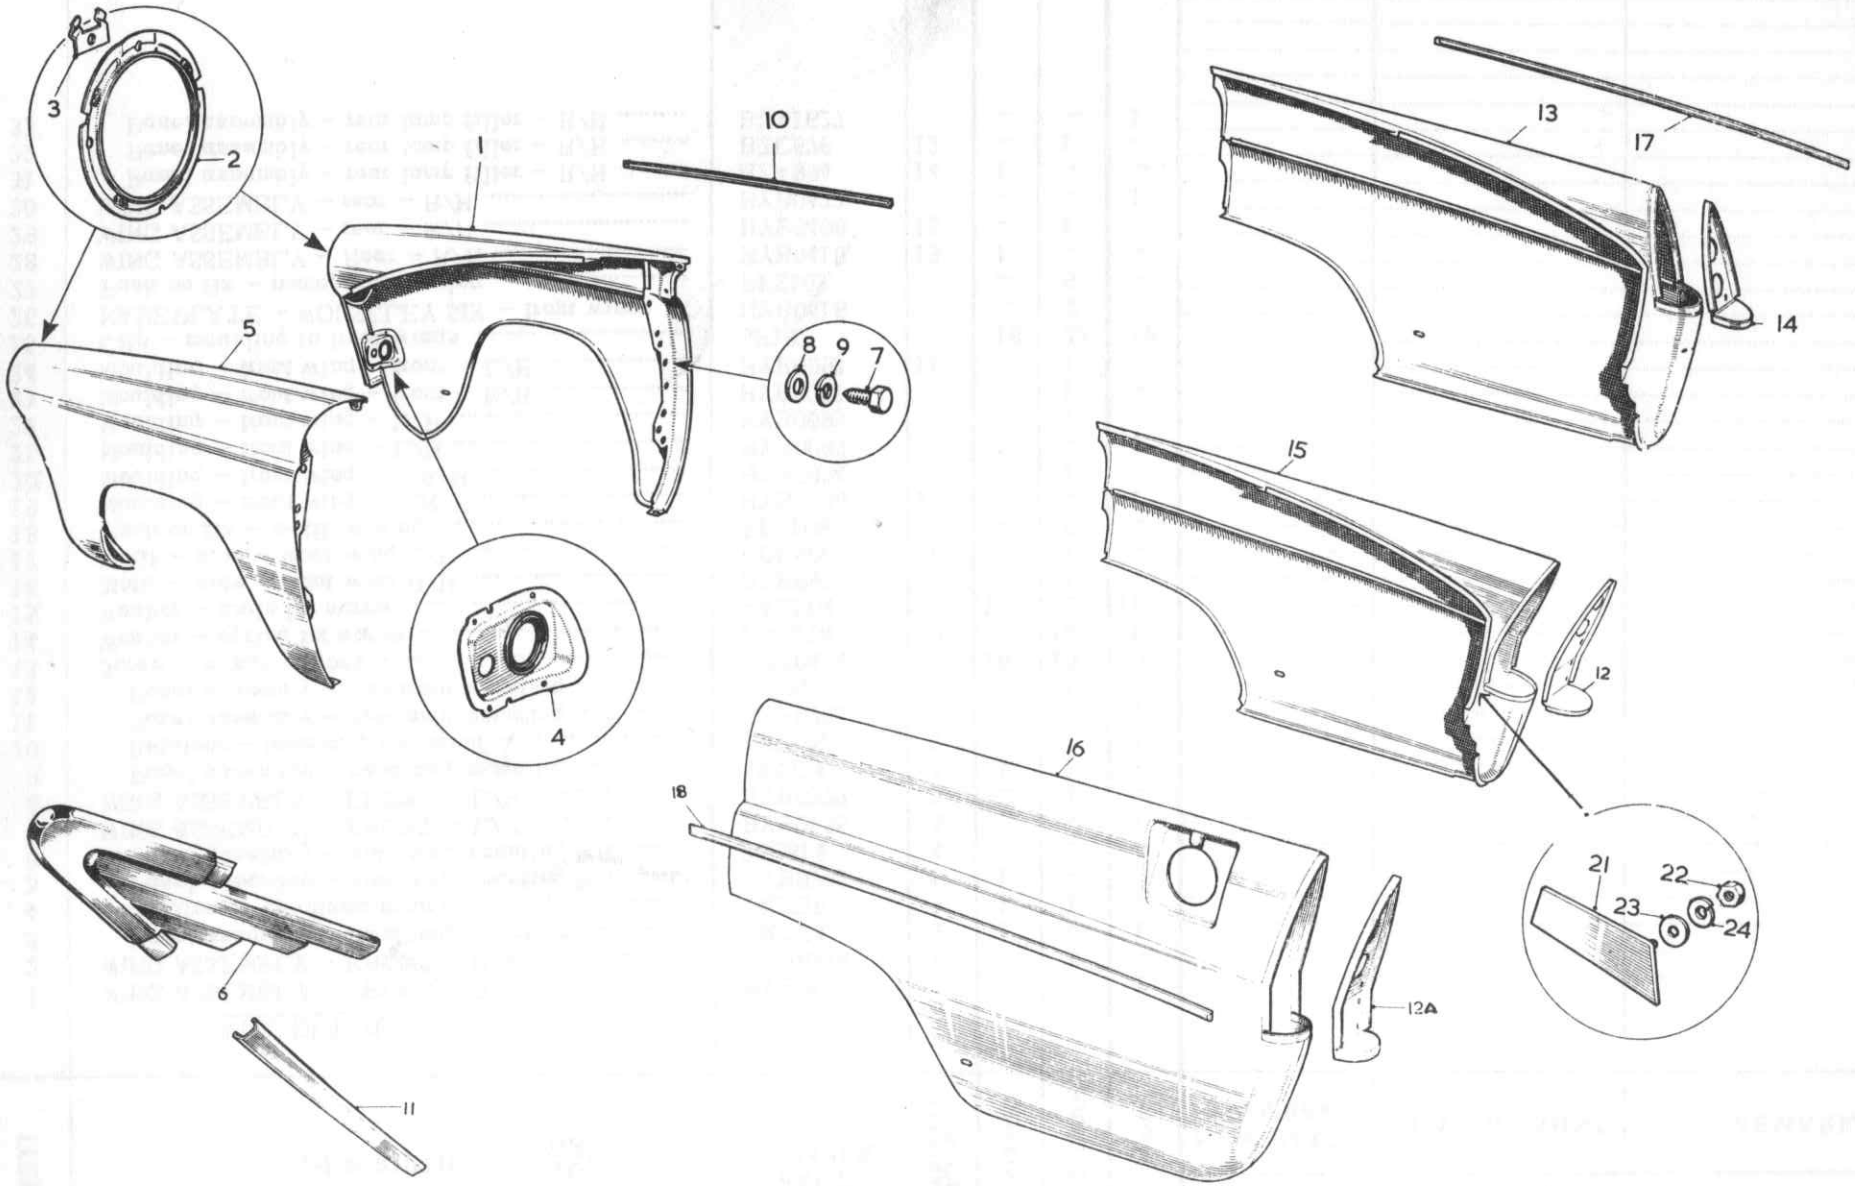

ILLUSTRATIONS TYPICAL ONLY


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	WING DETAILS CONTINUED;								
1	WING ASSEMBLY – REAR – L/H	HYB0411		1	–	–			
2	WING ASSEMBLY – REAR – L/H	HYB0409		–	1	–			
3	WING ASSEMBLY – REAR – L/H	HYB0423	16	–	–	1			
4	Panel assembly – rear lamp filler – L/H	BZA995		1	–	–			
5	Panel assembly – rear lamp filler – L/H	BZC677		–	1	–			
6	Panel assembly – rear lamp filler – L/H	BZA1627	12A	–	–	1			
7	Moulding – rear wing – R/H	HYB0102	17	1	–	–			
8	Moulding – rear wing – R/H	HYB0100	17	–	1	–			
9	Moulding – rear wing – R/H	HYB0690	17	–	–	1			
10	Moulding – rear wing – L/H	HYB0103	18	1	–	–			
11	Moulding – rear wing – L/H	HYB0101	18	–	1	–			
12	Moulding – rear wing – L/H	HYB0691	18	–	–	1			
13	Clip – moulding to rear wings	SP102		14	14	14			
14	Moulding – rear wing inner – R/H	BDH3642	21	–	1	–			
15	Moulding – rear wing inner – L/H	BDH3643		–	1	–			
16	Nut – moulding to wing	FNZ103	22	–	2	–			
17	Washer – plain for nut	PWZ103	23	–	2	–			
18	Washer – spring for nut	LWZ203	24	–	2	–			

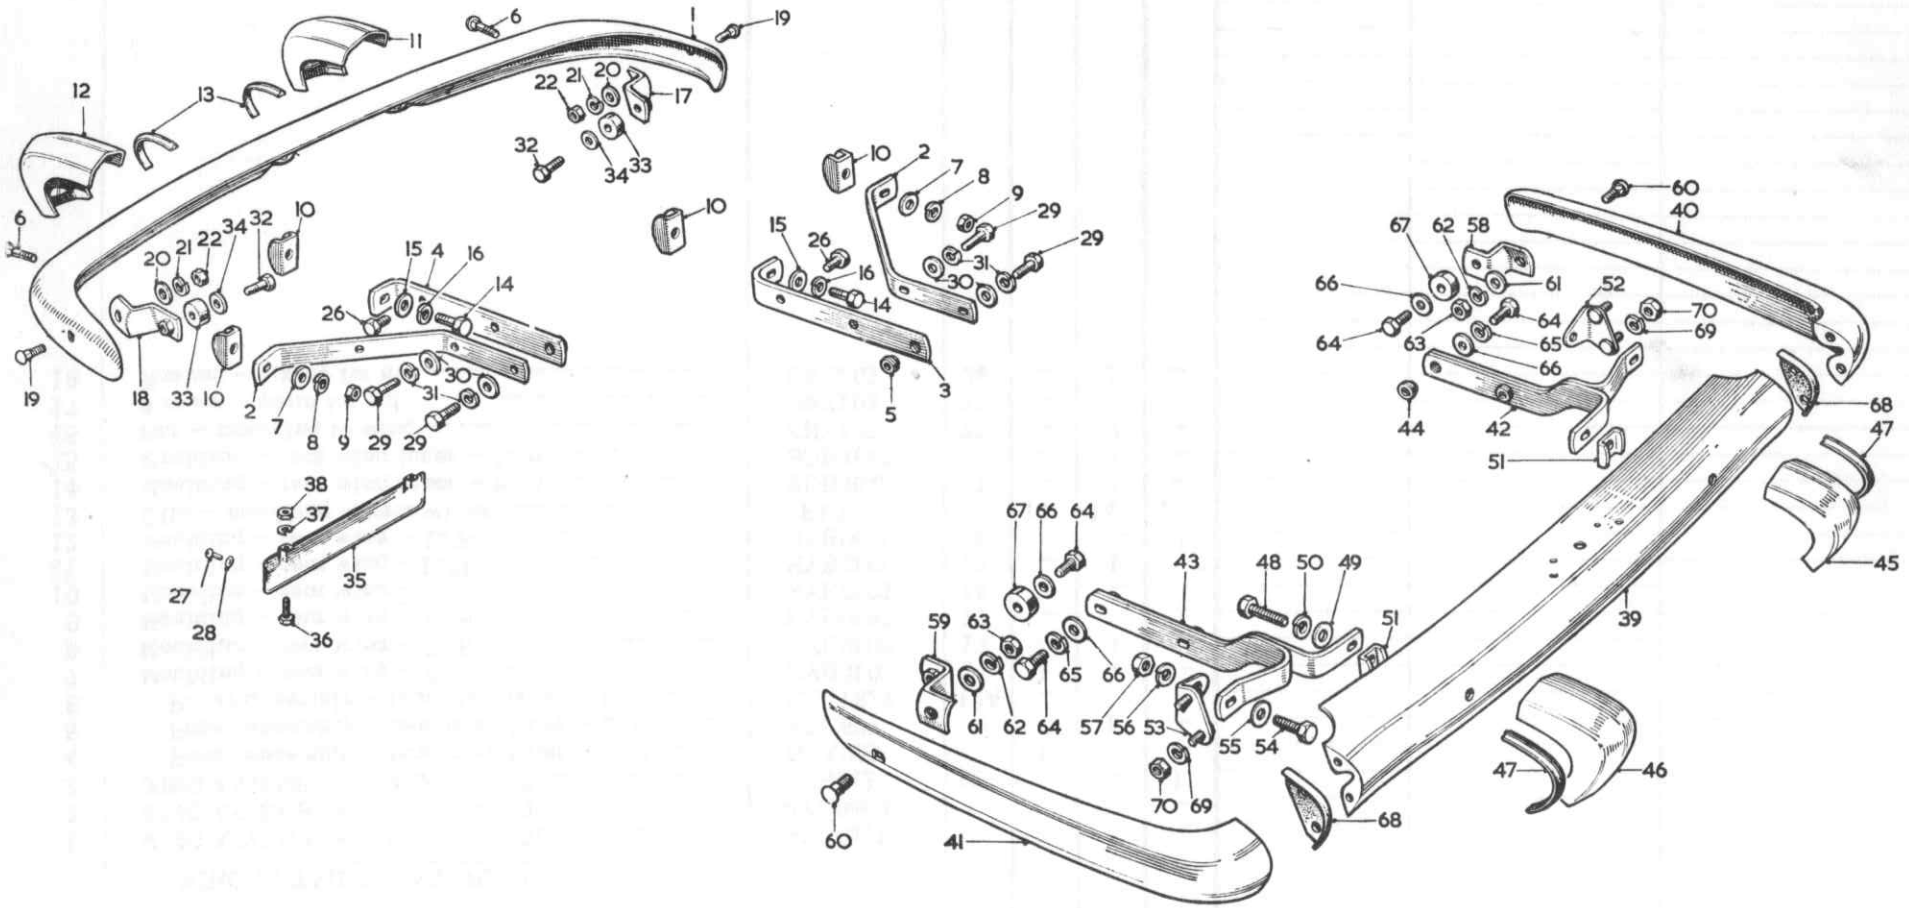

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R27, R28, and R29


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BUMPER BARS AND FITTINGS								
1	FRONT BUMPER BLADE	24G627	1	1	–	1			
2	FRONT BUMPER BLADE	BDH725		–	1	–			
3	Outer spring bar	HYB0025	2	2	–	2			
4	Outer spring bar – R/H	HYB0042		–	1	–			
5	Outer spring bar – L/H	HYB0043		–	1	–			
6	Inner spring bar – R/H	HYB0026	3	1	–	1			
7	Inner spring bar – R/H	HYB0044		–	1	–			
8	Inner spring bar – L/H	HYB0027	4	1	–	1			
9	Inner spring bar – L/H	HYB0045		–	1	–			
10	Ferrule	24G1728	5	4	4	4			
11	Bolt – blade to outer spring bar	24G625	6	2	–	2			
12	Bolt – blade to outer spring bar	BDH739		–	2	–			
13	Plain washer	PWZ106	7	2	–	2			
14	Spring washer	LWZ206	8	2	2	2			
15	Nut	FNZ106	9	2	2	2			
16	Spacer bracket – blade to outer spring bar	24G620	10	4	–	4			
17	Spacer bracket – blade to outer spring bar	BDH730		–	4	–			
18	R/H OVER–RIDER	24G635	11	1	1	1			
19	L/H OVER–RIDER	24G636	12	1	1	1			
20	Seating – over–rider	24G637	13	4	4	4			
21	Bolt – over–rider to blade	HBZ0614	14	2	–	2			
22	Bolt – over–rider to blade	HBZ0616		–	2	–			
23	Plain washer	PWZ106	15	2	–	2			
24	Spring washer	LWZ206	16	2	2	2			
25	End bracket – R/H	24G633	17	1	–	1			
26	End bracket – R/H	BDH1466		–	1	–			
27	End bracket – L/H	24G634	18	1	–	1			
28	End bracket – L/H	BDH1467		–	1	–			
29	Bolt – blade to bracket	24G623	19	2	2	2			
30	Plain washer	PWZ107	20	2	2	2			
31	Spring washer	LWZ206	21	2	2	2			
32	Nut	FNZ106	22	2	2	2			
33	Screw – bumper to side member	HPZ0612	29	4	4	4			
34	Plain washer	PWZ106	30	4	–	4			
35	Plain washer	PWZ206		–	4	–			
36	Spring washer	LWZ206	31	4	4	4			

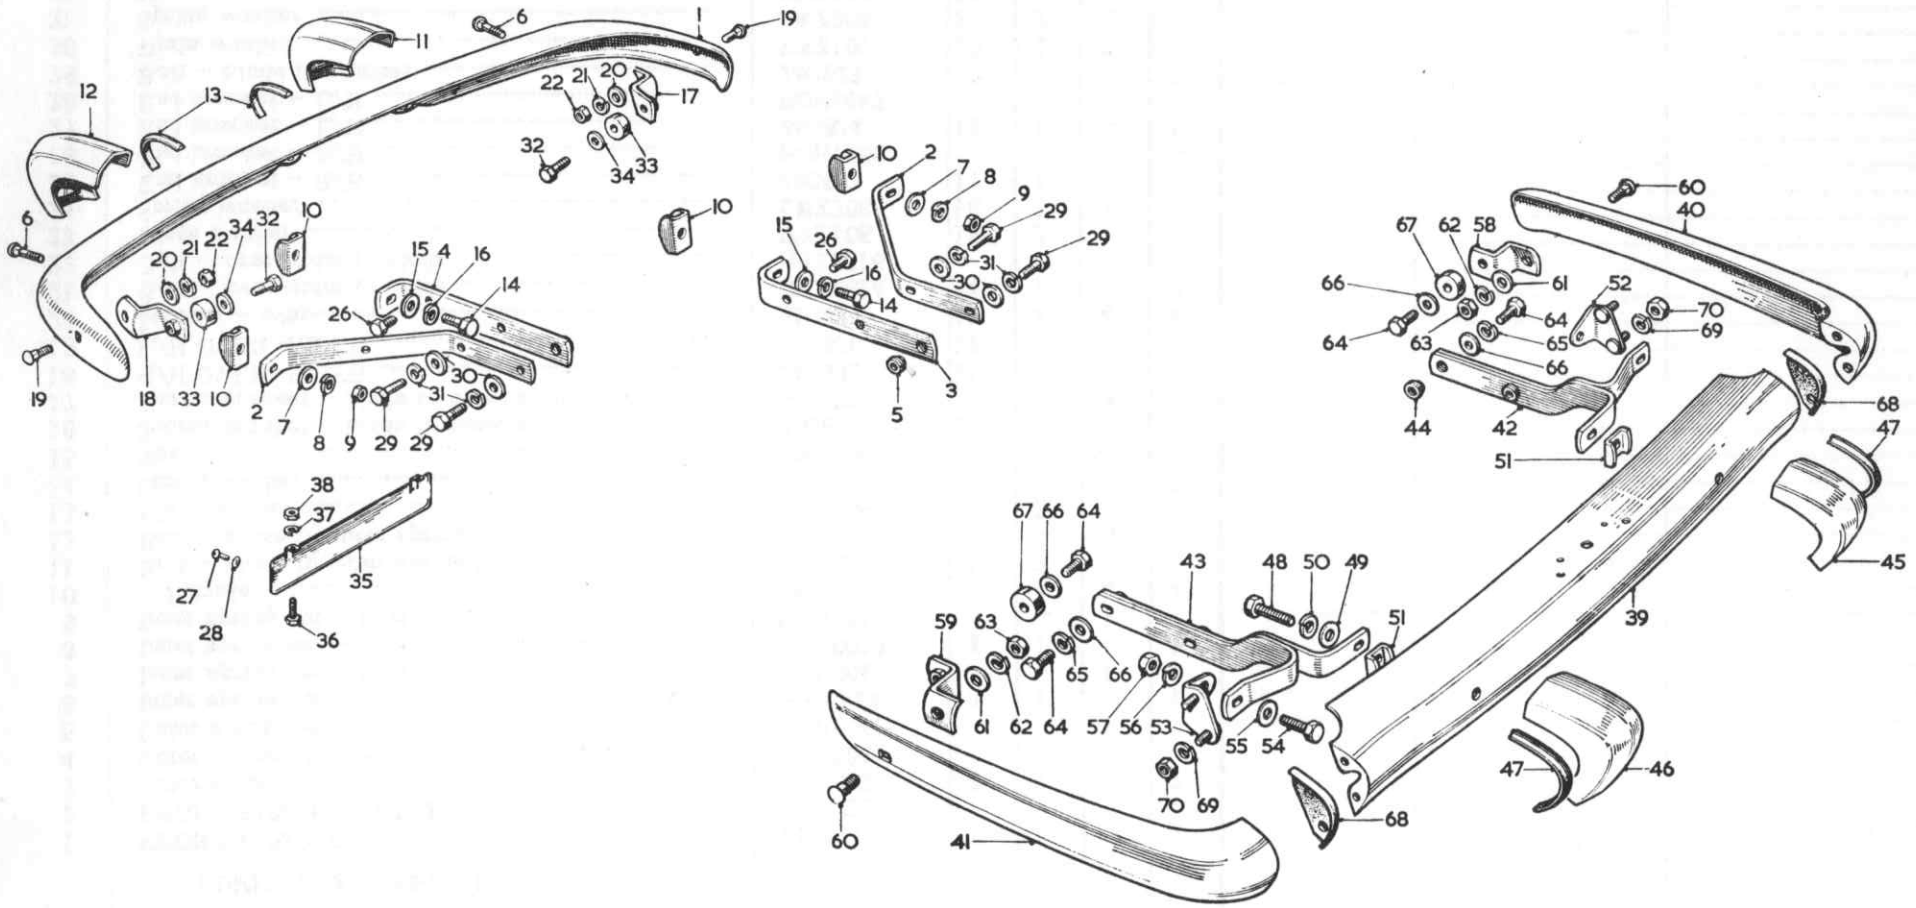

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R27, R28, and R29


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BUMPER BARS & FITTINGS CONTD:								
1	Screw – end bracket to mudguard	HBZ0612	32	2	–	2			
2	Screw – end bracket to mudguard	HPZ0609		–	2	–			
3	Rubber pad	24G629	33	2	2	2			
4	Washer	PWZ106	34	2	2	2			
5	NUMBER PLATE SUPPORT ASSY. – FRONT	HYB0272	35	1	–	1			
6	Screw – support to bumper bar	HZS0404	36	3	–	3			
7	Washer for screw (plain)	PWZ205		1	–	1			
8	Washer for screw (spring)	LWZ204	37	2	–	2			
9	Nut for screw	FNZ204	38	3	–	3			
10	Screw – number plate to support	PMZ0306	27	2	–	2			
11	Washer for screw (spring)	LWZ203	28	2	–	2			
12	NUMBER PLATE SUPPORT – FRONT	HYH0807		–	1	–			
13	Screw – number plate to support	PMZ0308		–	2	–			
14	Washer for screw (spring)	LWZ203		–	2	–			
15	Nut for screw	FNZ103		–	2	–			
	REAR BUMPERS								
16	BLADE – CENTRE	24G1617	39	1	1	1			
17	BLADE – R/H	24G608	40	1	1	1			
18	BLADE – L/H	24G609	41	1	1	1			
19	Spring bar assembly – R/H	24G612	42	1	1	1			
20	Spring bar assembly – L/H	24G613	43	1	1	1			
21	Ferrule	1G9356	44	4	4	4			
22	OVER–RIDER – R/H	24G610	45	1	1	1			
23	OVER–RIDER – L/H	24G611	46	1	1	1			
24	Seating – over–rider	24G622	47	4	4	4			
25	Bolt – over–rider to blade	HBZ0614	48	2	2	2			
26	Plain washer	PWZ106	49	2	2	2			
27	Spring washer	LWZ206	50	2	2	2			
28	Spacer bracket – blade to bar	24G620	51	2	2	2			
29	Bracket – R/H blade to centre blade	24G616	52	1	1	1			
30	Bracket – L/H blade to centre blade	24G617	53	1	1	1			
31	Bolt – spring bar to bracket	HZS0608	54	2	2	2			
32	Plain washer	PWZ106	55	2	2	2			

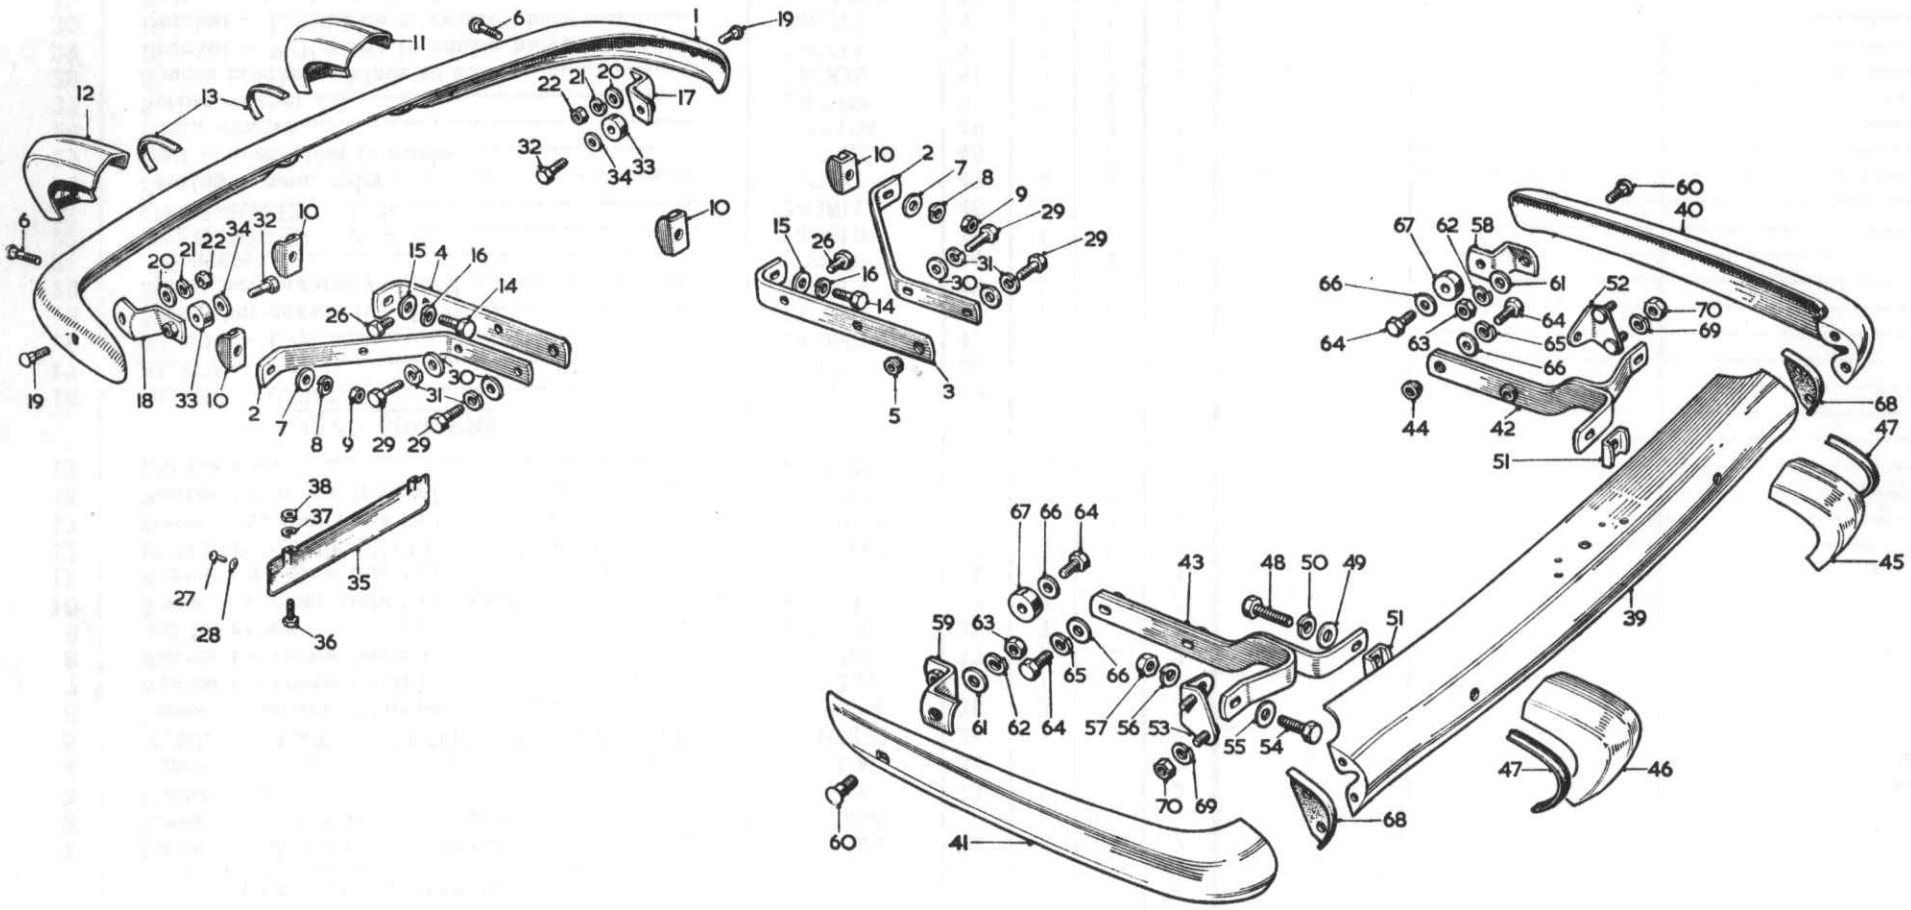

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R27, R28, and R29


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
	. . . . .			AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BUMPER BARS AND FITTINGS CONTINUED:								
1	Spring washer	LWZ206	56	2	2	2			
2	Nut	FNZ106	57	2	2	2			
3	Bracket – R/H blade to mudguard	24G618	58	1	1	1			
4	Bracket – L/H blade to mudguard	24G619	59	1	1	1			
5	Bolt – bracket to blade	24G623	60	2	2	2			
6	Plain washer | brackets – rear bumper side	PWZ107	61	2	2	2			
7	Spring washer —to rear bumper	LWZ206	62	2	2	2			
8	Nut | R/H and L/H	FNZ106	63	2	2	2			
9	Screw – bumper to body	HPZ0609	64	6	6	6			
10	Spring washer	LWZ206	65	4	4	4			
11	Plain washer	PWZ106	66	6	6	6			
12	Rubber pad	24G629	67	2	2	2			
13	Joint washer – side blades to centre	24G621	68	2	2	2			
14	Spring washer	LWZ305	69	4	4	4			
15	Nut	FNZ105	70	4	4	4			

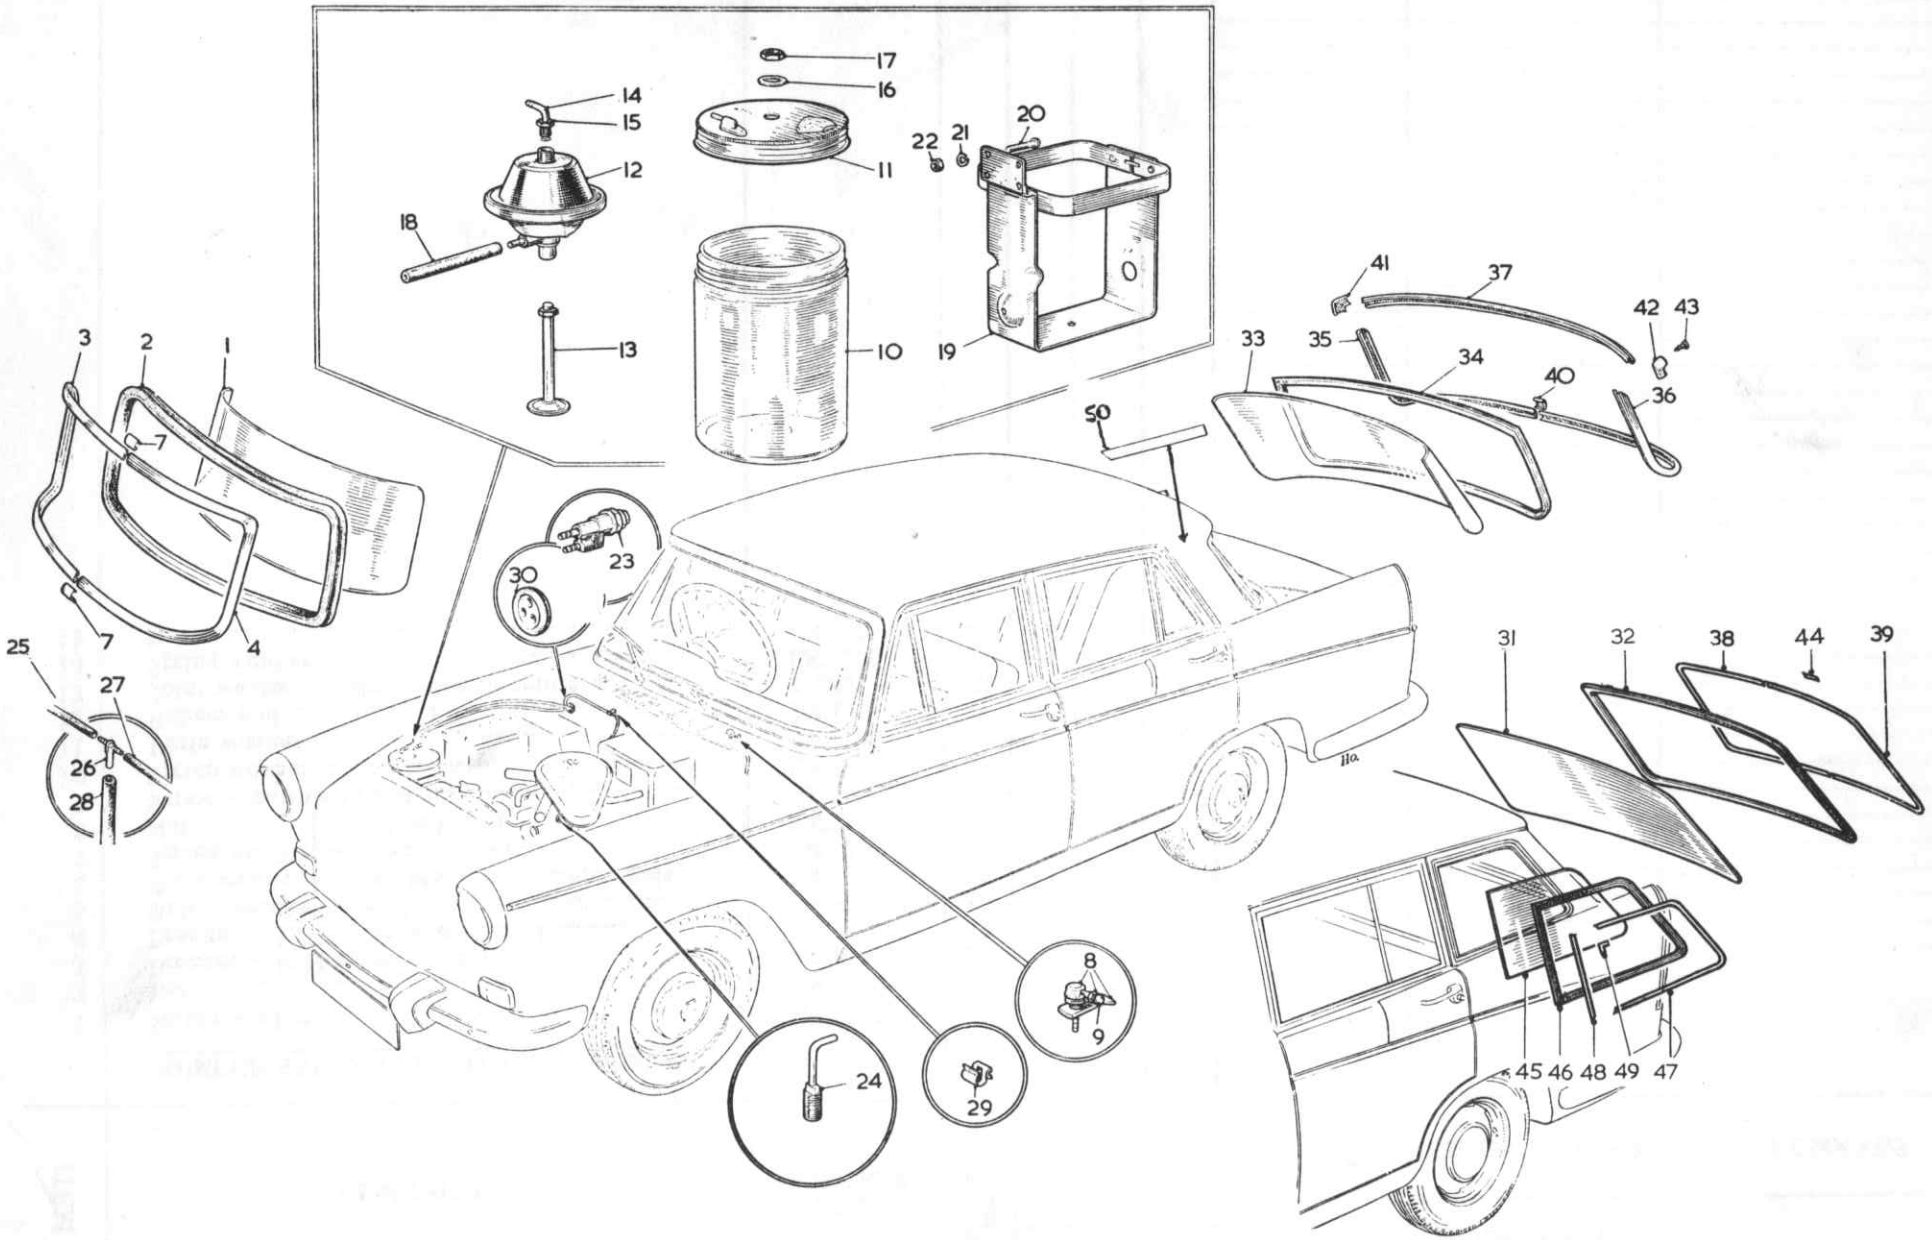

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R 30 and R31


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	WINDSCREEN AND BACKLIGHTS								
1	WINDSCREEN GLASS (Toughened)	14G9588	1	1	1	1			
2	Rubber weatherstrip	BDH4219	2	1	1	1			
3	Finisher – windscreen – R/H	24G798	3	1	1	1			
4	Finisher – windscreen – L/H	24G799	4	1	1	1			
5	Finisher capping	24G1622	7	2	2	2			
6	BACKLIGHT GLASS	14G9590	33	1	1	–			
7	Rubber weatherstrip	BDH4220	34	1	1	–			
8	Finisher – backlight – R/H	24G614	35	1	1	–			
9	Finisher – backlight – L/H	24G615	36	1	1	–			
10	Finisher – backlight – top	24G1142	37	1	1	–			
11	Finisher capping	24G1622	40	1	1	–			
12	Corner piece R/H	BDH4081	41	1	1	–			
13	Corner piece L/H	BDH4082	42	1	1	–			
14	Screw – corner piece to finisher	PTP602	43	4	4	–			
	BACKLIGHT AND QUARTERLIGHT								
15	BACKLIGHT GLASS	BDH3778	31	–	–	1			
16	Rubber weatherstrip	BDH3779	32	–	–	1			
17	R/H finisher	BDH3781	38	–	–	1			
18	L/H finisher	BDH3782	39	–	–	1			
19	Finisher clip	14A5720	44	–	–	2			
20	QUARTERLIGHT GLASS	BDH4468	45	–	–	2			
21	R/H weatherstrip	BDH4469		–	–	1			
22	L/H weatherstrip	BDH4470	46	–	–	1			
23	R/H contoured finisher	BDH3754		–	–	1			
24	L/H contoured finisher	BDH3753	47	–	–	1			
25	Straight finisher	BDH3755	48	–	–	2			
26	Finisher clip	BDH3752	49	–	–	4			
	ROOF PANEL DETAILS								
27	MOULDING – ROOF REAR QUARTER – R/H	HYB0152		1	–	–			
28	MOULDING – ROOF REAR QUARTER – L/H	HYB0153	50	1	–	–			
29	Washer – sealing	HYB0122		2	–	–			
30	Washer – sealing	HYB0123		2	–	–			
31	Clip – moulding to roof	SP001		2	–	–			
32	Washer – moulding to roof	LWZ403		2	–	–			
33	Screw – moulding to roof	PTZ810		2	–	–			

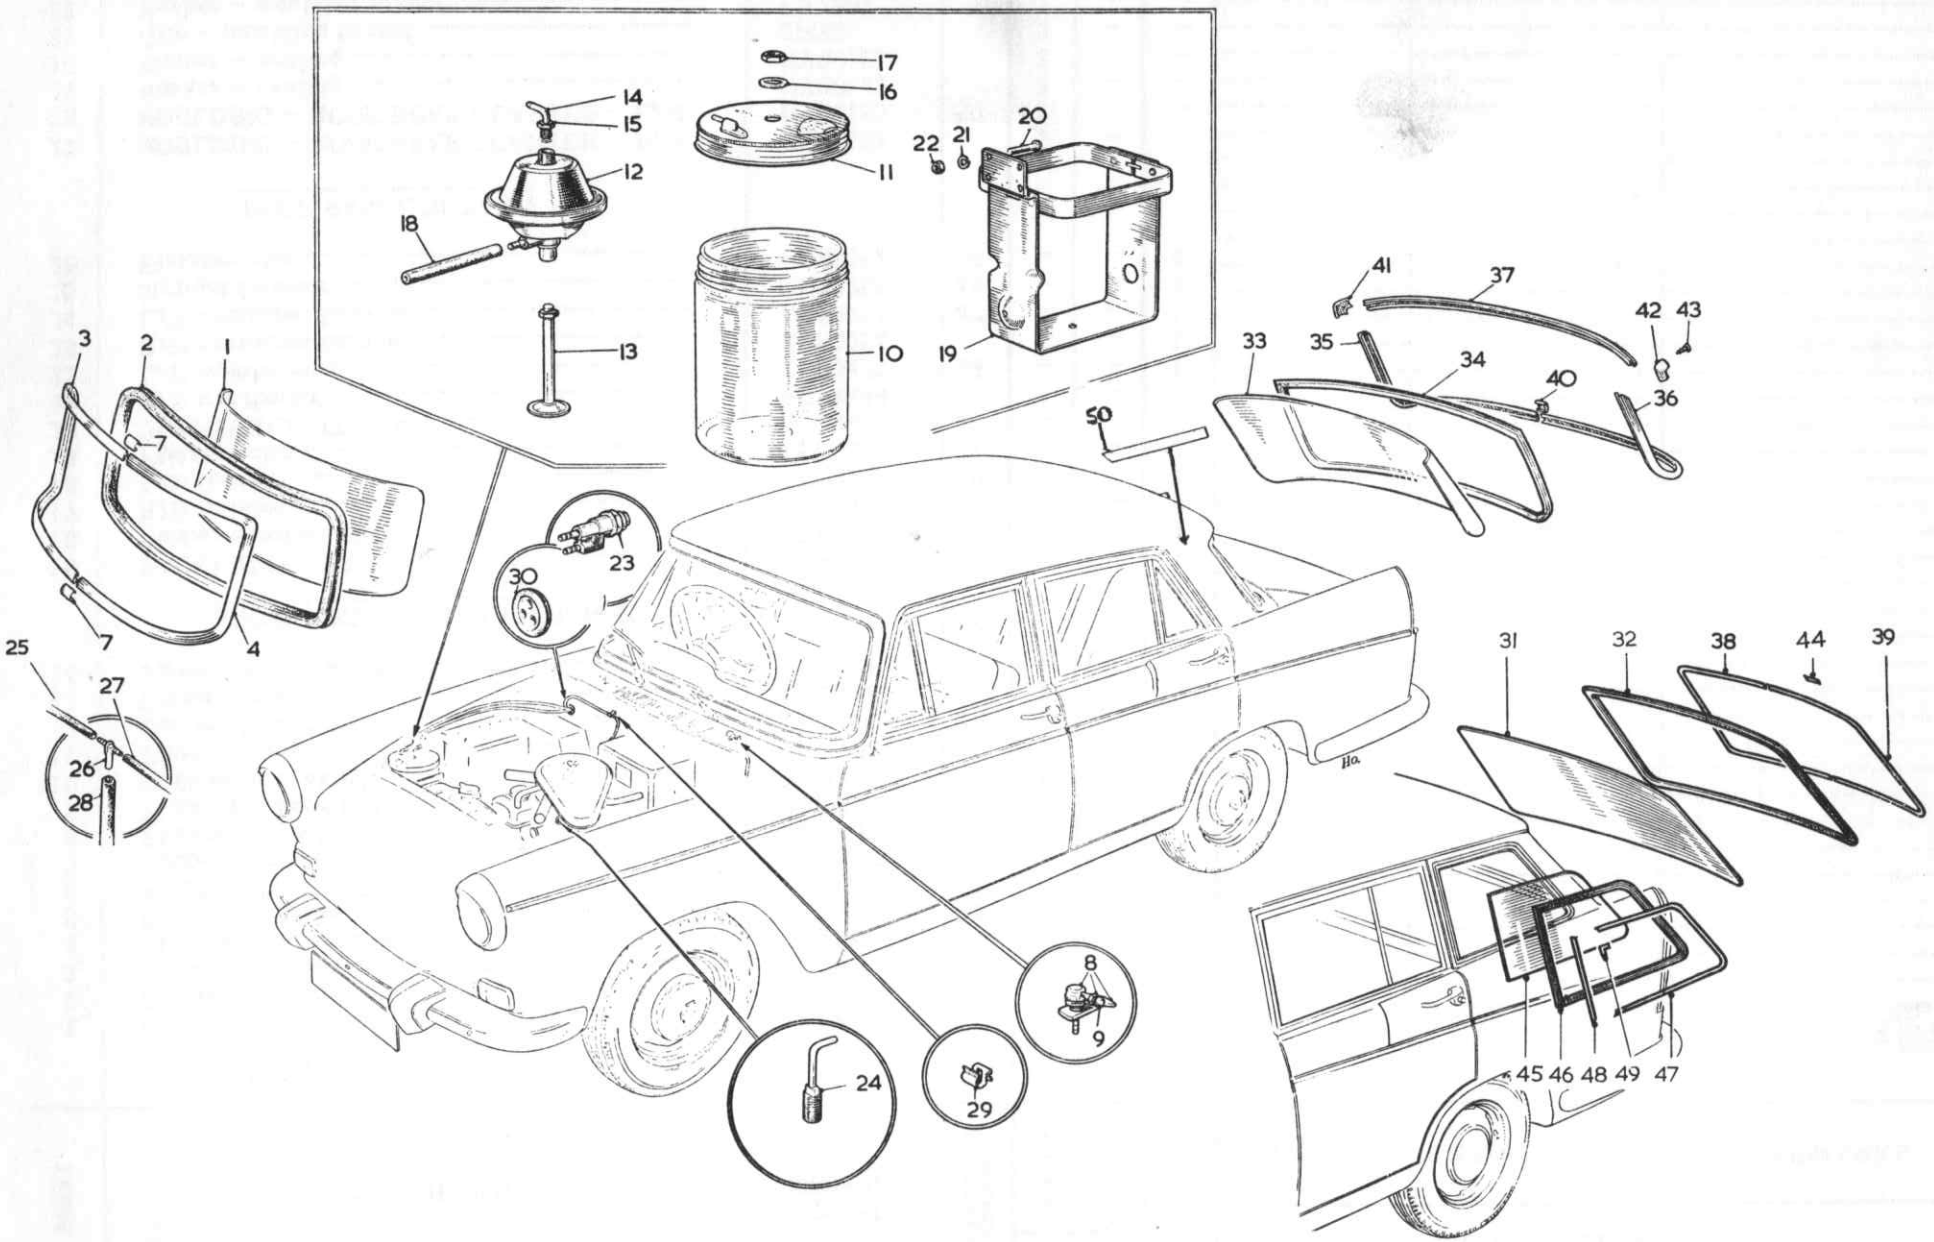

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R 30 and R31


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	WINDSCREEN WASHER								
1	JET ASSEMBLY	37H9848	8	–	2	–			
2	Jet	37H9847	9	–	2	–			
3	LIQUID CONTAINER & pump assembly	37H9640		–	1	–			
4	Container	7H1960	10	–	1	–			
5	Cover – container	27H9890	11	–	1	–			
6	Pump assembly	7H1961	12	–	1	–			
7	Strainer and tube assembly	7H1962	13	–	1	–			
8	Connection – tube	37H9641	14	–	1	–			
9	Nut – tube connection	37H9643	15	–	1	–			
10	Washer – pump to cover	37H9644	16	–	1	–			
11	Nut	37H9642	17	–	1	–			
12	Tube – pump to cap	17H9997	18	–	A/R	–			
13	Bracket – container	27H9891	19	–	1	–			
14	Tube – tee piece to R/H nozzle 1/8"	17H9996	25	–	A/R	–			
15	Tube – tee piece to L/H nozzle 1/8"	17H9996	27	–	A/R	–			
16	Tube – container to tee piece & control 3/16"	17H9997	28	–	A/R	–			
17	Tube – manifold to control valve 3/16"	17H9997		–	A/R	–			
18	Screw (container to radiator mounting)	PMZ0307	20	–	3	–			
19	Spring washer (container to radiator mounting)	LWZ203	21	–	3	–			
20	Nut (container to radiator mounting)	FNZ103	22	–	3	–			
21	VALVE – washer control	ACB5823	23	–	1	–			
22	ADAPTOR – inlet manifold	AC11505	24	–	1	–			
23	Tee piece	ACG5270	26	–	1	–			
24	Clip – tube to body	ACH9221	29	–	2	–			
25	Grommet – 3 hole – tubes through dash	ADG1659	30	–	1	–			
26	JET DELIVERY ASSEMBLY	ADC4453		2	–	2			
27	WASHER KIT	N.S.P.		1	–	1			
28	Plastic bag	AYB9041		1	–	1			
29	Cover and valve assembly	AYB9042		1	–	1			
30	Strainer and tube	AYB9043		1	–	1			
31	TEE PIECE	AYB9044		1	–	1			
32	PUMP ASSEMBLY – ROTOMATIC	AYB9045		1	–	1			
33	Connector – tubing	AYB9046		6	–	6			
34	TUBING – Plastic	HYL2332		12'	–	12'			

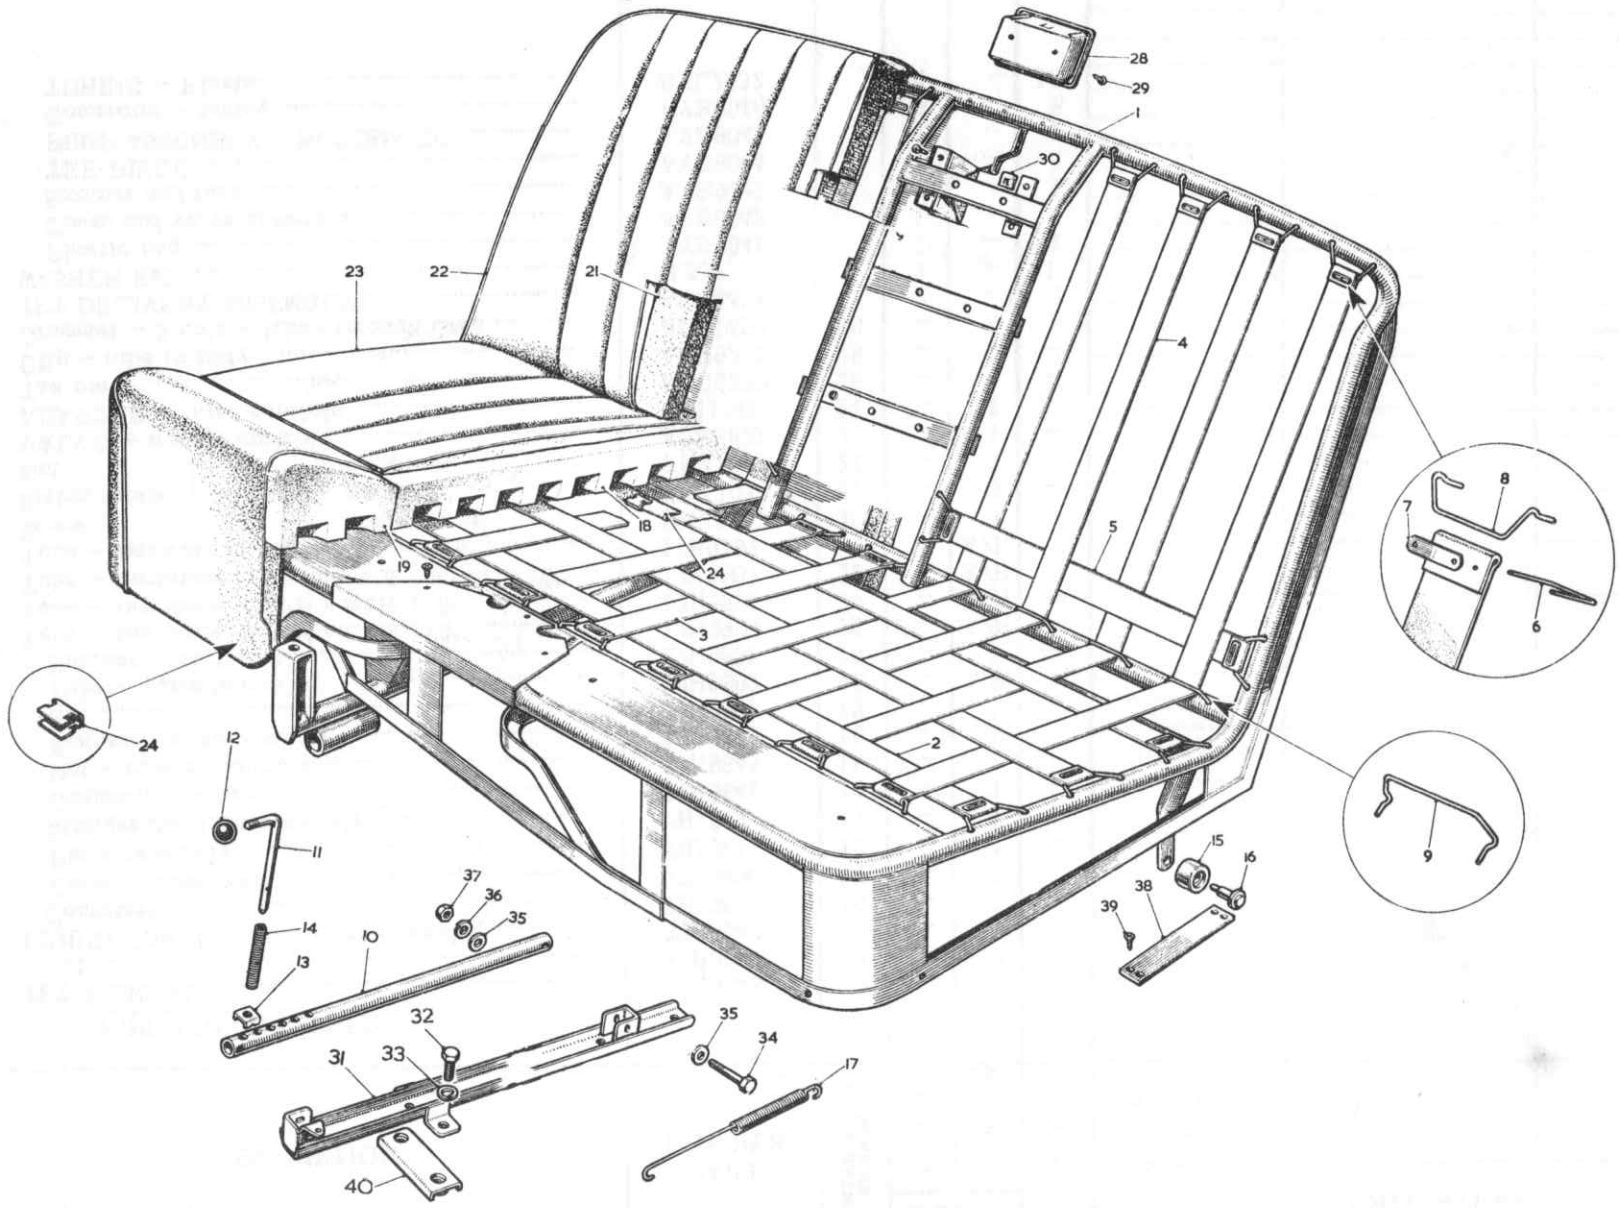

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R32 and R33


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FRONT SEATS								
1	FRONT SEAT ASSEMBLY less slide tube	HYB0364		1	—	1			
2	FRAME ASSEMBLY — less slide tube	HYH2002	1	1	—	1			
3	Strap assembly — bottom (long)	BDH3480	2	3	—	3			
4	Strap assembly — bottom (short)	BDH3481	3	2	—	2			
5	Strap assembly — back (long)	BDH3482	4	8	—	8			
6	Strap assembly — back (short)	BDH3545	5	2	—	2			
7	Staple	14A3837	6	30	—	30			
8	Backing plate	14A3838	7	30	—	30			
9	Clip — strap to frame	14A3839	8	30	—	30			
10	Clip — intermediate	14A3839	9	8	—	8			
11	Locking pin	BDH548	11	1	—	1			
12	Knob for pin	BDH1765	12	1	—	1			
13	Guide for pin	BDH1762	13	1	—	1			
14	Spring — pin	BDH1679	14	1	—	1			
15	Wheel — support	BDH1761	15	2	—	2			
16	Bearing — wheel	BDH1760	16	2	—	2			
17	CUSHION PAD	BDH1790	18	1	—	1			
18	CUSHION ROLL	BDH1788	19	1	—	1			
19	SQUAB PAD	HYH1747	21	1	—	1			
20	Trim pad — rear	BDH2451		1	—	1			
21	ASHTRAY	HYH1546	28	1	—	1			
22	Knob	HYH0185		1	—	1			
23	Plain washer	PWZ103		2	—	2			
24	Screw — ashtray to seat	PTZ604	29	2	—	2			
25	Support block — ashtray	BDH3508		2	—	2			
26	Screw — block to trim pad	CTZ604		4	—	4			
27	Screw — ashtray to fixing strap	PTZ605		2	—	2			
28	Nut	PFS306	30	2	—	2			
29	SQUAB COVER ASSEMBLY	HYB0249	22	1	—	1			
30	CUSHION COVER ASSEMBLY	HYB0238	23	1	—	1			
31	Clip — covers to frame	14A4497	24	36	—	36			
32	Clip — covers to frame	14G5507		5	—	5			
33	Cover board — centre armrest	BDH1794		1	—	1			
34	Screw — liner to squab	CTZ604		6	—	6			

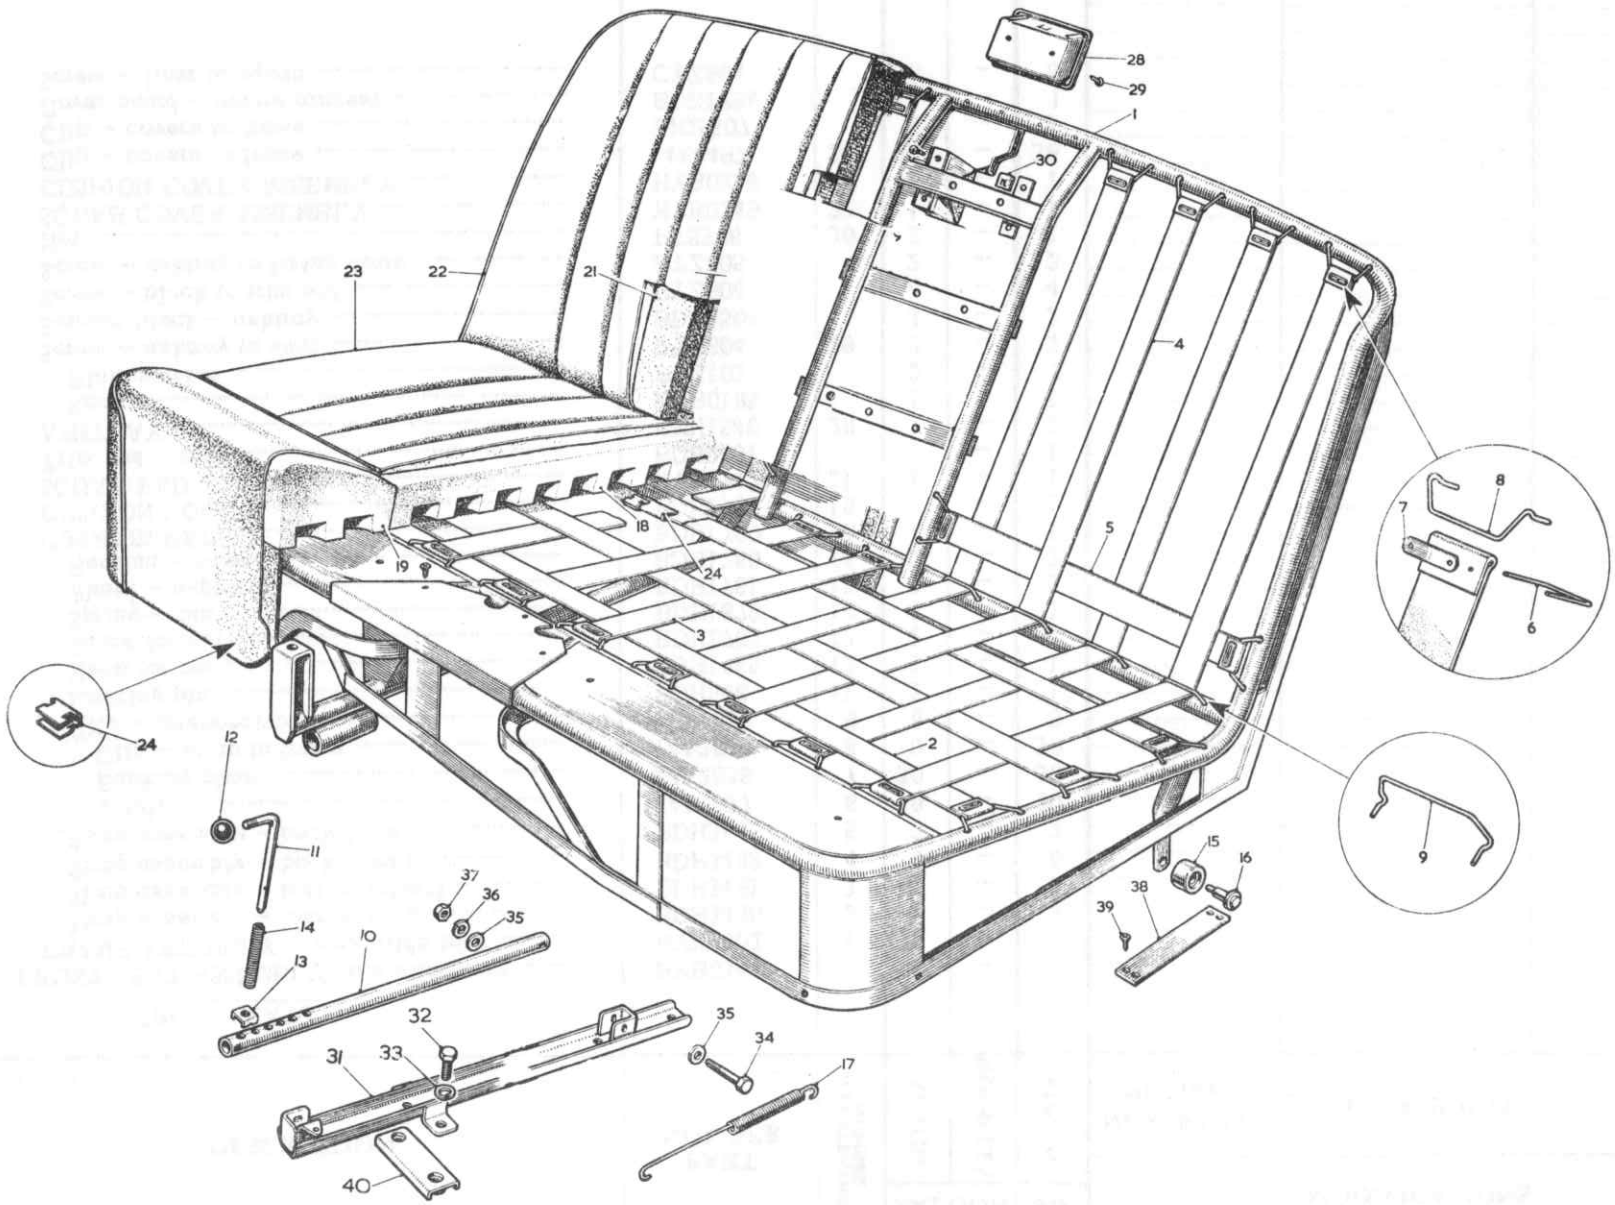

ILLUSTRATIONS TYPICAL ONLY.


TO FACE PAGE R32 and R33

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FRONT SEAT CONTINUED:								
1	GUIDE TUBE	BDH1688	10	1	–	–			
2	GUIDE TUBE	BDH4003	10	–	–	1			
3	Bracket extension – seat adjustment	HYH2654	31	1	–	–			
4	Bracket extension – seat adjustment	HYH2639	31	–	–	1			
5	Screw – bracket to floor	HZS0406	32	4	–	4			
6	Washer – for screw (spring)	LWZ204	33	4	–	4			
7	Bolt – tube to bracket	HZS0513	34	2	–	2			
8	Plain washer	PWZ105	35	4	–	4			
9	Spring washer	LWZ205	36	2	–	2			
10	Nut for bolt	FNZ105	37	2	–	2			
11	Fixing bracket – seat exten. bracket	BDH4143	40	1	–	1			
12	Screw	HPZ0608		2	–	2			
13	Washer	LWZ206		2	–	2			
14	TENSION SPRING – seat adjustment	BDH1764	17	1	–	1			
15	Rail – seat support	HYH1964	38	2	–	2			
16	Screw – rail to floor runner	CTZ604	39	8	–	8			

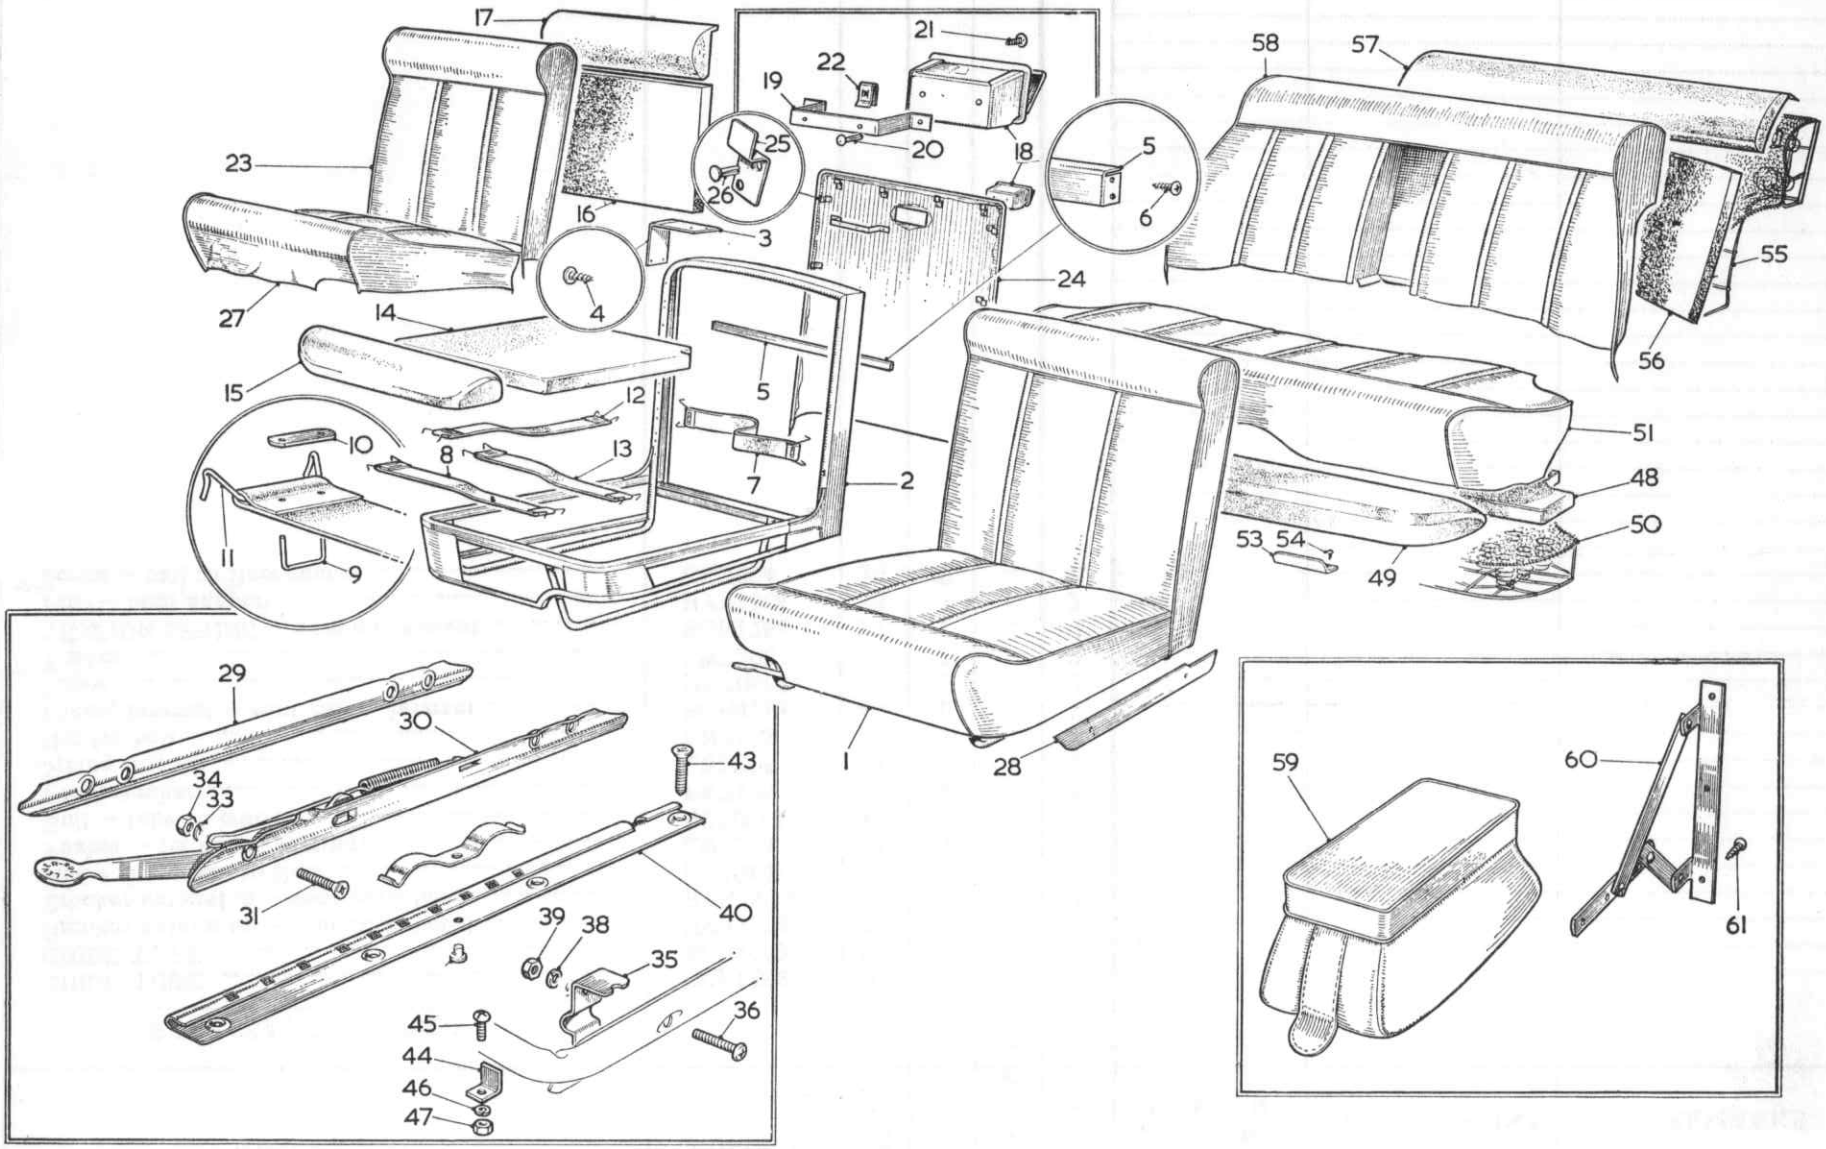

ILLUSTRATIONS TYPICAL ONLY.


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	FRONT SEATS								
1	R/H FRONT SEAT – TRIMMED	BDE447			1				
2	L/H FRONT SEAT – TRIMMED	BDE448	1		1				
3	Frame assembly – R /H	BDH3717	2		1				
4	Frame assembly – L/H	BDH3718			1				
5	Filler piece – squab corner – R/H	BDH1486	3		1				
6	Filler piece – squab corner – L/H	BDH1487			1				
7	Screw – filler piece to frame	PTZ603	4		12				
8	Angle rail – squab trimming	BDH1483	5		2				
9	Screw – rail to frame	PTZ603	6		4				
10	SQUAB STRAP ASSEMBLY – R/H & L/H seats	14G8601	7		10				
11	Staple	14A3837	9		20				
12	Backing plate	14A3838	10		20				
13	Clip	14A3839	11		20				
14	CUSHION STRAP ASSEMBLY – R/H & L/H seats	14G8690	8		6				
15	Staple	14A3837	9		12				
16	Backing plate	14A3838	10		12				
17	Clip	14A3839	11		12				
18	CUSHION STRAP ASSEMBLY – R/H & L/H seats	14B8791	12		2				
19	Staple	14A3837	9		4				
20	Backing plate	14A3838	10		4				
21	Clip	14B8450	11		4				
22	CUSHION STRAP ASSEMBLY – R/H & L/H seats	14G8599	13		6				
23	Staple	14A3837	9		12				
24	Backing plate	14A3838	10		12				
25	Clip	14B8450	11		12				
26	FRONT CUSHION PAD – R/H & L/H seats	14G8472	14		2				
27	Front cushion roll	BDH1617	15		2				
28	Front squab pad	BDH1618	16		2				
29	Front squab roll	BDH1619	17		2				
30	ASHTRAY ASSEMBLY – R/H & L/H seats	HYH1546	18		2				
31	Knob	HYH0185			2				
32	Washer	PWZ103			4				
33	Screw	PTZ604			4				
34	Bracket – ashtray	24G1119	19		2				
35	Rivet – bracket to seat	BRP906	20		4				
36	Screw – ashtray to bracket	PTZ605	21		4				
37	Spire nut	PFS506	22		4				

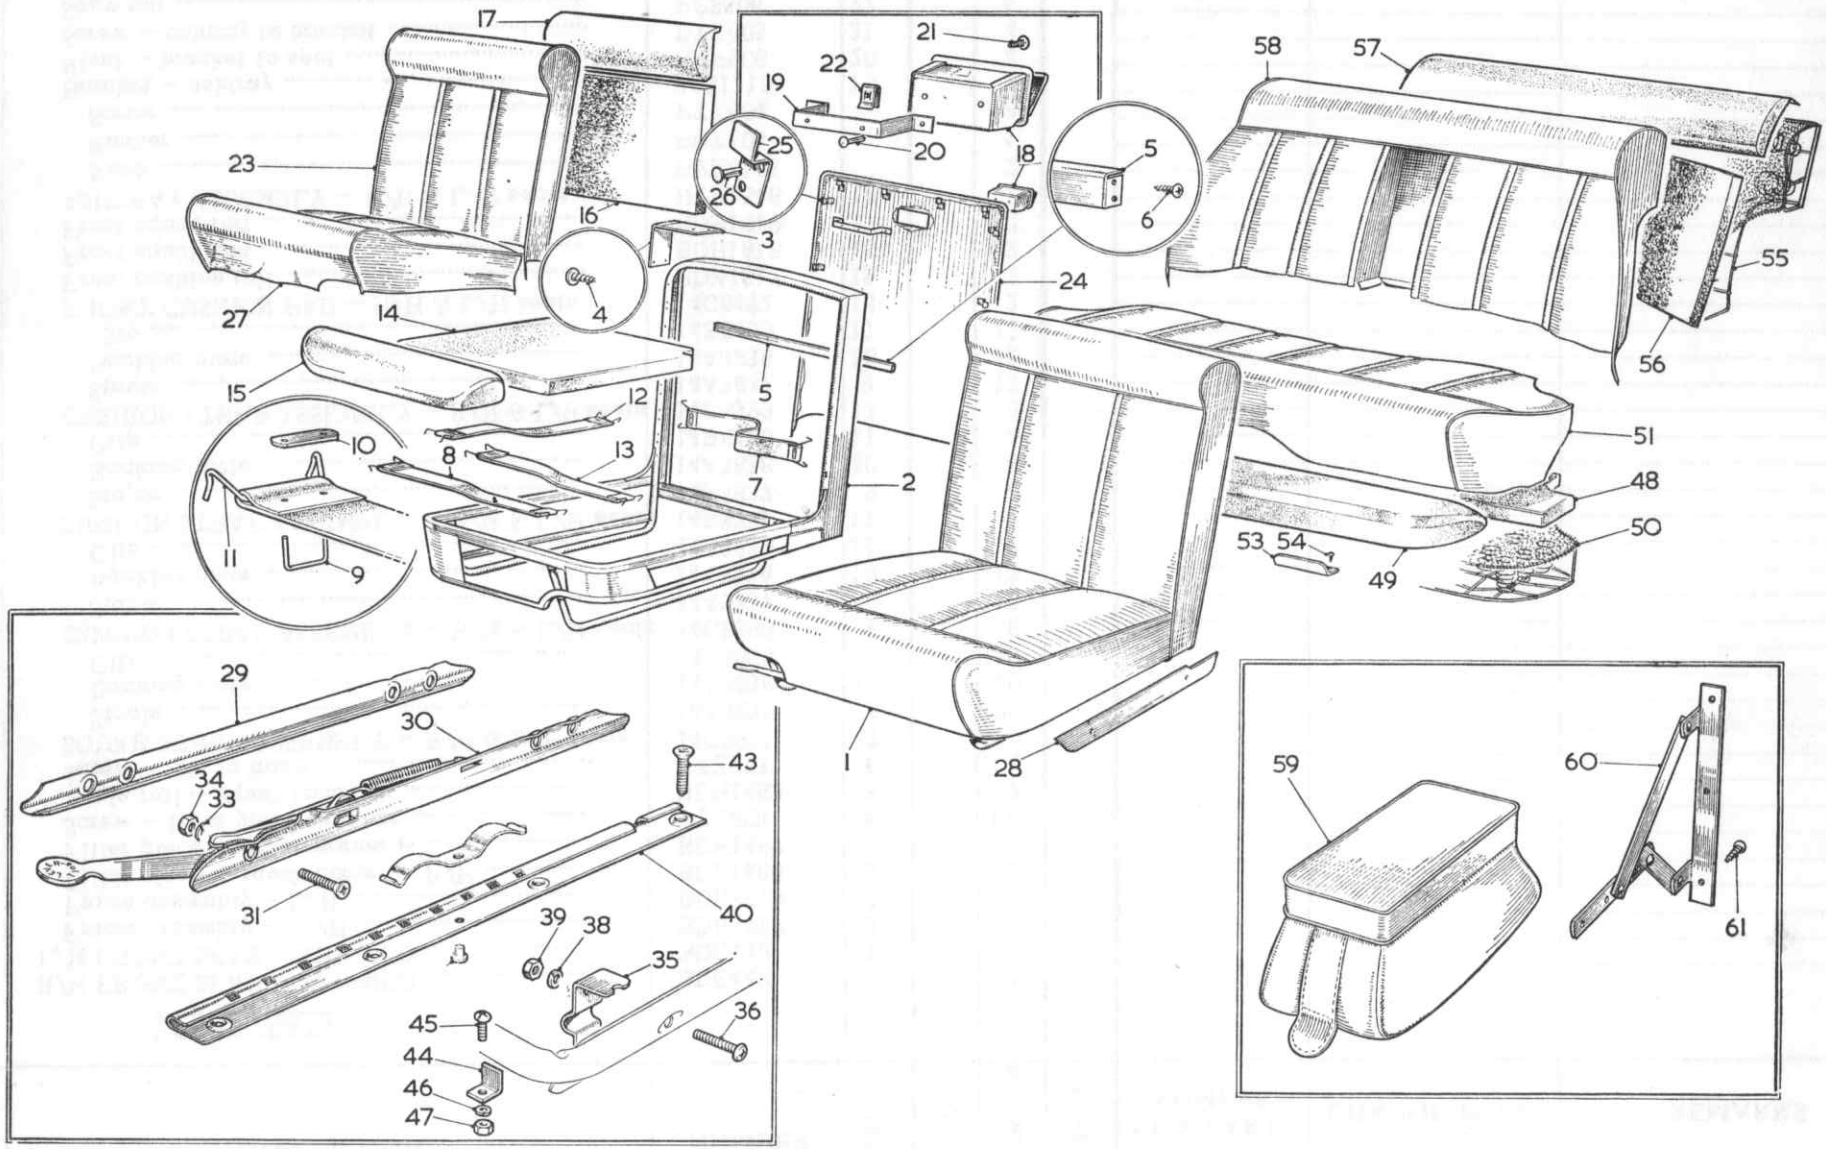

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R34, R35 and R36


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FRONT SEATS CONTINUED:								
1	COVER ASSEMBLY – R/H SQUAB	HYL2441	23		1				
2	COVER ASSEMBLY – L/H SQUAB	HYL2442			1				
3	Backboard – R/H seat	BDH1481	24		1				
4	Backboard – L/H seat	BDH1482			1				
5	Clip – backboards to seats	14B7867	25		26				
6	Rivet – trim clips	BRP906	26		52				
7	COVER ASSEMBLY – R/H CUSHION	HYL2443	27		1				
8	COVER ASSEMBLY – L/H CUSHION	HYL2444			1				
9	R/H filler piece – valance	24G1587			1				
10	L/H filler piece – valance	24G1588	28		1				
11	Clip	4B3600			2				
12	SEAT SLIDE – PLAIN	ADH525	29		2				
13	SEAT CATCH R/H	ADH526	30		1				
14	SEAT CATCH L/H	ADH527			1				
15	Screw – slide and	CMZ0422	31		4				
16	Screw – catch to	CMZ0424			4				
17	Washer – seat	LWZ204	33		8				
18	Nut – frame	FNZ104	34		8				
19	Safety catch bracket	14G8911	35		2				
20	Screw, bracket to seat	PMZ0428	36		2				
21	Spring washer for screw	LWZ204	38		2				
22	Nut for screw	FNZ104	39		2				
23	RAIL – SEAT GUIDE – R/H	14B7808			2				
24	RAIL – SEAT GUIDE – L/H	14B7809	40		2				
25	Screw – rail to floor	CPZ0410	43		16				
26	Bracket stop	24G721	44		1				
27	Screw for stop	PMZ0308	45		1				
28	Spring washer for screw	LWZ203	46		1				
29	Nut for screw	FNZ103	47		1				

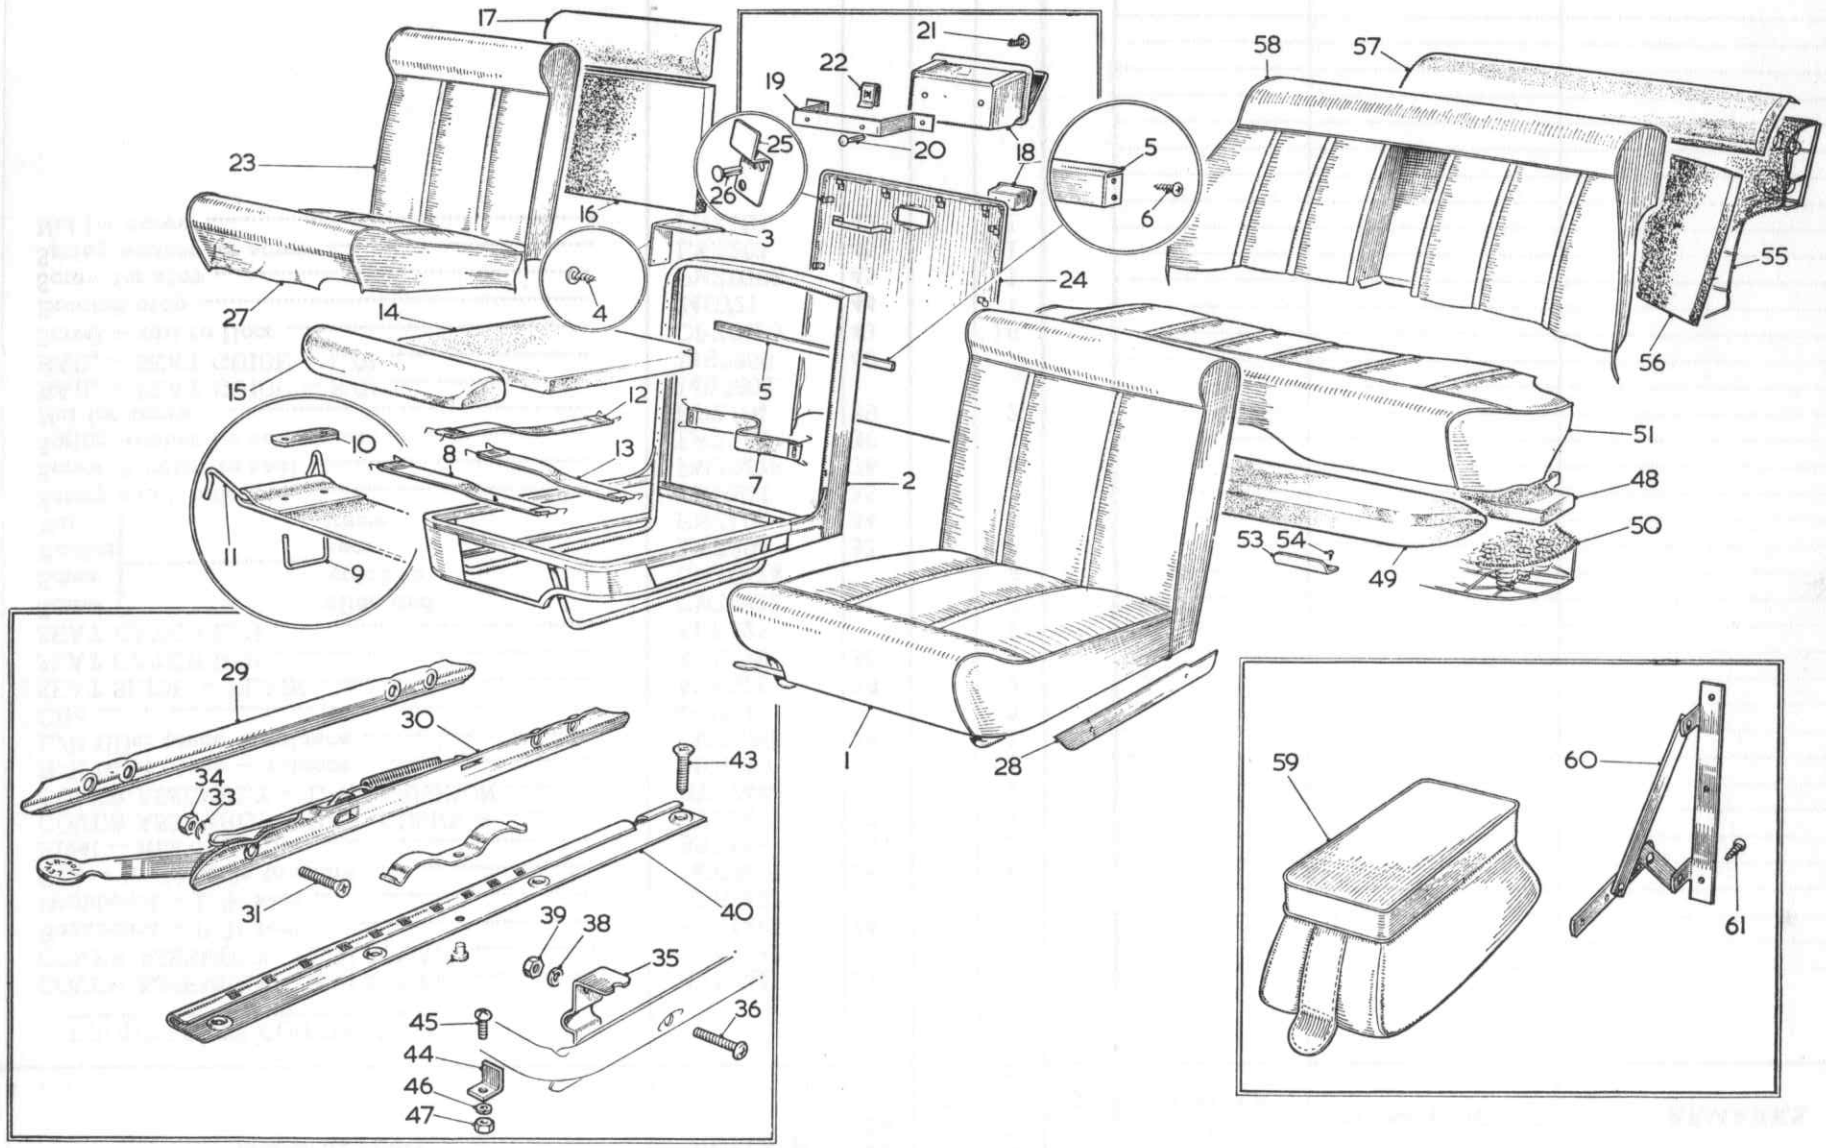

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE R34, R35 and R36


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	REAR SEAT								
1	CUSHION ASSEMBLY – REAR	HYB0632		1	–	–			
2	CUSHION ASSEMBLY – REAR	HYB0694		–	1	–			
3	Frame and spring assembly	HYB0337	50	1	1	–			
4	Pad – rear cushion – rear	HYB0352	48	1	–	–			
5	Pad – rear cushion – rear	HYB0353		–	1	–			
6	Roll cushion	24G1177		1	–	–			
7	Roll cushion	BDH3563	49	–	1	–			
8	COVER ASSEMBLY – CUSHION	HYB0635		1	–	–			
9	COVER ASSEMBLY – CUSHION	HYB0695	51	–	1	–			
10	Angle cushion retaining	ADB4497	53	2	2	–			
11	Screw – angle to body	PTZ804	54	6	6	–			
12	SQUAB ASSEMBLY – REAR	HYB651		1	–	–			
13	SQUAB ASSEMBLY – REAR – C/W ARM REST	HYB0744		–	1	–			
14	Frame and spring assembly	HYB0338		1	–	–			
15	Frame and spring assembly	HYB0339	55	–	1	–			
16	Pad – rear squab	HYB0274		1	–	–			
17	Pad – roll – rear squab	HYB0767	57	–	1	–			
18	Pad – rear – squab sides	HYB0747	56	–	2	–			
19	Cover assembly – squab	HYB0654		1	–	–			
20	Cover assembly – squab	HYB0748	58	–	1	–			
21	ARM REST ASSEMBLY – REAR SQUAB	HYB0773	59	–	1	–			
22	Cover assembly – rear arm rest	HYB0774		–	1	–			
23	Cover assembly – bottom	HYB0777		–	1	–			
24	Hinge – arm rest R/H	BDH1708		–	1	–			
25	Hinge – arm rest L/H	BDH1709	60	–	1	–			
26	Screw – arm rest hinge to squab	CTZ804	61	–	6	–			
27	Cover assembly Centre arm rest aperture	HYB0783		–	1	–			
28	Screw for cover	CTZ603		–	4	–			

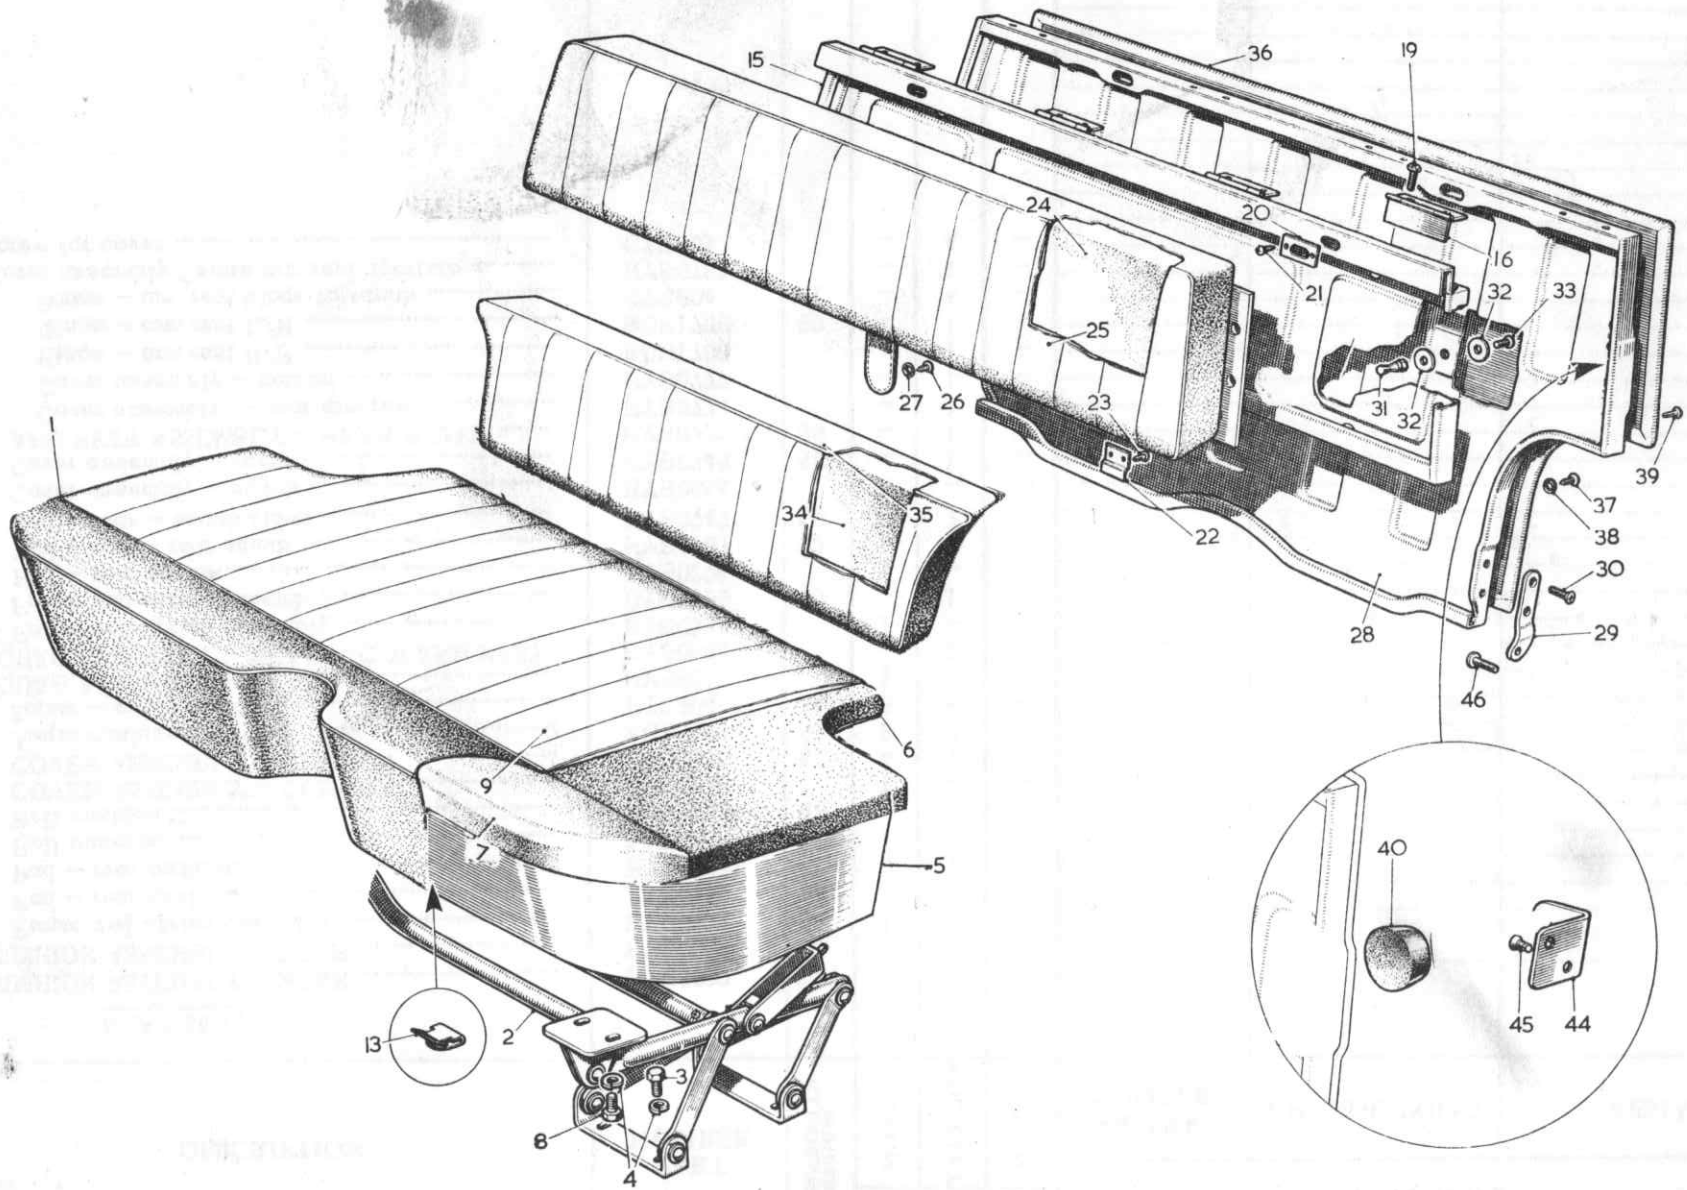

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R 37 and R 38

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	REAR SEAT								
1	CUSHION ASSEMBLY REAR	HYB0538	1	–	–	1			
2	Pan assembly	HYB0630	5	–	–	1			
3	Pad assembly	HYB0493	6	–	–	1			
4	Roll – rear cushion	BDH3835	7	–	–	1			
5	Cover assembly	HYB0539	9	–	–	1			
6	Clip – trim	SPO92		–	–	14			
7	Clip – trim	14A4497	13	–	–	10			
8	SUPPORT FRAME ASSEMBLY	BDH3988	2	–	–	1			
9	Screw – support	PMZ0412	3	–	–	8			
10	Washer – spring – frame	LWZ204	4	–	–	8			
11	Washer – flat – to floor	PWZ104		–	–	8			
12	Screw – support	PMZ0408	8	–	–	4			
13	Washer – spring – frame to	LWZ204	4	–	–	4			
14	Washer – flat – seat pan	PWZ104		–	–	4			
15	Washer – rubber – cushion rail spigot	ADA2618		–	–	2			
16	SQUAB PANEL ASSEMBLY – UPPER	BZC1553	15	–	–	1			
17	Wearing plate	BDH4418	20	–	–	2			
18	Screw – plate to panel	RTZ603	21	–	–	4			
19	REAR SQUAB UPPER PORTION ASSEMBLY	HYB0521		–	–	1			
20	Squab pad – upper	BDH3819	24	–	–	1			
21	Cover – upper squab pad	HYB0522	25	–	–	1			
22	Pull – squab upper	HYH1976		–	–	1			
23	Screw – pull to	RTZ604	26	–	–	2			
24	Washer – squab	FWP106	27	–	–	2			
25	SQUAB PANEI ASSEMBLY – LOWER	BZC1554	28	–	–	1			
26	Hinge – R/H – lower panel	HYH2470		–	–	1			
27	Hinge – L/H – lower panel	HYH2471	29	–	–	1			
28	Screw – hinge to	HZS0405	30	–	–	4			
29	Washer – spring – lower	LWZ204		–	–	4			
30	Washer – flat – panel	PWZ104		–	–	4			
31	Screw – upper panel hinge to lower panel	PMZ0408	19	–	–	8			
32	Stud – ball	BDA503	31	–	–	2			
33	Washer for stud screw	BDH3908	32	–	–	4			
34	Screw – stud to panel	AJD1244	33	–	–	2			
35	Screw – upper and lower panels to squab	PTZ1005		–	–	12			

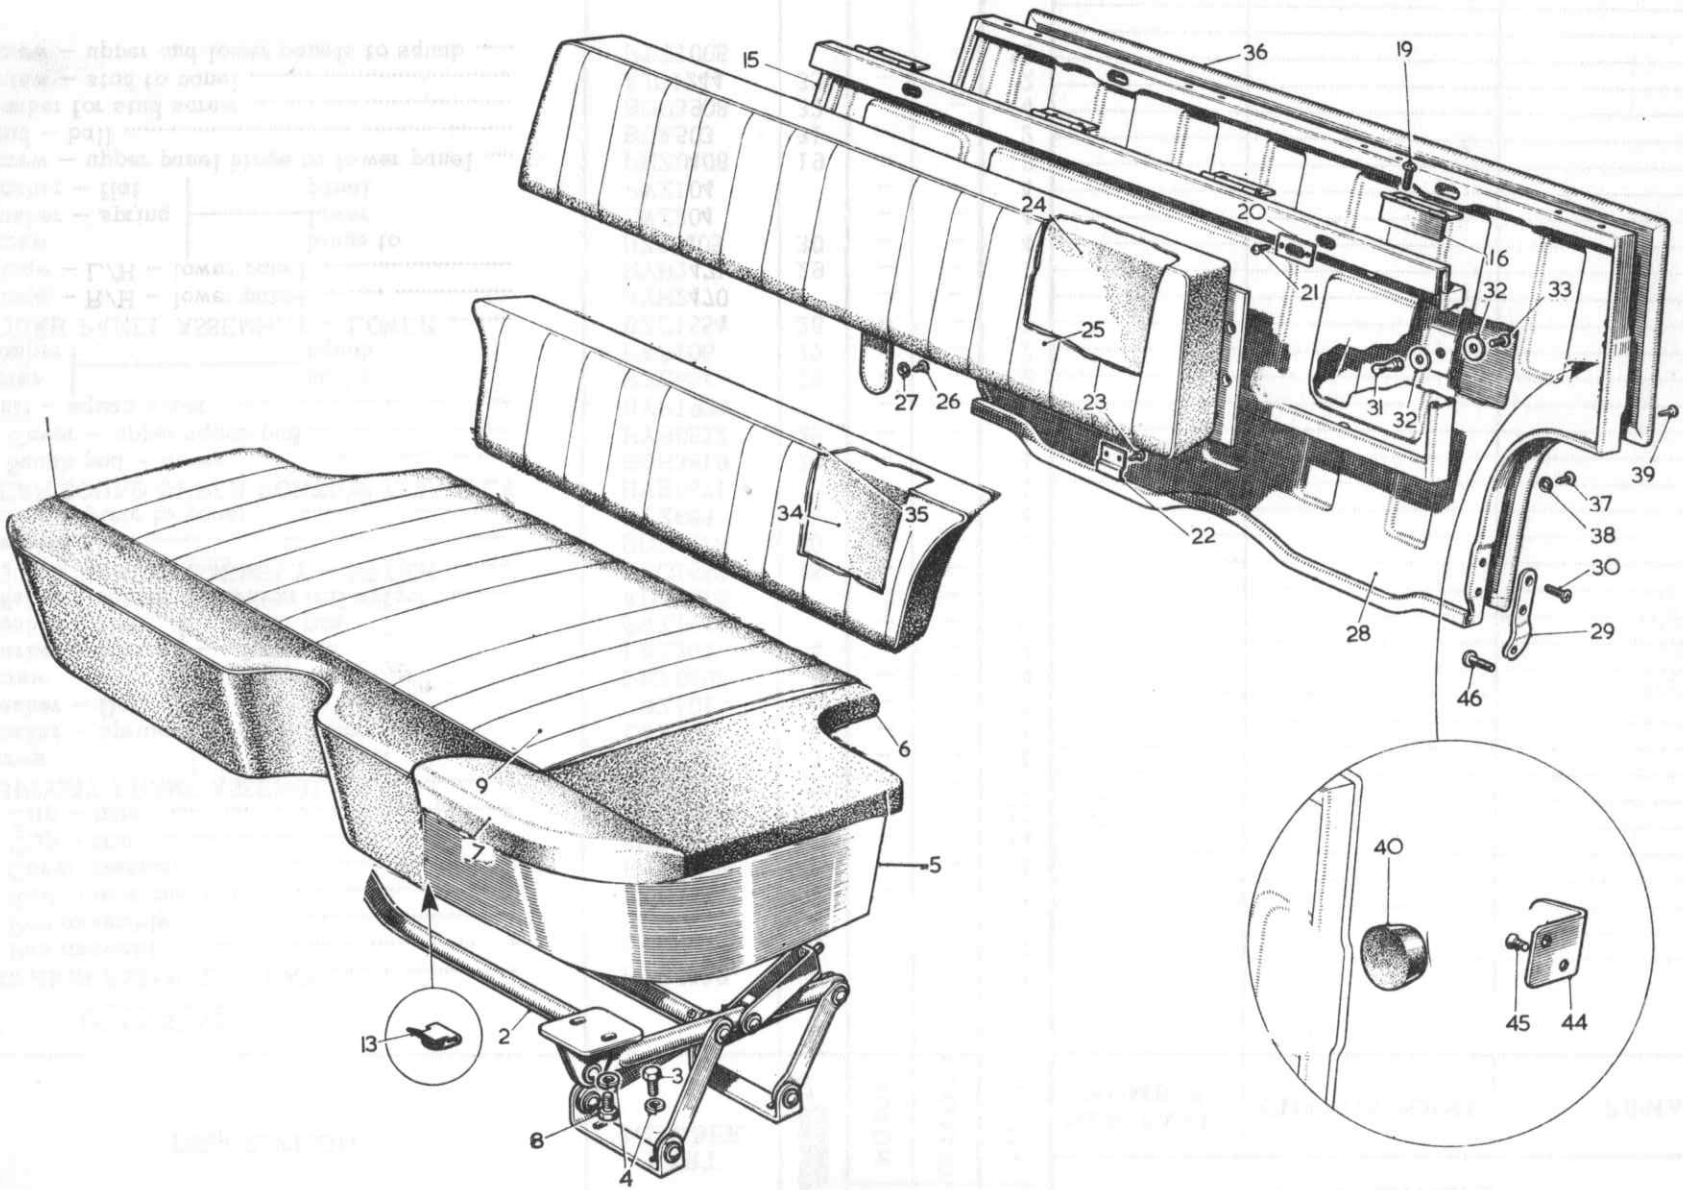

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R 37 and R 38


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	REAR SEAT CONTINUED								
1	REAR SQUAB LOWER PORTION ASSEMBLY	HYB0507		–	–	1			
2	SQUAB PAD – LOWER	BDH3820	34	–	–	1			
3	COVER – lower squab	HYB0508	35	–	–	1			
4	MAT ASSEMBLY – SQUAB BACK	HYH1862	36	–	–	1			
5	Screw – carpet to rear squab back	RTZ604	39	–	–	4			
6	Washer for screw	FWP106	38	–	–	8			
7	Rivet – carpet to squab – back	SYR0116	39	–	–	2			
8	R/H bracket assembly — squab stop	HYB0458		–	–	1			
9	L/H bracket assembly — squab stop	HYB0459	44	–	–	1			
10	Buffer – rear squab	HYB0454	40	–	–	2			
11	Screw – bracket to body	RPZ0412	45	–	–	4			
12	Screw – L/H side – squab to body	PMZ0414	46	–	–	1			
13	R/H SQUAB STRAP ASSEMBLY	HYB0478	–	–	–	1			
14	L/H SQUAB STRAP ASSEMBLY	HYB0479		–	–	1			
15	Stud — squab strap to quarter panel	SP088		–	–	2			
16	Screw — squab strap to quarter panel	RTP604		–	–	4			
17	Nut — squab strap to quarter panel	PFS206		–	–	4			

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	TRIM DETAILS								
1	TRIM PAD – R/H FRONT DOOR	HYB0166		1	–	1			
2	TRIM PAD – R/H FRONT DOOR	HYB0230		–	1	–			
3	TRIM PAD – L/H FRONT DOOR	HYB0167		1	–	1			
4	TRIM PAD – L/H FRONT DOOR	HYB0231		–	1	–			
5	Clip for trim pad	13H201		34	34	34			
6	Cup – trim clip	14G6728		34	34	34			
7	TRIM PAD – R/H REAR DOOR	HYB0178		1	–	1			
8	TRIM PAD – R/H REAR DOOR	HYB0182		–	1	–			
9	TRIM PAD – L/H REAR DOOR	HYB0179		1	–	1			
10	TRIM PAD – L/H REAR DOOR	HYB0183		–	1	–			
11	Cup – trim clip	14G6728		24	24	24			
12	Clip for trim pad	13H201		24	24	24			
13	Retainer – trim pad – front door – top	HYB0147		2	–	2			
14	Retainer – trim pad – rear door – top	HYB0148		2	–	2			
15	Rivet for retainer	ADB2582		20	–	20			
16	ARM REST – R/H REAR DOOR	HYB0154		1	1	–			
17	ARM REST – L/H REAR DOOR	HYB0155		1	1	–			
18	SCUTTLE LINER R/H	24G1026		1	1	1			
19	SCUTTLE LINER L/H	24G1027		1	1	1			
20	Screw for liner	RTZ604		2	2	2			
21	Cup washer for screw	FWP106		2	2	2			
22	LINER – CENTRE PILLAR	HYH1052		2	2	2			
23	Clip for liner	13H201		14	14	14			
24	Cup – trim clip	14G6728		14	14	14			
25	LINER – REAR PARCEL SHELF	HYB0824		1	1	–			
26	Clip for liner	SP033		3	3	–			
27	LINER – BOOT – R/H SIDE	24G1351		–	1	–			
28	LINER – BOOT – L/H SIDE	24G1352		–	1	–			
29	Screw – liner to body	PTZ603		–	6	–			
30	Screw – liner to body	RTZ606		–	6	–			
31	Cup washer for screw	FWP106		–	6	–			

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	TRIM DETAILS CONTINUED:								
1	COVER ASSEMBLY – R/H WHEELARCH	HYB0582		–	–	1			
2	COVER ASSEMBLY – R/H WHEELARCH	HYB0674		1	1	–			
3	COVER ASSEMBLY – L/H WHEELARCH	HYB0583		–	–	1			
4	COVER ASSEMBLY – L/H WHEELARCH	HYB0675		1	1	–			
5	FILLET TRIM ASSEMBLY – R/H WHEELARCH	HYB0590		–	–	1			
6	FILLET TRIM ASSEMBLY – L/H WHEELARCH	HYB0591		–	–	1			
7	Rear trim plate – rear wheelarch	BDH3830		–	–	2			
8	REAR QUARTER CASING R/H	HYH1610		–	–	1			
9	REAR QUARTER CASING L/H	HYH1611		–	–	1			
10	Trimclip – rear quarter casing	13H201		–	–	22			
11	REAR HEADER CASING	HYH1991		–	–	1			
12	Screw – header casing	RTZ606		–	–	2			
13	Washer for screw	FWP106		–	–	2			
14	Trimclip – header casing	13H201		–	–	6			
15	Cover – petrol tank side	HYB0267		1	1	–			
16	Cover – petrol pump access	HYB0268		1	1	–			
17	Cover – petrol tank – centre	HYB0146		1	1	–			
18	Speed nut — fixing	SP098		2	2	–			
19	Cup washer — covers	FWP106		9	9	–			
20	Screw — petrol tank	RTZ604		9	9	–			
21	SEALING RUBBER – R/H FRONT DOOR	24G1511		1	1	1			
22	SEALING RUBBER – L/H FRONT DOOR	24G1512		1	1	1			
23	SEALING RUBBER – R/H REAR DOOR	24G1513		1	1	–			
24	SEALING RUBBER – R/H REAR DOOR	BDH4256		–	–	1			
25	SEALING RUBBER – L/H REAR DOOR	24G1514		1	1	–			
26	SEALING RUBBER – L/H REAR DOOR	BDH4256		–	–	1			
27	INNER SEAL – FRONT & REAR DOORS	ADE9536		4	4	–			
28	INNER SEAL – FRONT DOORS	ADE9536		–	–	2			
29	INNER SEAL – REAR DOORS	ADE9536		–	–	2			
30	Trim clip – inner seals to doors	ADH3809		178	178	186			
31	Trim clip – inner seals around wheelarch	14A6797		18	18	18			

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	ROOF LINING								
1	ROOF LINING	HYH1722		1	1	–			
2	LISTING RAIL – FRONT	24G906		1	1	–			
3	LISTING RAIL – INTERMEDIATE FRONT	24G907		1	1	–			
4	LISTING RAIL – CENTRE	24G908		1	1	–			
5	LISTING RAIL – REAR INTERMEDIATE	24G909		1	1	–			
6	LISTING RAIL – REAR	24G910		1	1	–			
7	Screw – rear rail to cantrail	CTZ604		4	4	–			
8	TRIM COVERING UNDER BACKLIGHT	HYH0920		1	1	–			
9	ROOF LINING	HYH1856		–	–	1			
10	LISTING RAIL – FRONT	24G906		–	–	1			
11	LISTING RAIL – FRONT INTERMEDIATE	24G907		–	–	1			
12	LISTING RAIL – number 3	BDH3797		–	–	1			
13	LISTING RAIL – number 4	BDH3798		–	–	1			
14	LISTING RAIL – number 5	BDH3799		–	–	1			
15	LISTING RAIL – rear	BDH3800		–	–	1			
16	Tensioning wire	24G1414		–	–	4			
17	Screw – rear rail to cantrail	CTZ604		–	–	10			
	SUN VISOR								
18	SUN VISOR	HYB0685		2	2	2			
19	Extension	HYB0270		2	2	2			
20	Screw to header panel	RTZ1005		6	6	6			
21	Retainer	ADB5860		2	2	2			
22	Screw – retainer	RTZ604		4	4	4			


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	MATS AND CARPETS								
1	MAT ASSEMBLY – FRONT FLOOR	HYB0282		1	–	1			
2	FRONT CARPET – R/H SIDE	HYB0292		–	1	–			
3	FRONT CARPET – L/H SIDE	HYB0293		–	1	–			
4	FRONT CARPET – FRONT TUNNEL	HYB0287		–	1	–			
5	COVER – REAR HEELBOARD	HYH1504		1	–	1			
6	REAR R/H heelboard carpet	HYB0610		–	1	–			
7	REAR L/H heelboard carpet	HYB0611		–	1	–			
8	SILL COVER – FRONT – R/H	HYB0718		1	1	1			
9	SILL COVER – FRONT – L/H	HYB0719		1	1	1			
10	SILL COVER – REAR – R/H	HYB0720		1	1	1			
11	SILL COVER – REAR – L/H	HYB0721		1	1	1			
	MAT ASSEMBLY – REAR FLOOR								
12	MAT ASSEMBLY – REAR SECTION	HYB0318		1	–	1			
13	MAT ASSEMBLY – FORWARD SECTION	HYB0358		1	–	1			
14	Cover R/H outer seat riser	HYH1986		1	1	1			
15	Cover L/H outer seat riser	HYH1987		1	1	1			
16	CARPET ASSY. – REAR FLOOR – rear section	HYB0300		1	1	1			
17	MAT – REAR FLOOR – FORWARD SECTION	HYB0384		–	1	–			
18	MAT – TRUNK FLOOR	HYH1442		1	1	–			
19	MAT – REAR COMPARTMENT	HYH1744		–	–	1			
20	Stud – mat to floor	SYM002		–	–	10			
21	MAT ASSY. – LOWER TAILGATE	HYH1628		–	–	1			
22	Clip casing	13H201		–	–	12			
23	Screw to	RTZ604		–	–	4			
24	Cup washer tailgate	FWP106		–	–	4			
25	Retainer – carpet fastener	SP076		6	6	6			

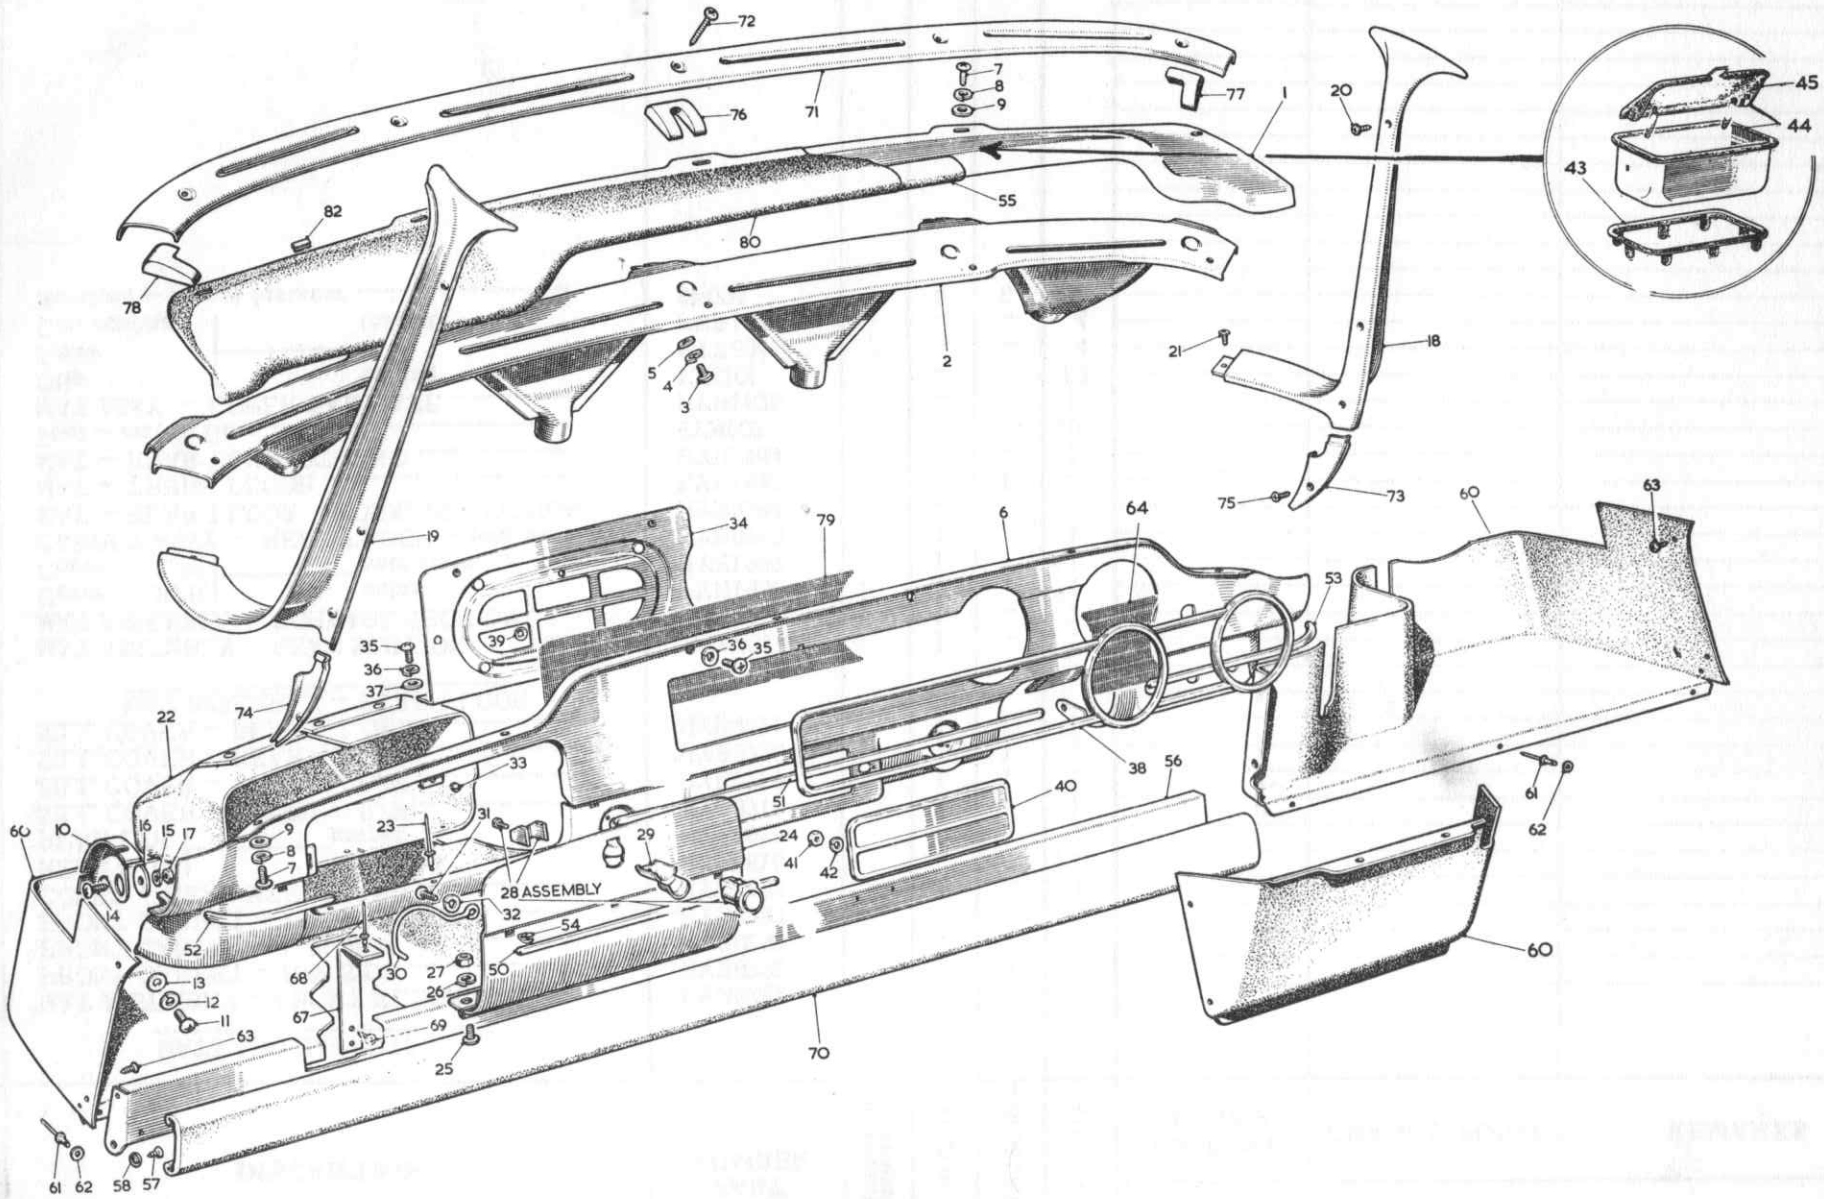

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R43, R44 and R45


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FASCIA								
1	TOP PANEL FASCIA ASSEMBLY	HYB0359	1	1		1			
2	Support panel assembly – top	BZC634	2	1		1			
3	Screw – support to body	SYS0013	3	5		5			
4	Spring washer	LWZ203	4	5		5			
5	Plain washer	PWZ204	5	5		5			
6	FRONT PANEL FASCIA ASSEMBLY	HYB0481	6	1		1			
7	Screw	PTZ1005	7	10		10			
8	Spring washer — fascia panel to body	LWZ203	8	5		5			
9	Plain washer	PWZ103	9	10		10			
10	R/H bracket – outer support	BZA1036		1		1			
11	L/H bracket – outer support	BZA1037	10	1		1			
12	Screw	PMZ0406	11	4		4			
13	Spring washer — brackets to body	LWZ204	12	4		4			
14	Plain washer	PWZ104	13	4		4			
15	Screw	PMZ0308	14	2		2			
16	Spring washer — bracket to fascia	LWZ203	15	2		2			
17	Plain washer	PWZ204	16	2		2			
18	Nut	FNZ103	17	2		2			
19	R/H FINISHER "A" POST	BDH3650	18	1		1			
20	L/H FINISHER "A" POST	BDH3651	19	1		1			
21	R/H angle attachment – fascia to "A" post	BZC648		1		1			
22	L/H angle attachment – fascia to "A" post	BZC649		1		1			
23	Screw — finisher to body	RTZ605	20	6		6			
24	Screw	PTZ603	21	2		2			
25	GLOVE BOX	HYH2032	22	1		1			
26	Rivet – box to fascia	N.S.P.	23	5		5			
27	LID – GLOVE BOX	BZC608	24	1		1			
28	Screw – lid and stay to fascia	PMZ0305	25	3		3			
29	Washer	LWZ203	26	3		3			
30	Nut	FNZ103	27	3		3			
31	CATCH – GLOVE BOX LID	BDH3595	28	1		1			
32	Pull – catch	BDH1635	29	1		1			
33	Check arm	BDH887	30	1		1			
34	Screw — check arm	PMZ0206	31	1		1			
35	Spring washer — to lid	LWZ202	32	1		1			
36	Buffer – lid	BDH3683	33	1		1			

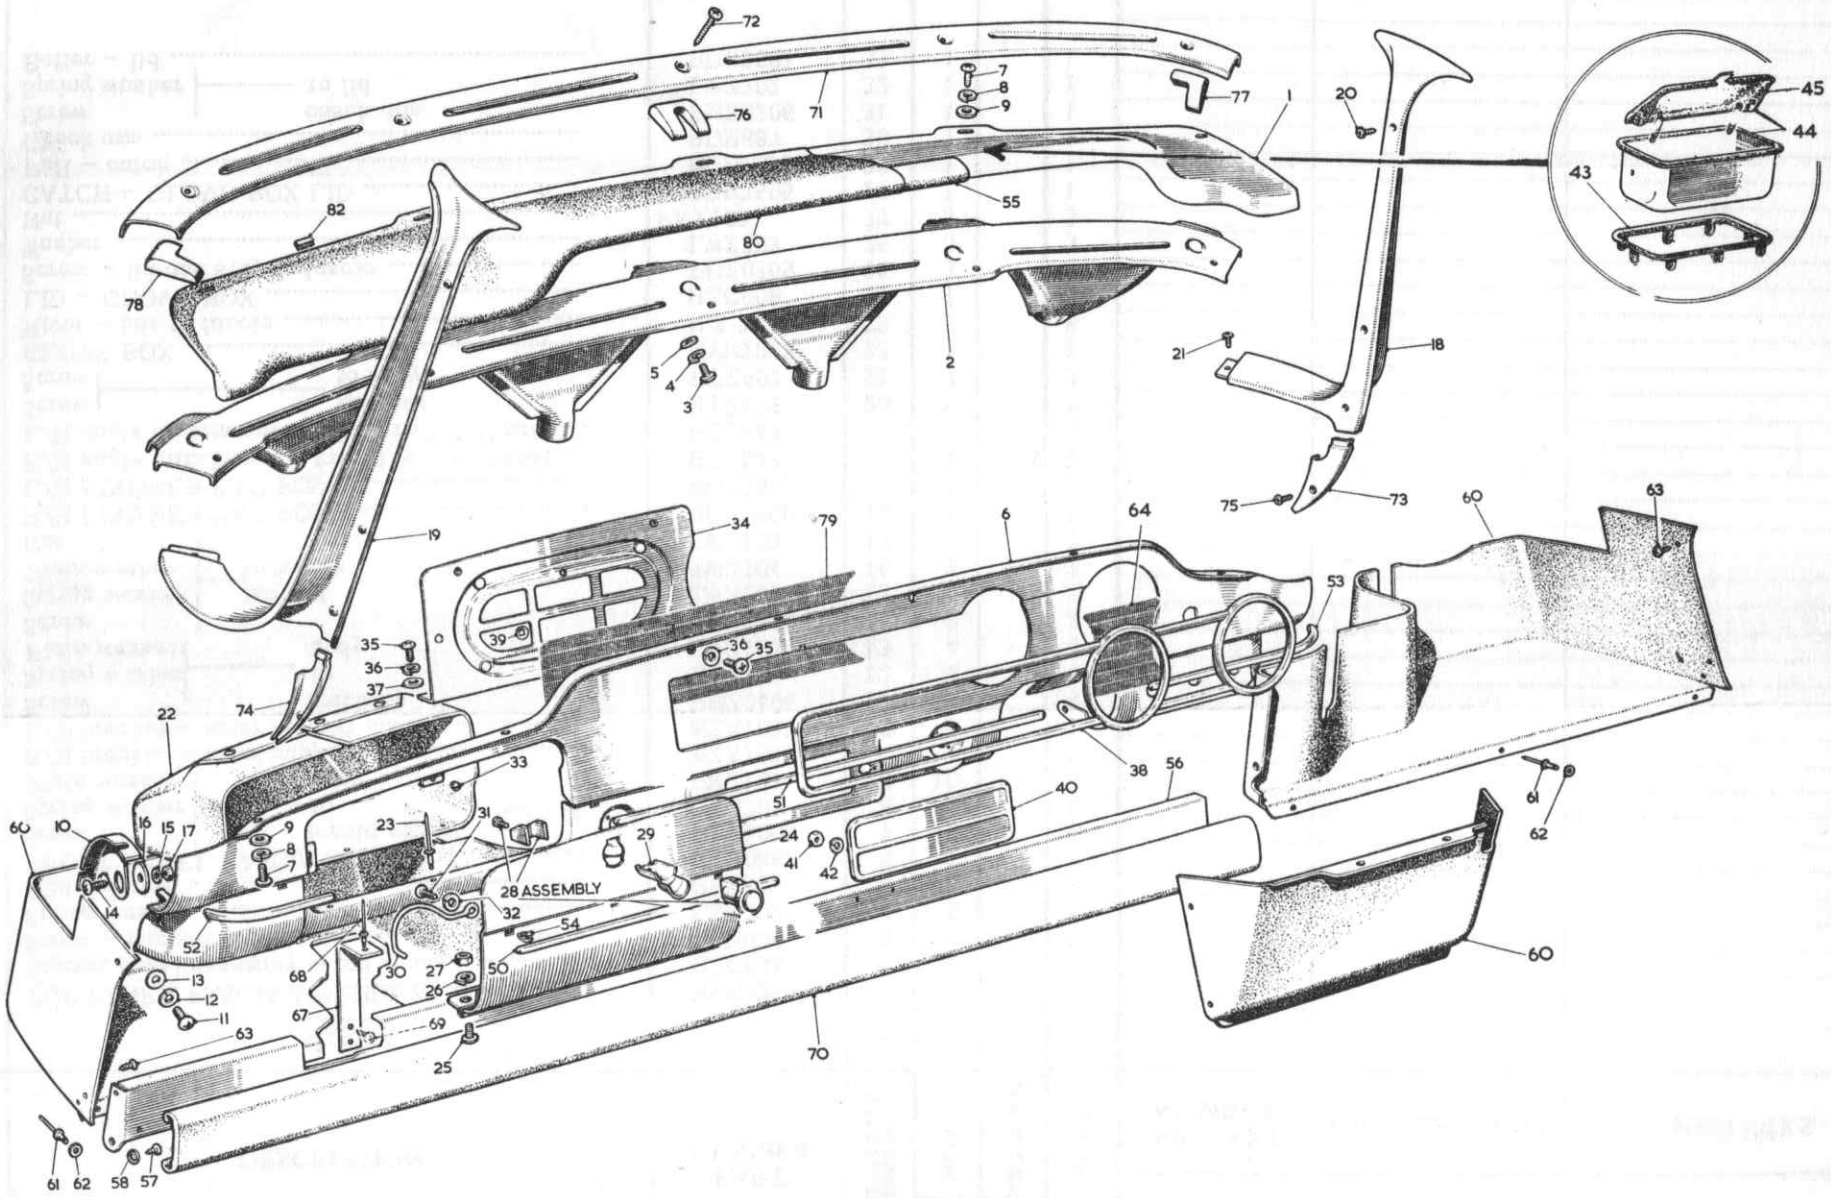

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R43, R44 and R45


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FASCIA CONTINUED:								
1	Mounting panel – speaker assembly	BZC632	34	1		1			
2	Screw | panel	PMZ0306	35	4		4			
3	Spring washer |—— to	LWZ203	36	4		4			
4	Plain washer | fascia	PWZ203	37	2		2			
5	BEZEL – speaker –H& instrument	BDH720	38	1		1			
6	Push on fix	PFS104	39	3		3			
7	Cover plate – radio aperture	BDH860	40	1		1			
8	Nut | cover plate	CNZ102	41	2		2			
9	Plain washer |—— to fascia	PWZ102	42	2		2			
10	ASHTRAY ASSEMBLY	HYH2384	44	1		1			
11	Cover	HYH2386	45	1		1			
12	Bezel – ashtray	14A6543	43	1		1			
13	BADGE – Freeway – clock aperture	HYB0081		1		1			
14	Clamping bracket – badge	BDH1463		1		1			
15	Clip – badge to fascia	SP001		1		1			
16	FINISHER – glove box	BDH741	50	1		1			
17	CENTRE FINISHER – fascia	BDH742	51	1		1			
18	FINISHER – L/H – fascia	BDH743	52	1		1			
19	FINISHER – R/H – fascia	BDH744	53	1		1			
20	Spacer – fascia finisher	BDH4299		4		4			
21	Clip – finisher to fascia	14B934	54	13		13			
22	PROTECTION PAD – FASCIA	BDH861	55	1		1			
23	Clip	SP092		24		24			
24	Support – parcel tray	HYH1305	56	1		1			
25	Screw | support and parcel tray	RTZ604	57	4		4			
26	Cup washer |—— to dash side	FWP106	58	4		4			
27	PARCEL TRAY	HYB0237	60	1		1			
28	Rivet | tray to	N.S.P.	61	8		8			
29	Washer |—— Support	PWZ102	62	8		8			
30	Screw – parcel tray to dash side	PTZ804	63	4		4			
31	Bracket – parcel tray L/H	BDH3546	67	1		1			
32	Rivet | parcel tray to	N.S.P.	68	1		1			
33	Washer |—— channel support	PWZ102		1		1			
34	Screw – bracket to dash – lower	PTZ603	69	2		2			

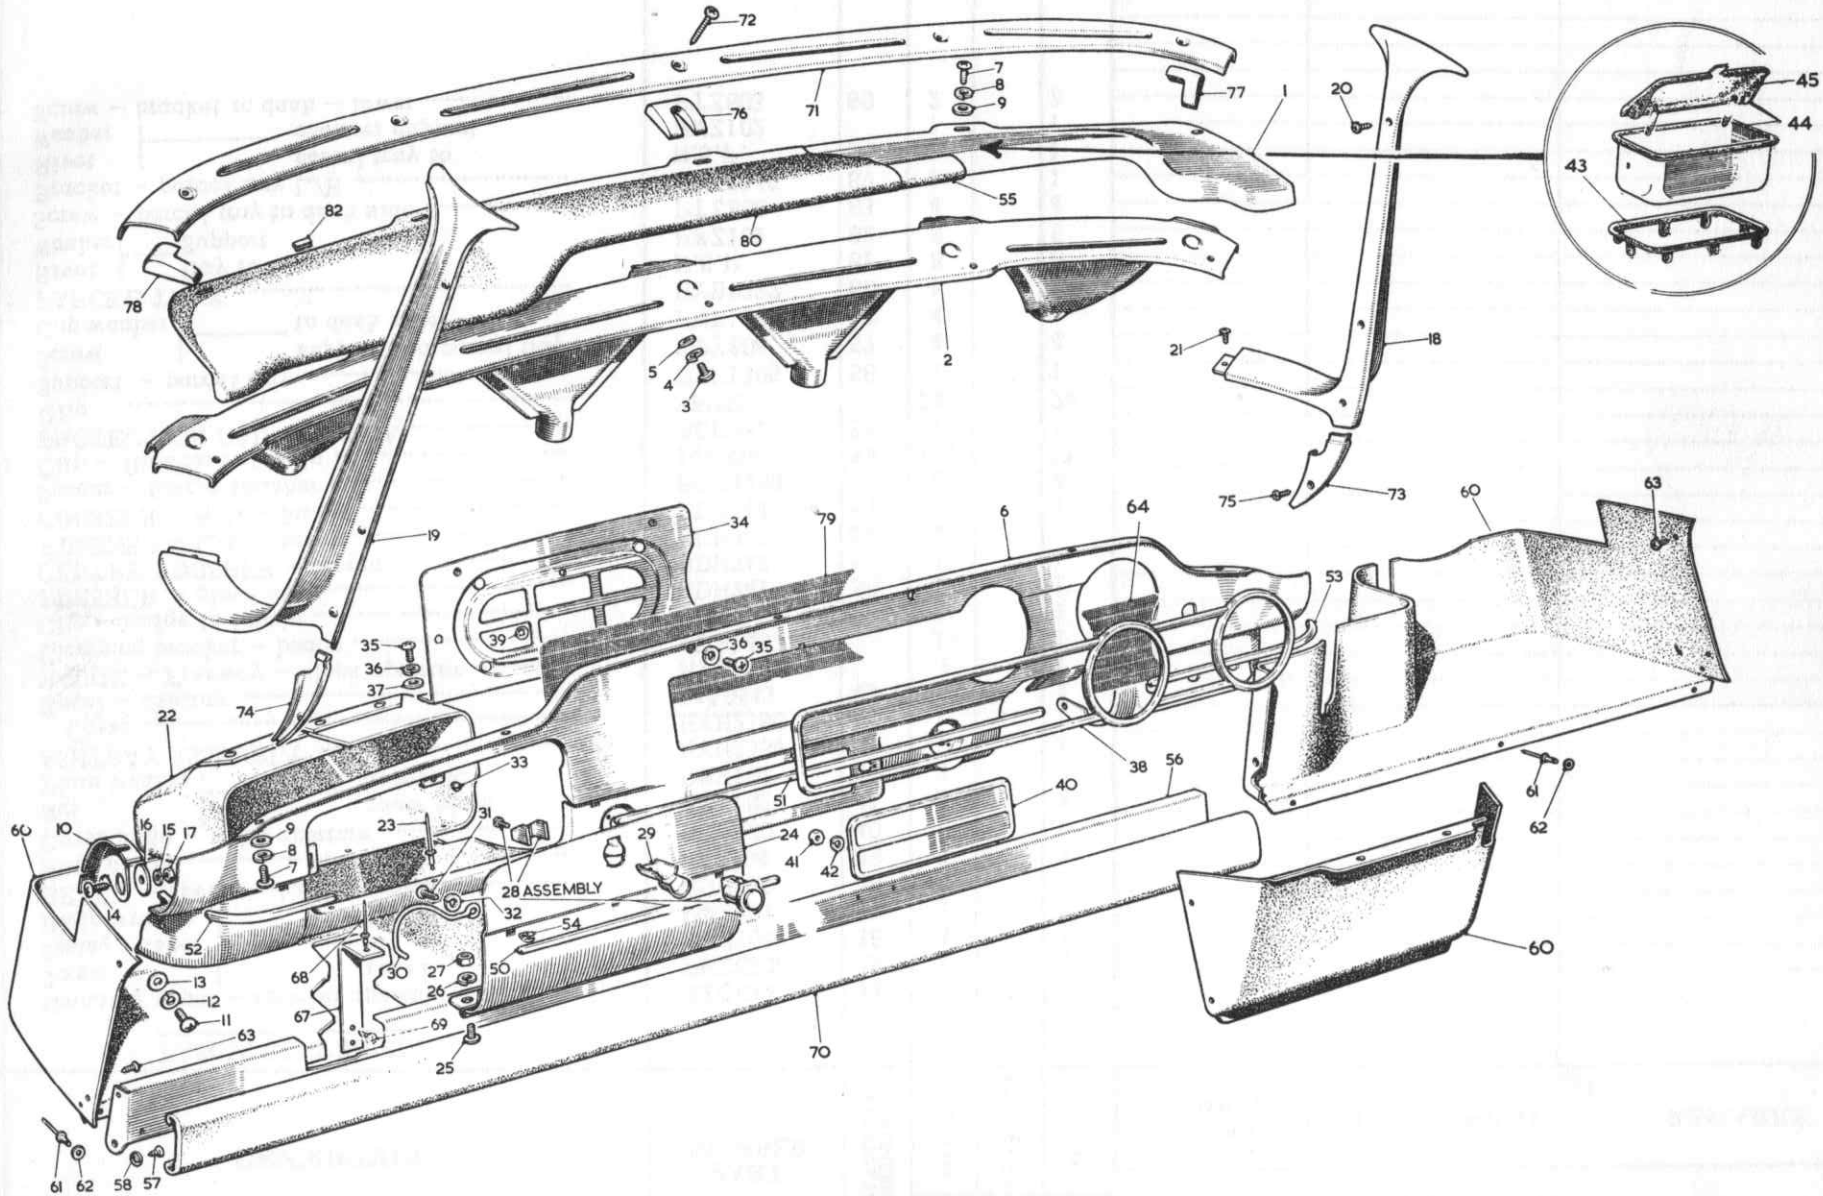

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R43, R44 and R45


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FASCIA CONTINUED:								
1	PROTECTION STRIP – parcel tray	ADE9474	70	1		1			
2	Covering – protection strip	HYB0684		1		1			
3	FINISHER – FASCIA FRONT	BDH3652	71	1		1			
4	Screw – finisher to fascia	BDH3557	72	5		5			
5	R/H FINISHER – lower fascia	BDH3655	73	1		1			
6	L/H FINISHER – lower fascia	BDH3656	74	1		1			
7	Screw – finisher to body	RTZ605	75	2		2			
8	Centre support block – finisher	BDH1714	76	3		3			
9	R/H support block	BDH1704	77	1		1			
10	L/H support block	BDH1705	78	1		1			
11	Speaker fret material	BDH1629	79	1		1			
12	Instrument fret material	BDH1630	64	1		1			
13	COVERING – fascia top panel and roll	HYH1265	80	1		1			
14	Clip	SP092	82	12		12			
15	Stay – fascia to dash	HYB0367		1		1			
16	Wiring clip	14A1667		3		3			
17	Wiring clip	14A1668		7		7			

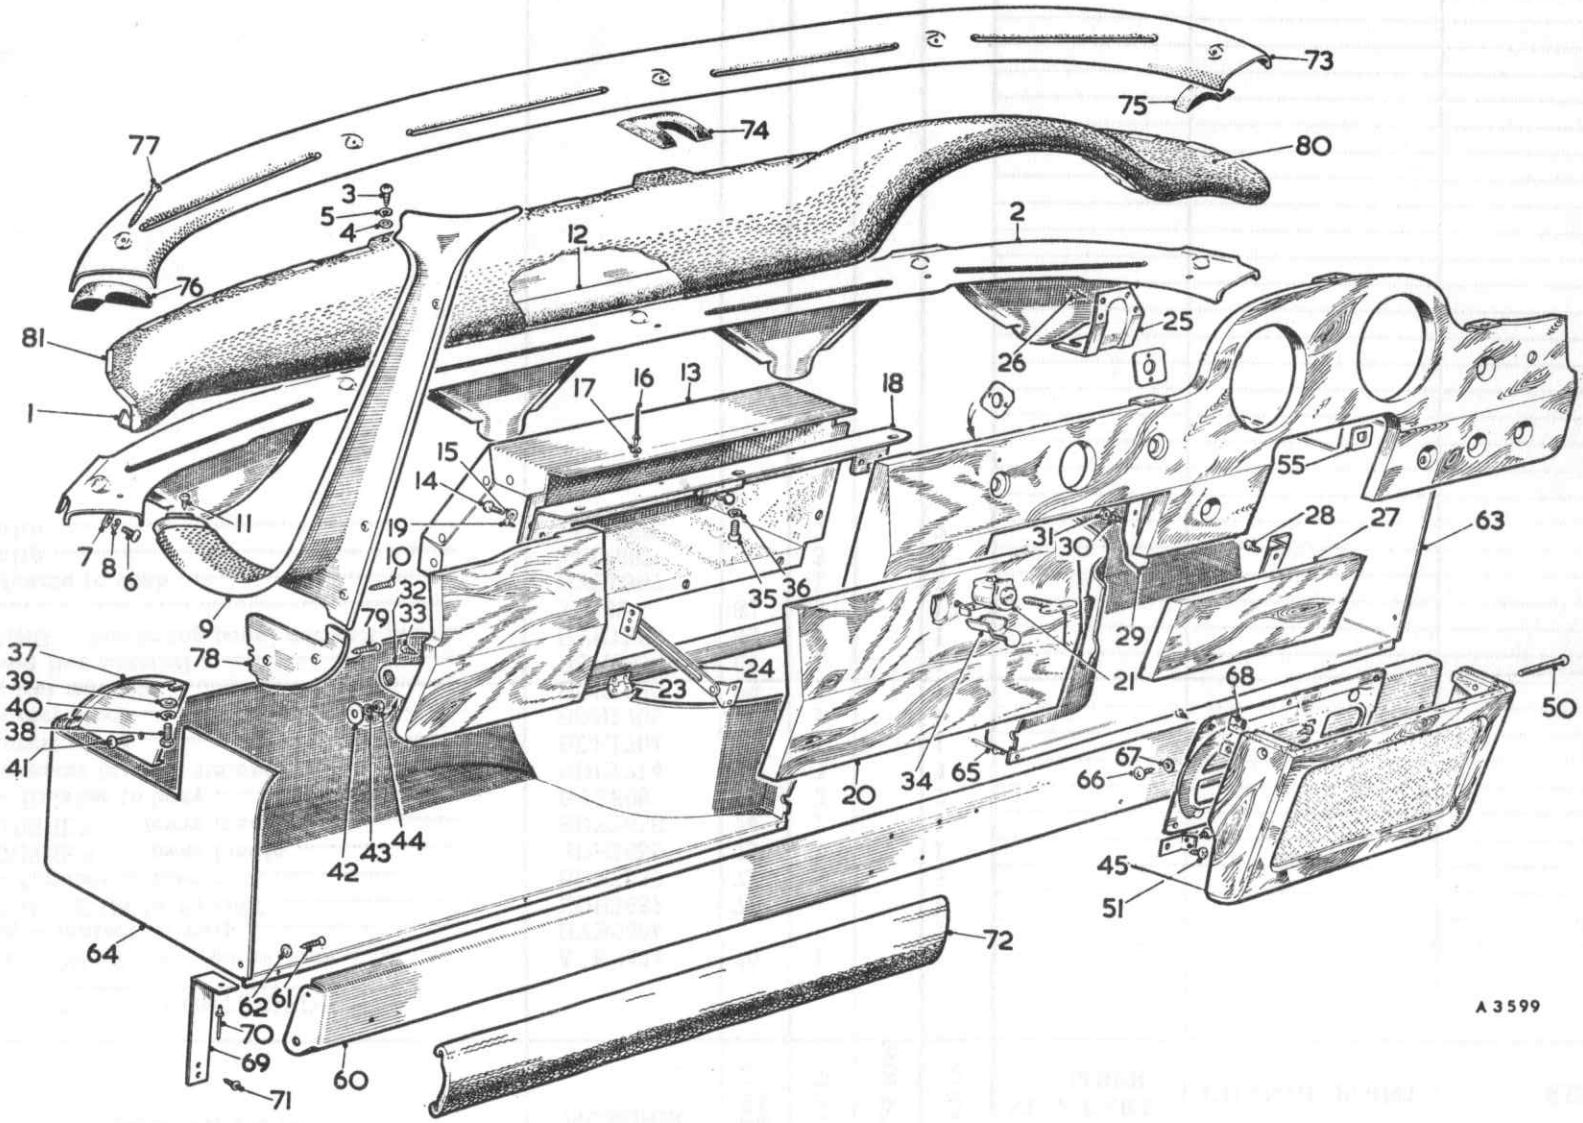

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R46, R47 and R 48


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FASCIA								
1	TOP PANEL	HYB0581	1		1				
2	Support assembly – panel top	BZC634	2		1				
3	Screw — upper panel	PTZ1005	3		11				
4	Plain washer — to	PWZ103	4		11				
5	Spring washer — body	LWZ203	5		6				
6	Screw — rail	SYS0013	6		5				
7	Plain washer — support	PWZ204	7		5				
8	Spring washer — to body	LWZ203	8		5				
9	R/H FINISHER "A" POST	BDH3650			1				
10	L/H FINISHER "A" POST	BDH3651	9		1				
11	Screw — finishers	RTZ605	10		6				
12	Screw — to body	PTZ603	11		2				
13	CRASH PAD	BDH849	12		1				
14	Trim clip	SP092			24				
15	FASCIA BOARD	HYB0136			1				
16	GLOVE BOX	BDH745	13		1				
17	Screw — glove	PTZ804	14		7				
18	Washer — box	PWZ103	15		7				
19	Rivet — to	N.S.P.	16		2				
20	Washer — fascia	PWZ102	17		2				
21	Support – glove box	BZC625	18		1				
22	Screw – support to fascia	PTZ603	19		6				
23	LID – GLOVE BOX	N.S.P.	20		1				
24	CATCH & LOCK ASSEMBLY	BDH1689	21		1				
25	Hinge – glovebox lid	ADH5556	23		2				
26	Support stay	BDH748	24		1				
27	Screw – support to lid and fascia	N.S.P.			4				
28	Bracket – fascia support	BZA884	25		1				
29	Screw – bracket to lid and fascia	N.S.P.	26		8				
30	Filler piece – radio aperture	N.S.P.	27		1				
31	Screw – filler to bracket	N.S.P.	28		4				
32	R/H bracket attachment — filler	N.S.P.			1				
33	L/H bracket attachment — piece	N.S.P.			1				
34	Screw – attachment bracket to filler piece	PTZ603			4				
35	R/H bracket attachment — speaker	HYH2682	29		1				
36	L/H bracket attachment — surround	HYH2683			1				

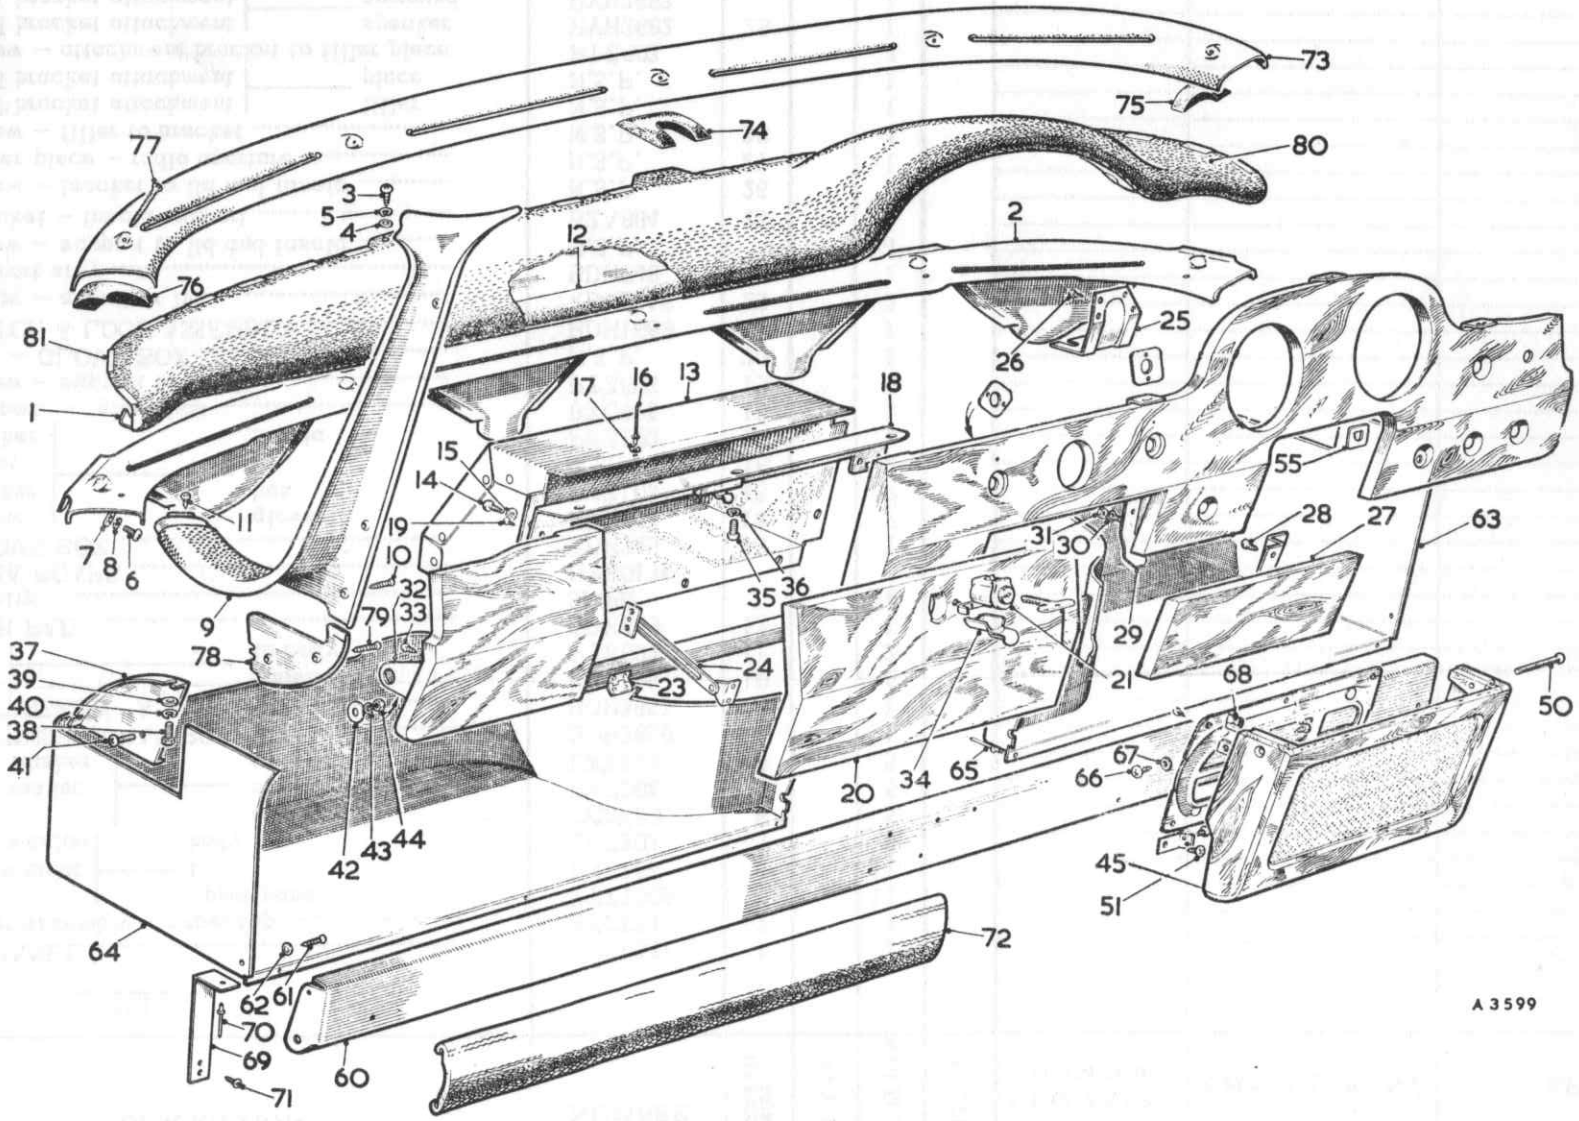


ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R46, R47 and R 48

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FASCIA CONTINUED:								
1	Washer | surround	LWZ203	30		4				
2	Nut | to brackets	FNZ103	31		4				
3	R/H bracket | fascia to	BDH3497			1				
4	L/H bracket | "A" post	BDH3498	32		1				
5	Screw – bracket to fascia	PTZ603	33		4				
6	STRIP – FINISHER FASCIA (Rubber)	HYH2265			1				
7	PULL – LID CATCH	BDH1635	34		1				
8	Screw | attachment bracket	PMZ0308	35		6				
9	Washer | to body	LWZ203	36		6				
10	R/H OUTER BRACKET – Fascia	BZA932			1				
11	L/H OUTER BRACKET – Fascia	BZA933	37		1				
12	Screw | brackets	PMZ0406	38		4				
13	Washer | to	PWZ104	39		4				
14	Washer | body	LWZ204	40		4				
15	Screw | brackets	PMZ0308	41		2				
16	Washer | to outer	PWZ204	42		2				
17	Washer | support	LWZ203	43		2				
18	Nut | brackets	FNZ103	44		2				
19	SPEAKER SURROUND	BDH864	45		1				
20	Fret material	ADE594			A/R				
21	Screw | surround	RMZ0324	50		2				
22	Nut | to	FNZ103			2				
23	Washer | bracket	LWZ203			2				
24	Washer |	PWZ203			2				
25	Screw – lower bracket	PTZ603	51		2				
26	Locating plate – heater knobs	N.S.P.							
27	Locating plate – choke control	ADC3609	55		1				

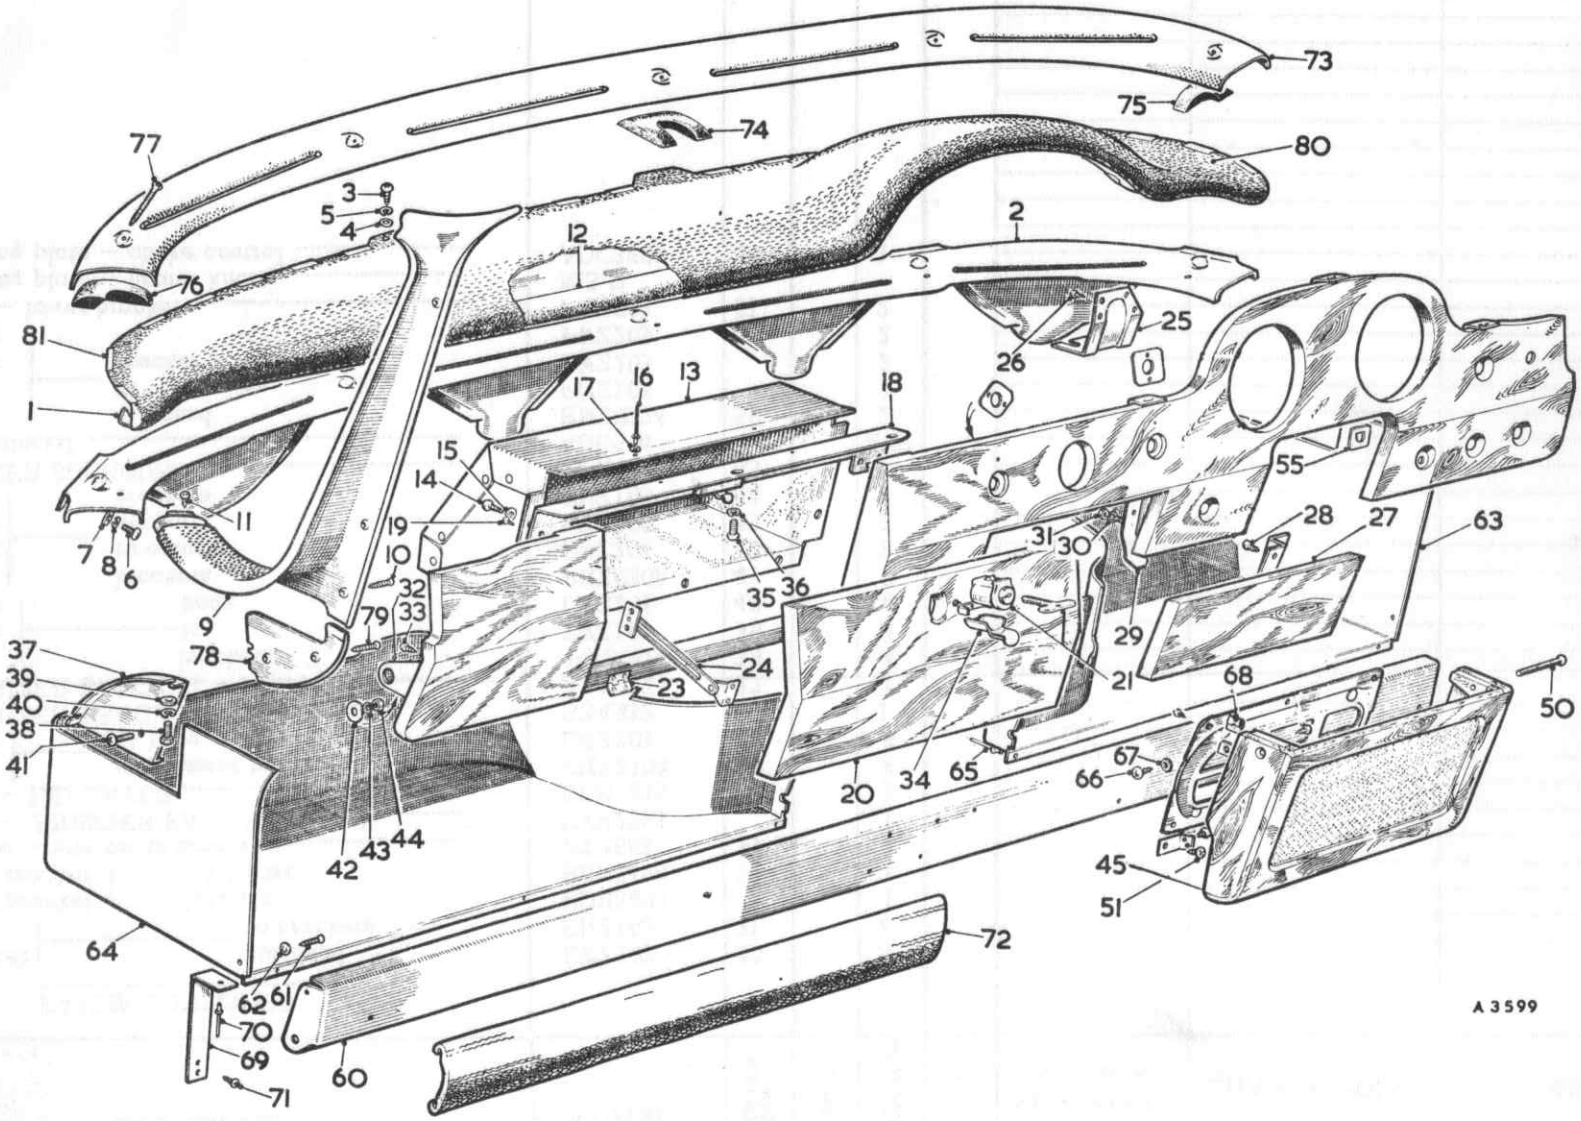
77
73
75
74
80
3
5
4
12
2
76
81
25
26
1
17
16
13
18
15
14
55
11
19
10
28
27
63
7
8
6
32
33
31
30
35
36
9
79
29
78
37
39
40
38
41
24
23
21
68
50
20
34
65
66
67
42
43
44
45
51
64
72
62
61
70
69
71
60
A 3599


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FASCIA CONTINUED:								
1	R/H PARCEL TRAY	BDH1654	63		1				
2	L/H PARCEL TRAY	BDH1656	64		1				
3	Support assembly	HYH1305	60		1				
4	Screw — support and parcel	RTZ604	61		4				
5	Washer — tray to dash side	FWP106	62		4				
6	Rivet – tray to channel support	N.S.P.	65		8				
7	Washer	PWZ102			8				
8	Screw — inner tray	PTZ604	66		2				
9	Washer — to	PWZ202	67		2				
10	Nut — speaker surround	PFS306	68		2				
11	L/H support bracket	BDH3546	69		1				
12	Rivet	N.S.P.	70		1				
13	Washer	PWZ102			1				
14	Screw – bracket to dash lower	PTZ603	71		2				
15	Screw – parcel tray to dash side	PTZ804			4				
16	Protection strip	BDH1621	72		2				
17	Cover – protection strip	BDH2477			2				
18	FRONT PANEL FINISHER – FASCIA	BDH3652	73		1				
19	Support block – centre — fascia front	BDH1714	74		1				
20	Support block – R/H — finisher	BDH1704	75		1				
21	Support block – L/H — panel	BDH1705	76		1				
22	Screw – panel fixing	BDH3557	77		5				
23	R/H lower finisher	BDH3653			1				
24	L/H lower finisher	BDH3654	78		1				
25	Spacer — finisher	BDH3510			4				
26	Screw — fixing	RTZ605	79		4				
27	COVERING – fascia top panel and roll	HYH1265	80		1				
28	Trim clip	SP092	81		12				
29	Wiring clip	14A1667			3				
30	Wiring clip	14A1668			7				

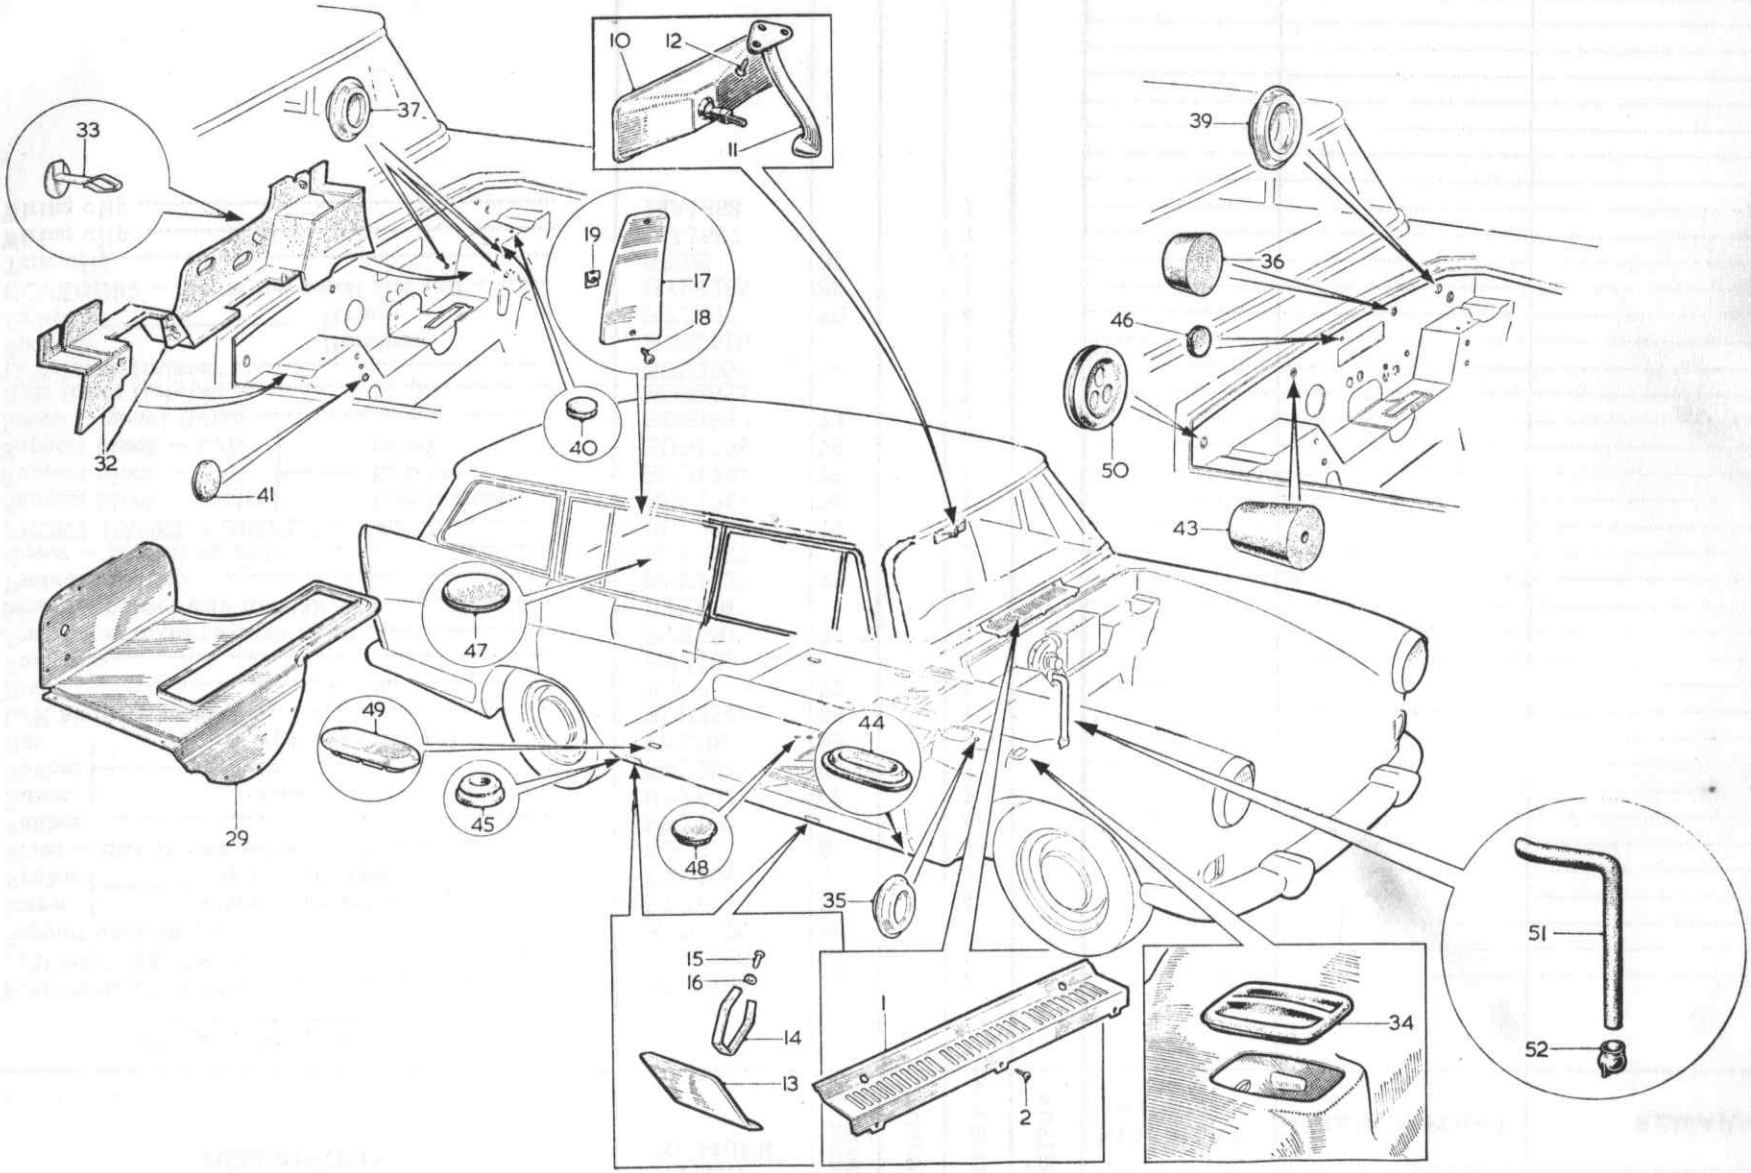

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R49 and R50

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	SUNDRIES								
1	AIR DUCT GRILLE	24G902	1	1	–	1			
2	AIR DUCT GRILLE	14G9845	1	–	1	–			
3	Screw — grille to body	PTZ1004	2	3	3	3			
4	Plain washer — grille to body	PWZ203		3	3	3			
5	Spring washer — grille to body	LWZ203		3	3	3			
6	INTERIOR MIRROR	24B2835	10	1	1	1			
7	Bracket	24B2834	11	1	1	1			
8	Screw – mirror to roof	RTZ1005	12	3	3	3			
9	COVER — jacking point	14G9827	13	4	4	4			
10	Retainer — jacking point	14G2799	14	4	4	4			
11	Screw — jacking point	PMZ0304	15	4	4	4			
12	Washer — jacking point	LWZ403	16	4	4	4			
13	Seal – front jacking bracket — front end assembly	HYH1168		2	2	2			
14	Seal – rear jacking bracket — front end assembly	HYH2318		2	2	2			
15	INSULATION – DASH PANEL	HYB0716	32	1	1	1			
16	Clip – insulation pad	24G1222	33	8	8	8			
17	Cover plate – blower aperture	14G3713		1	–	1			
18	Screw	PMZ0206		3	–	3			
19	Washer	LWZ202		3	–	3			
20	Cover plate – dash centre	24G1999	29	1	1	1			
21	Screw – cover to dash centre	PTZ803		19	19	19			
22	Plug – gearbox cover	14A5571	34	1	1	1			
23	Plug – gearbox cover	ALA4450		1	1	1			Alternatives
24	Plug – gearbox cover	CFP625	35	1	1	1			Alternatives
25	Plug – speedometer tube	24G1128	36	1	1	1			

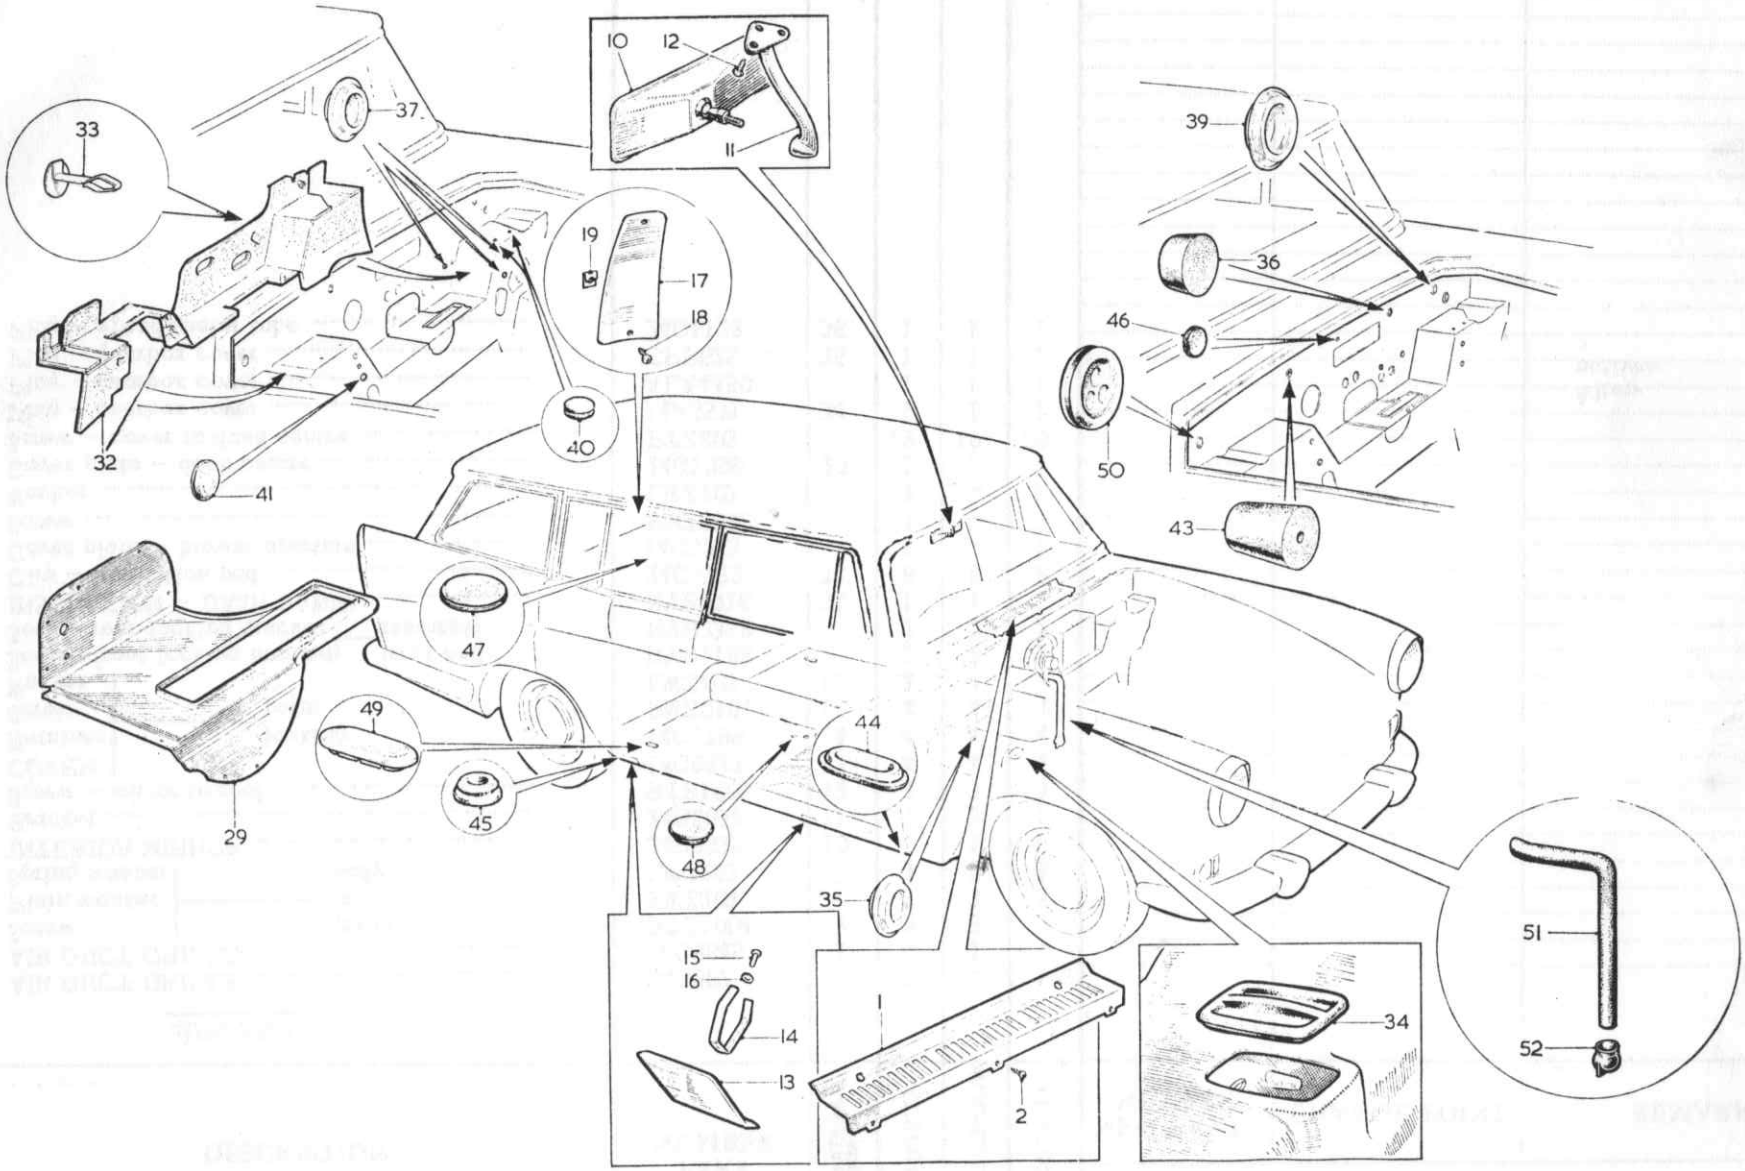

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE R49 and R50

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	SUNDRIES CONTINUED:								
1	Plug – choke cable hole	CFP375	37	1	1	1			
2	Plug – dash blanking	13H214	50	1	1	1			
3	Plug – hole in dash	13H214	50	1	1	1			
4	Plug – pedal bracket hole	CFP375	40	2	2	2			
5	Plug – oil pipe hole	11H100	41	1	1	1			
6	Plug – speedometer cable hole	1H9111	43	1	1	1			
7	Plug – sill panel	24G711	44	6	6	4			
8	Plug – petrol pipe – trunk floor	RFN214	47	–	–	1			
9	Plug – outer sill	14A7031	45	–	–	2			
10	Plug – front main floor crossmember	RFN206		–	–	1			
11	Plug – hole in rear floor	RFN205		1	1	–			
12	Grommet – R/H longitudinal member	13H214		–	–	1			
13	Plug – safety belt holes	14A9668	48	4	4	4			
14	Plug – slinging holes in floor	24G1784	49	4	4	4			
15	DRAIN TUBE	24G1181	51	1	1	1			
16	Dust cover – drain tube	24G1182	52	1	1	1			
17	COAT HOOK	HYB0612		1	–	1			
18	Screw – hook to cantrail	RTZ603		2	–	2			
19	R/H cover plate | tail lamp access	BZA1582		–	–	1			
20	L/H cover plate | tail lamp access	BZA1583	17	–	–	1			
21	Screw	PJZ1005	18	–	–	4			
22	Nut	PFS510	19	–	–	4			
23	Grommet – control cables	3F90		1	1	1			
24	Grommet – windscreen washer	RFR220		1	1	1			
25	Grommet – windscreen washer	SP106		1	–	1			
26	Plug – when radio not fitted	ALA4453	39	1	1	1			
27	Plug – redundant holes	CFP625	37	3	3	3			
28	Plug – blanking – sidelamp holes in mud-guards	RFN204		–	8	–			