
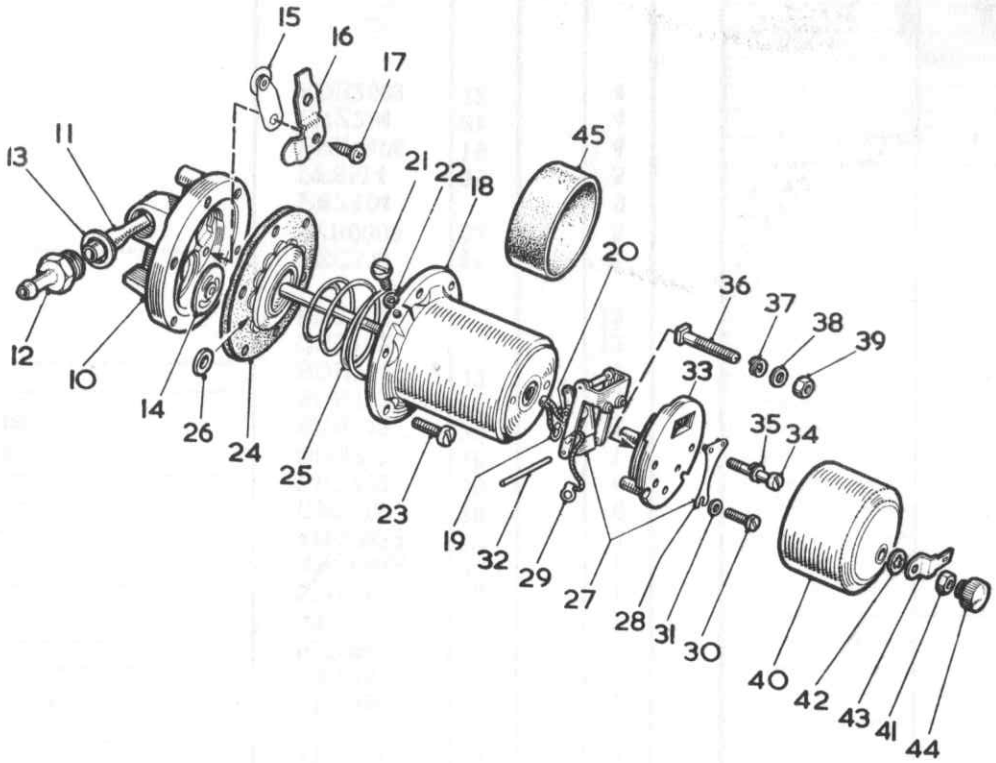


ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE D1


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	FUEL SYSTEM								
1	PETROL PUMP	AUA83		1	1	1			
2	Body	AUB6002	10	1	1	1			
3	Tube – outlet	N.S.P.		1	1	1			
4	Filter	AUB564	11	1	1	1			
5	Nozzle – inlet	AUB559	12	1	1	1			
6	Washer	AUA1405	13	1	1	1			
7	Valve – outlet	AUB6003	14	1	1	1			
8	Valve – inlet	AUB6016	15	1	1	1			
9	Retainer – valve	AUB506	16	1	1	1			
10	Screw	53K3352	17	1	1	1			
11	Housing – coil	AUB6007	18	1	1	1			
12	5 B.A. terminal tag	AUA1455	19	1	1	1			
13	2 B.A. terminal tag	AUA1456	20	1	1	1			
14	Screw (earth)	AUA699	21	1	1	1			
15	Spring washer (earth)	AUA585	22	1	1	1			
16	Screw – coil housing to body	AUA1453	23	6	6	6			
17	Diaphragm assembly	AUB6004	24	1	1	1			
18	Spring	AUB521	25	1	1	1			
19	Roller	AUA1433	26	11	11	11			
20	Rocker and blade	AUA6021	27	1	1	1			
21	Blade	AUA6036	28	1	1	1			
22	2 B.A. terminal tag	AUA1456	29	1	1	1			
23	Screw (blade mtg.)	AUA565	30	1	1	1			
24	Dished washer (blade mtg.)	AUA566	31	1	1	1			
25	Spindle – contact breaker	AUA1435	32	1	1	1			
26	Pedestal	AUA6034	33	1	1	1			
27	Screw (pedestal to coil housing)	AUA1459	34	2	2	2			
28	D/C washer (pedestal to coil housing)	AUA1863	35	2	2	2			
29	Screw (terminal)	AUA1468	36	1	1	1			
30	Spring washer (terminal)	AUA1863	37	1	1	1			
31	Lead washer (terminal)	AUA1662	38	1	1	1			
32	Recessed nut (terminal)	AUA1661	39	1	1	1			
33	END COVER	AUA1466	40	1	1	1			
34	Nut	AUA878	41	1	1	1			
35	Shakeproof washer	AUA4643	42	1	1	1			
36	Lucar connector	AUA692	43	1	1	1			
37	Terminal knob	AUA869	44	1	1	1			
38	Rubber sleeve	AUA504	45	1	1	1			

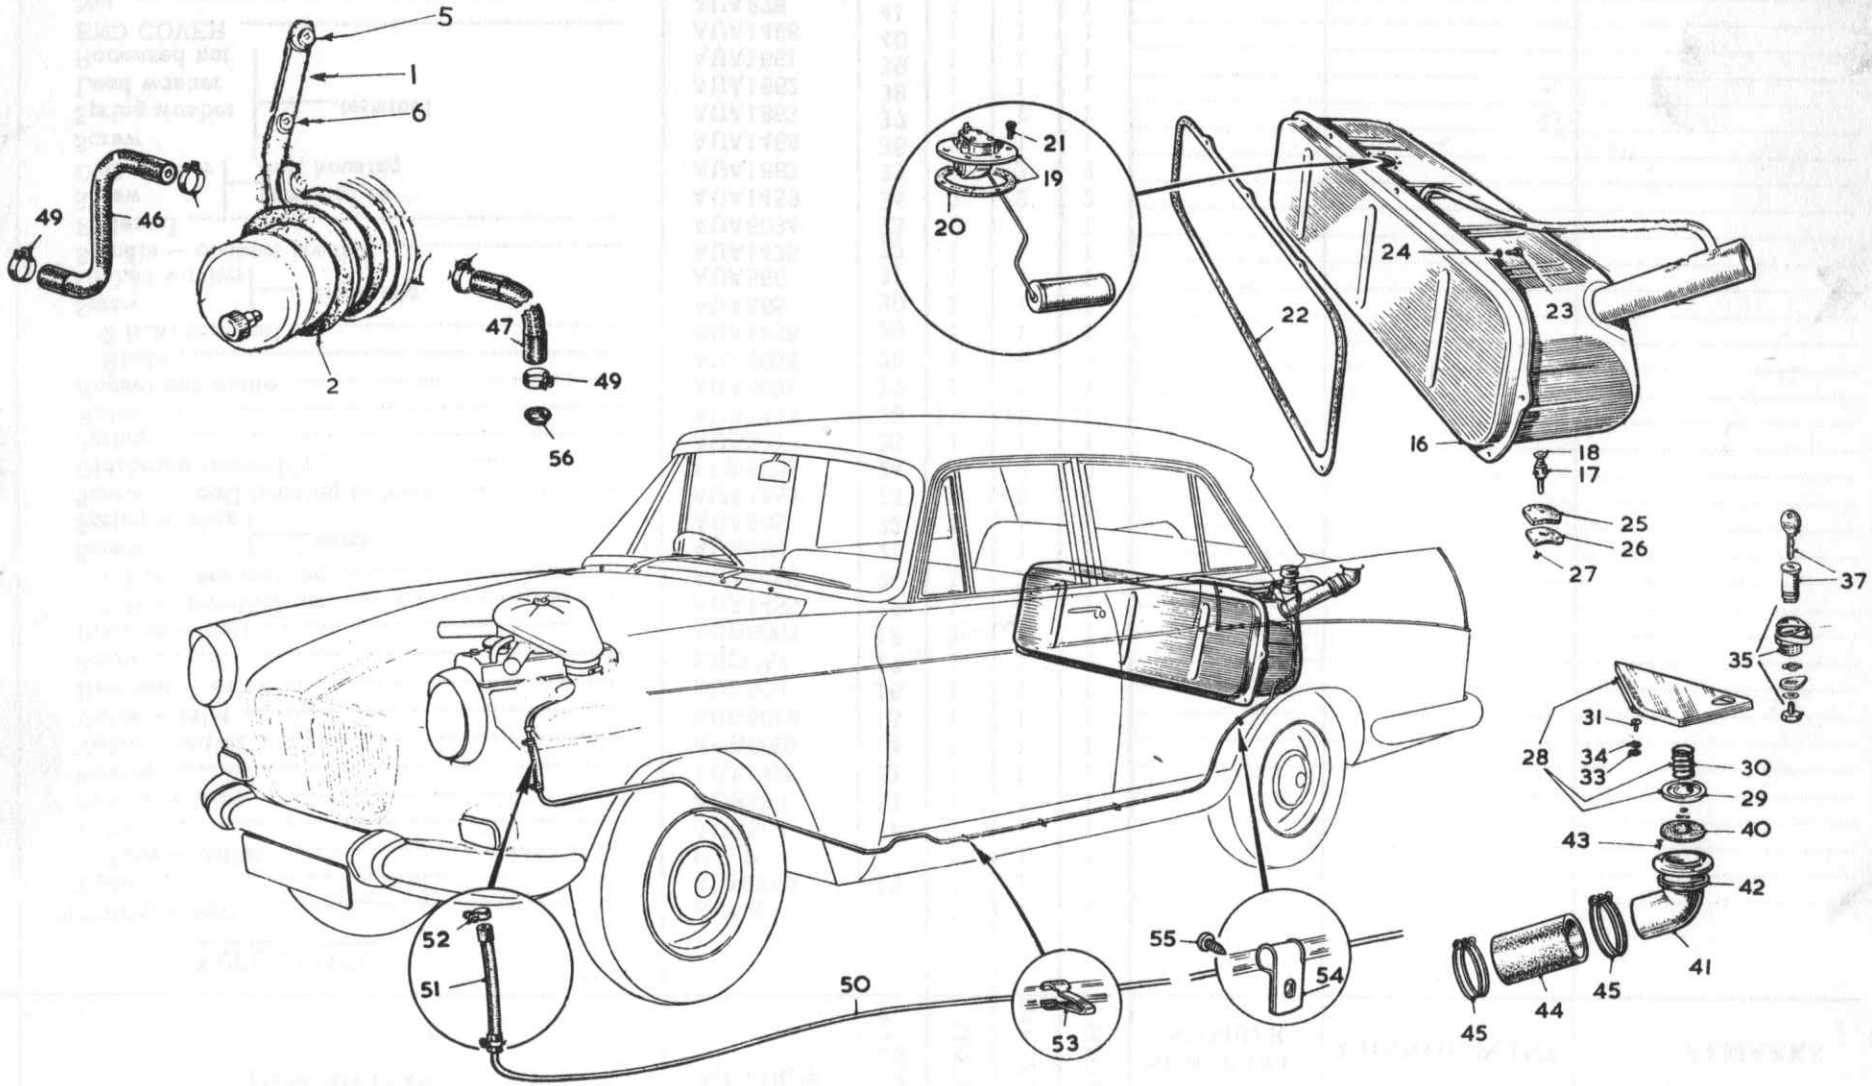

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE D2 and D3


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FUEL SYSTEM								
1	BRACKET ASSEMBLY – PUMP MOUNTING	11H465	1	1	1				
2	Rubber strap — petrol pump to bracket	ACB9252	2	1	1				
3	Screw — petrol pump to bracket	HZS0405		1	1				
4	Lockwasher — petrol pump to bracket	LWZ304		1	1				
5	Bolt — mounting bracket to boot lid hinge	HZS0405	5	2	2				
6	Spring washer — mounting bracket to boot lid hinge	LWZ304	6	2	2				
7	PETROL TANK	ARH108	16	1	1				
8	Drain tap	11B2180	17	1	1				
9	Fibre washer	ARH1499	18	1	1				
10	UNIT – PETROL GAUGE	1H2153	19	1	1				
11	Gasket	2H1082	20	1	1				
12	Screw – unit to tank	ARG923	21	6	6				
13	Gasket – tank mounting	1G2526	22	1	1				
14	Screw — tank to body	53K2951	23	5	5				
15	Plain washer — tank to body	PWZ204	24	5	5				
16	Pad — petrol drain tap	24G1208	25	1	1				
17	Fixing plate — petrol drain tap	24G1209	26	1	1				
18	Screw — petrol drain tap	PTZ604	27	3	3				
19	LID – PETROL FILLER	24G1663	28	1	1				
20	Cap – filler pipe	AZA1004	29	1	1				
21	Spring – cap	14G6461	30	1	1				
22	Spigot	14G6519		1	1				
23	Washer	PWZ103		1	1				
24	Screw — lid to panel	PMZ0308	31	2	2				
25	Plain washer — lid to panel	PWZ103	33	2	2				
26	Spring washer — lid to panel	LWZ203	34	2	2				
27	LOCK ASSY. – filler lid	24G1322	35	1	1				
28	LOCKING BARREL & keys	24G1346	37	1	1				
29	Seal – filler cap	ADB4886	40	1	1				
30	Tube – petrol filler	1H2149	41	1	1				
31	Seal – filler tube	ADB4887	42	1	1				
32	Screw – filler tube	CTZ605	43	3	3				

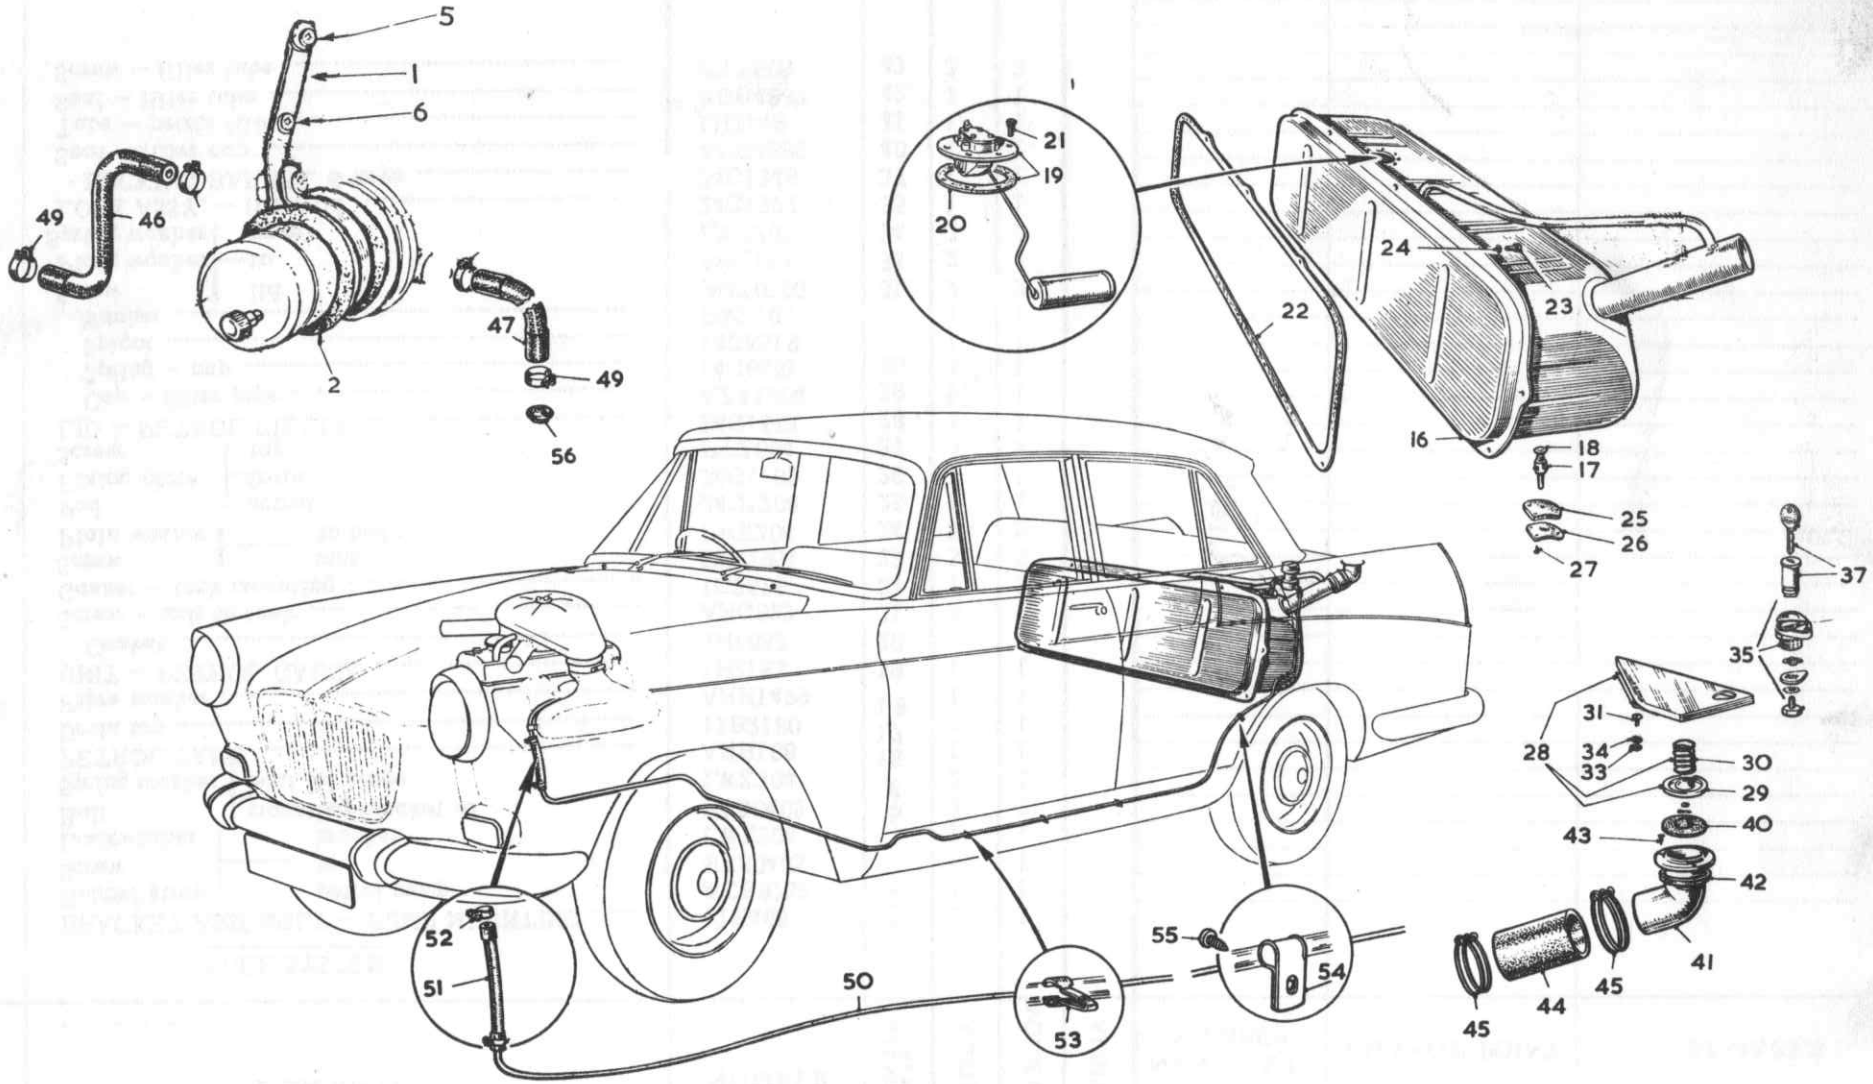

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE D2 and D3


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FUEL SYSTEM CONTINUED:								
1	RUBBER HOSE – filler tube	1H2182	44	1	1				
2	Hose clips	SYC0010	45	2	2				
3	FLEXIBLE PIPE – tank to pump	BRT2819	46	1	1				
4	FLEXIBLE PIPE – pump outlet	BRT2819	47	1	1				
5	Clips – flexible pipes	SYC002	49	4	4				
6	PIPE – pump to carburetter	11H424	50	1	1				
7	Clip – pipe to L/H valance	2K8910	53	1	1				
8	PIPE ASSY. – Elbow for carburetter	AYH2085		1	1				
9	RUBBER HOSE – Elbow to pipe	ACC8878	51	1	1				
10	Clip	SYC0003	52	2	2				
11	Clip – pipe to side member	2K8910	53	6	6				
12	Clip – pipe to L/H rear member	PCR0505	54	1	1				
13	Screw	PTZ604	55	1	1				
14	Grommet for pipe	11H150	56	1	1				

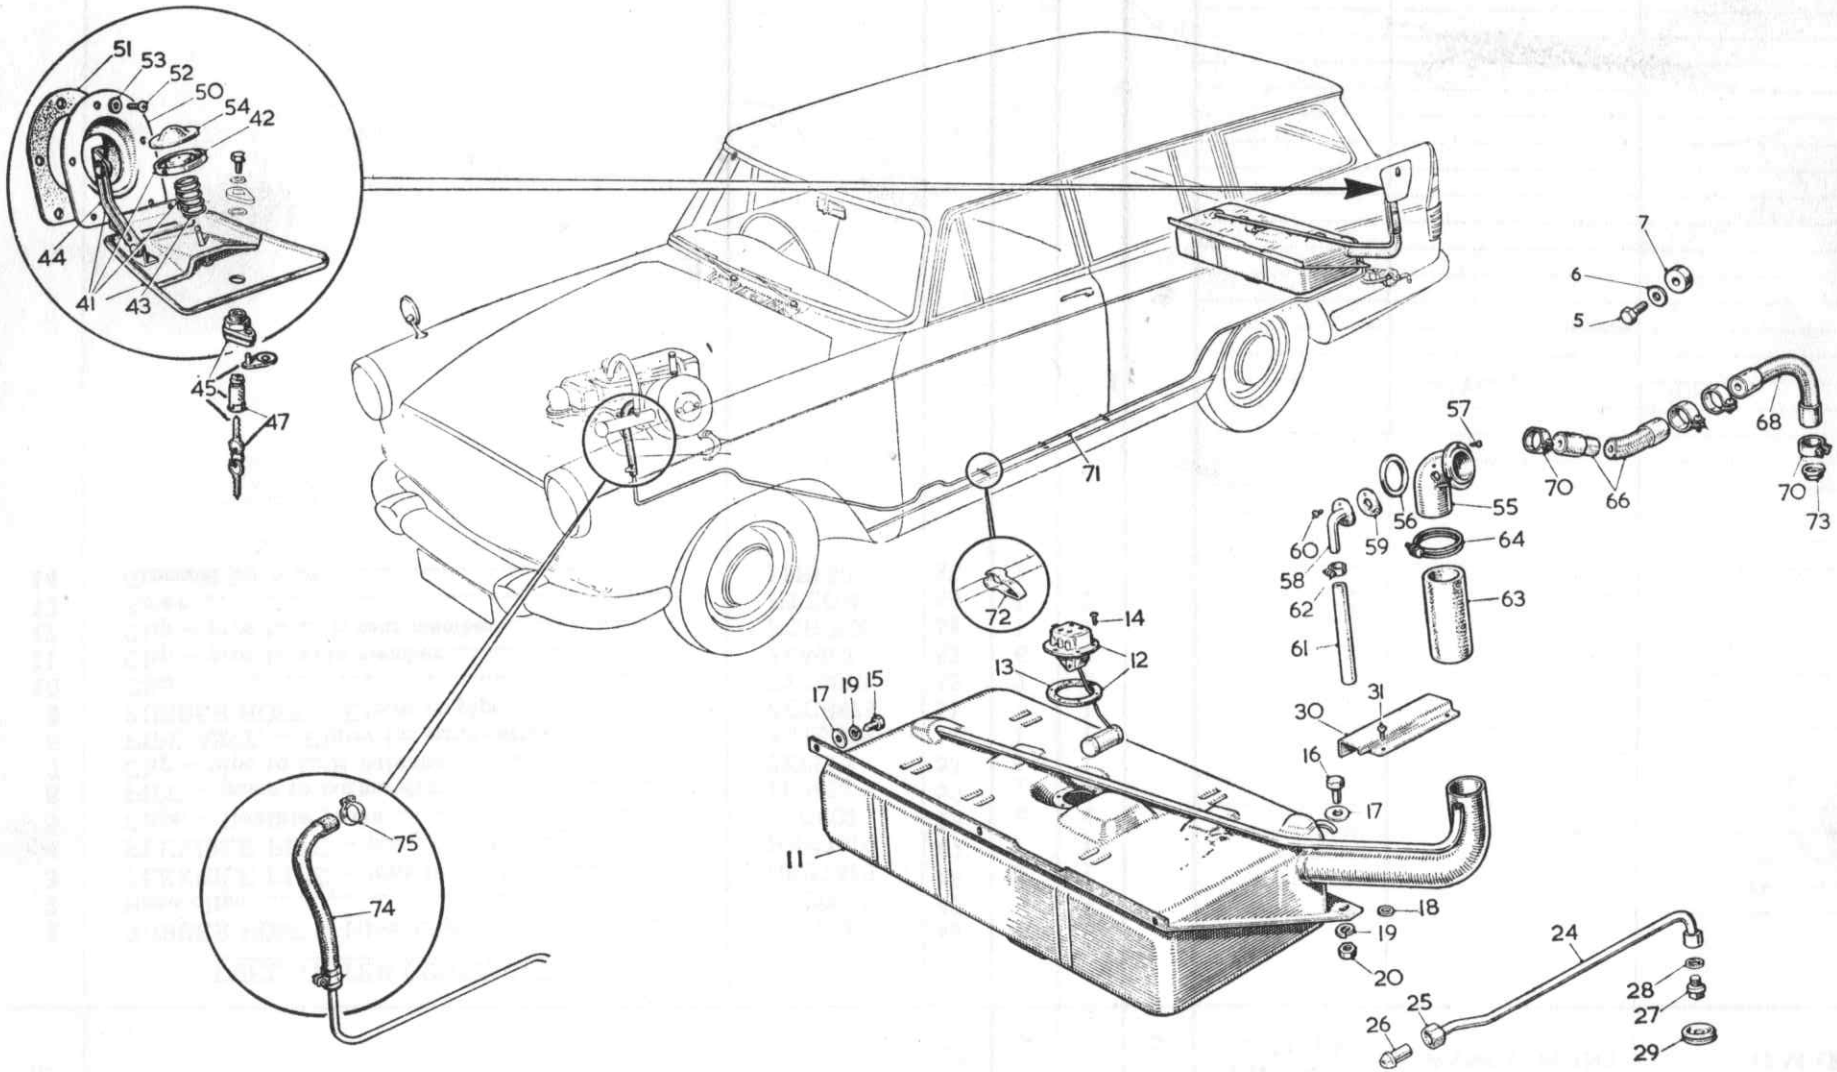

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE D4 and D5


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FUEL SYSTEM								
1	Mounting rubber — Pump	ACA5274	7			2			
2	Screw — to	ZCS0408	5			2			
3	Plain washer — body	PWZ204	6			6			
4	PETROL TANK	ARH127	11			1			
5	UNIT – PETROL GAUGE	BCA4416	12			1			
6	Gasket	2H1082	13			1			
7	Screw – unit to tank	ARG923	14			6			
8	Screw	HPZ0404	15			3			
9	Screw	HZS0406	16			3			
10	Plain washer — tank	PWZ204	17			3			
11	Plain washer — to	PWZ104	18			6			
12	Spring washer — body	LWZ204	19			6			
13	Nut	FNZ104	20			3			
14	PIPE – TANK DRAIN	ACH9354	24			1			
15	Union nut	ACA5399	25			1			
16	Nipple	2K5276	26			1			
17	Ferrule	ACH9356				1			
18	Plug — drain	ACH9357	27			1			
19	Seal — pipe	ACH9358	28			1			
20	Grommet – pipe through floor	RFN305	29			1			
21	Cover plate – drain pipe	BDH4168	30			1			
22	Screw – plate to floor	PTZ803	31			2			
23	LID – PETROL FILLER	BZC1503	41			1			
24	Cap – filler pipe	AZA1004	42			1			
25	Spring – cap	14G6461	43			1			
26	Spigot	14G6519				1			
27	Washer	PWZ203				1			
28	Check arm	BZB1513	44			1			

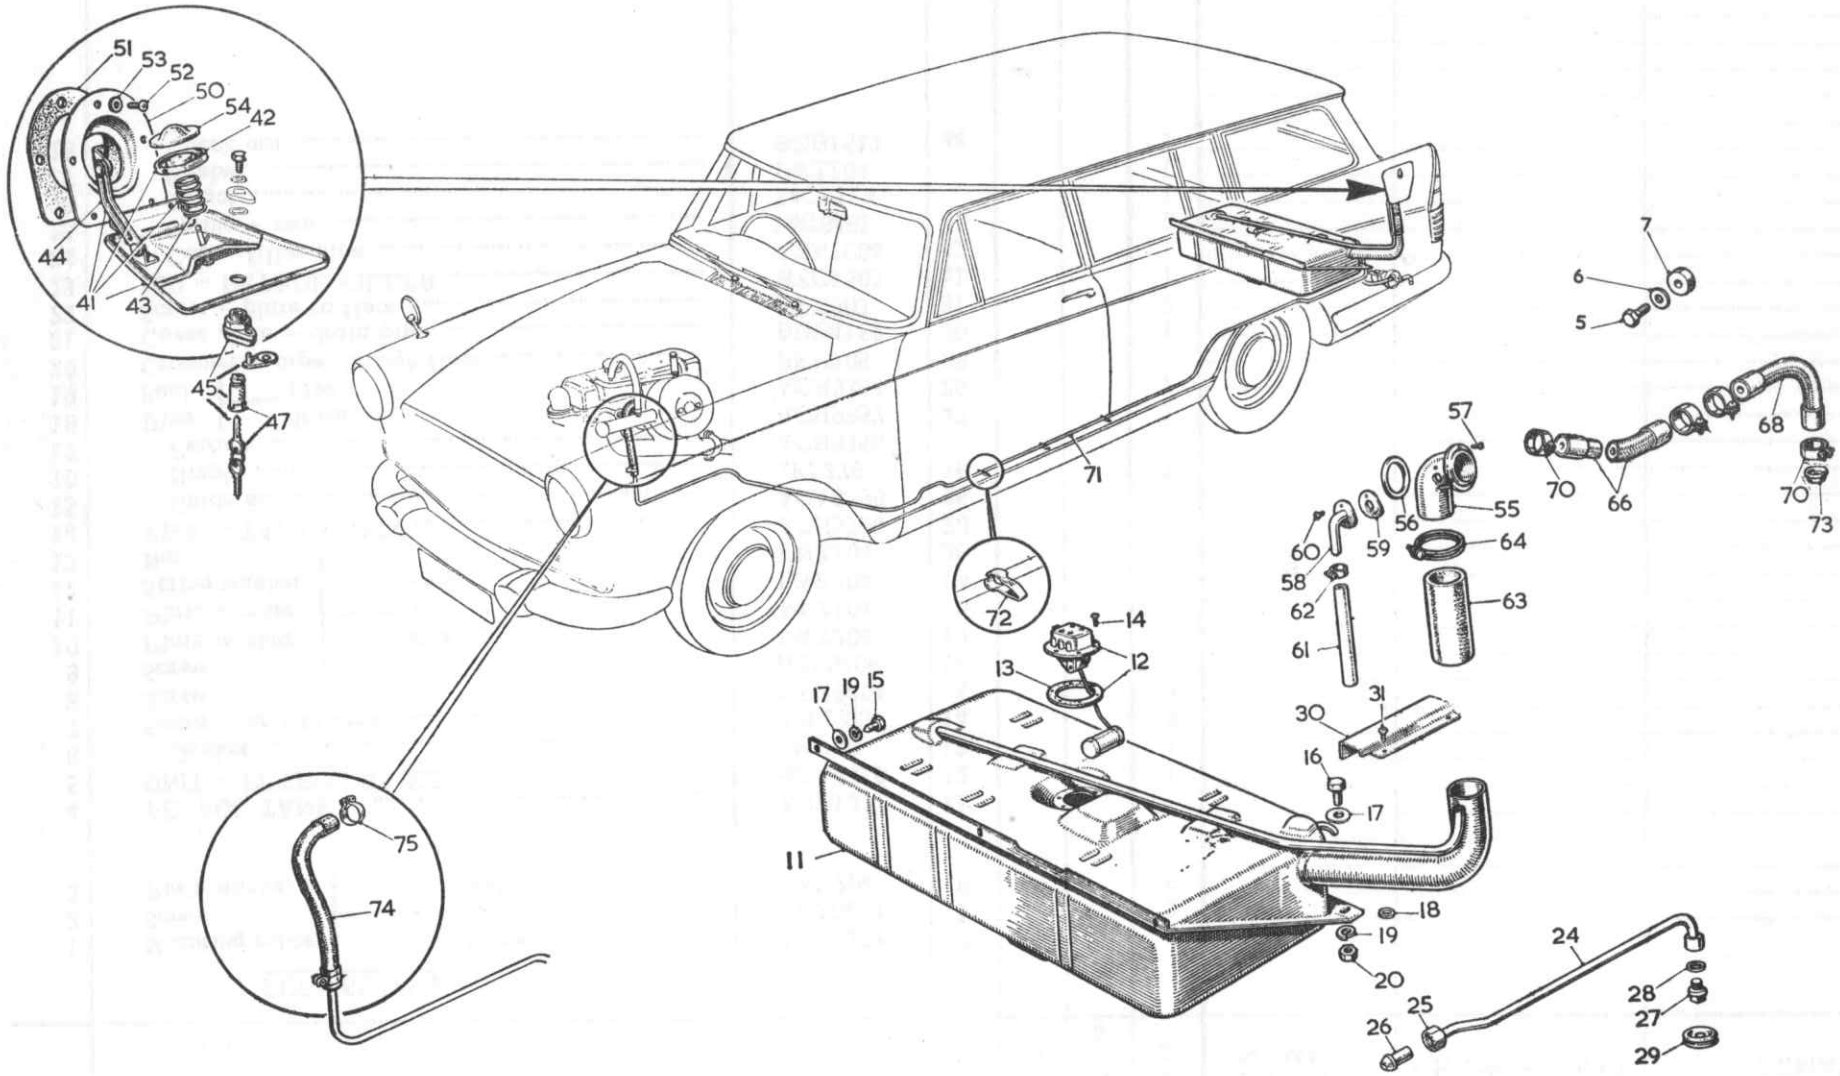

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE D4 and D5


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	FUEL SYSTEM CONTINUED:								
1	LOCK ASSEMBLY – FILLER LID	24G1322	45			1			
2	LOCKING BARREL	24G1346	47			1			
3	RETAINING PLATE – FILLER TUBE	BZA1547	50			1			
4	Seal	BDH3794	51			1			
5	Screw – lid to panel	PMZ0308	52			6			
6	Plain washer	PWZ103	53			6			
7	Seal – filler cap	ADB4886	54			1			
8	Tube – petrol filler	ACH9310	55			1			
9	Seal – filler	ADB4887	56			1			
10	Screw – tube	CTZ605	57			3			
11	Vent elbow assembly	ACH9306	58			1			
12	Seal – elbow	ACH9307	59			1			
13	Screw – elbow to tube	PMZ0204	60			2			
14	Rubber vent hose	ACH9311	61			1			
15	Clip	SYC0011	62			2			
16	Rubber hose – petrol filler	ACH9294	63			1			
17	Clip	SYC0010	64			2			
18	Rubber hose – tank to pump	AYB2041	66			1			
19	Rubber elbow – pump to pipe to carburetter	AYH2082	68			1			
20	Pipe – pump to carburetter	ACH9331	71			1			
21	Clip – pipe to sidemember	2K8910	72			8			
22	Clip – pipe to L/H valance	2K8910	72			1			
23	Grommet – pipe through floor	RFN110	73			1			
24	Rubber hose – elbow to petrol pipe	ACC8878	74			1			
25	Clip	SYC0003	70/75			6			
26	Pipe assy. – elbow for carburetter	AYH2085				1			

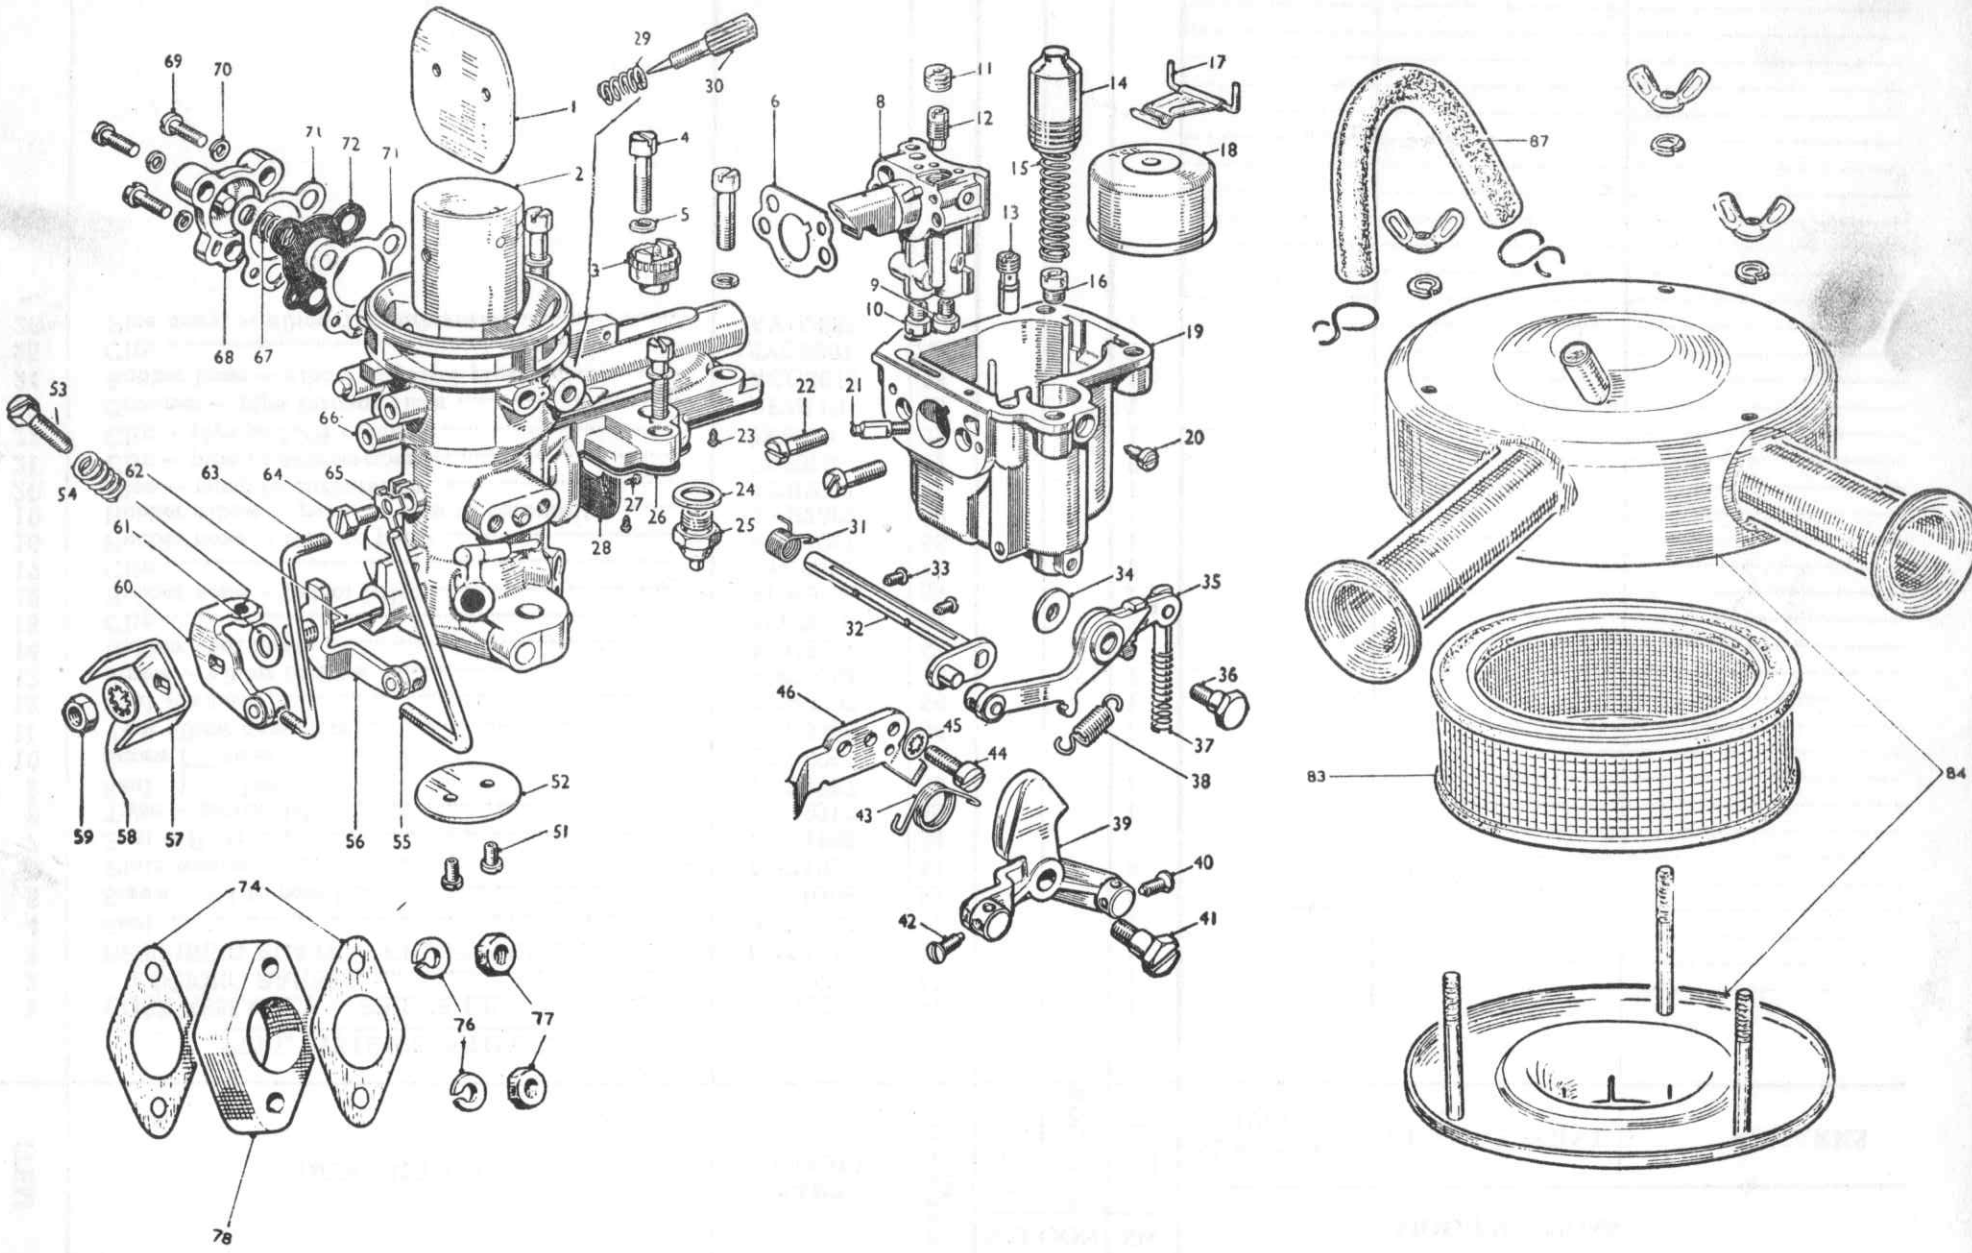

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE D 6, D7, D8, and D9


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	CARBURETTER								
1	CARBURETTER ASSEMBLY	12B188		1	1	1			
2	Choke flap	Z 016350	1	1	1	1			
3	Choke tube	Z 016359/29	2	1	1	1			
4	Pump stop	Z 017388	3	1	1	1			
5	Screw – bowl to barrel	Z 012405	4	4	4	4			
6	Spring washer	Z 04691	5	4	4	4			
7	GASKET – EMULSION BLOCK	Z 016400	6	1	1	1			
8	Block – emulsion	Z 019630	8	1	1	1			
9	COMPENSATING JET	Z 012572/90	9	1	1	1			
10	MAIN JET	Z 012571/120	10	1	1	1			
11	Plug – over slow running jet	Z 016355/50	11	1	1	1			
12	SLOW RUNNING JET	Z 016354/55	12	1	1	1			
13	Valve – pump discharge	Z 013364	13	1	1	1			
14	Piston – pump	Z 010187	14	1	1	1			
15	Spring – pump piston	Z 010318	15	1	1	1			
16	Valve – pump check	Z 016365	16	1	1	1			
17	FLOAT ARM & PIVOT	Z 016352	17	1	1	1			
18	Float	Z 016661	18	1	1	1			
19	Bowl	Z 016423	19	1	1	1			
20	Ventilation screw to capacity well	Z 016353/2.5		1	1	1			
21	Screw – stop pump piston	Z 08840	20	1	1	1			
22	PUMP JET	Z 016357/70	21	1	1	1			
23	Screw – emulsion block	Z 08303	22	2	2	2			
24	Washer – needle & seat	Z 09729	24	1	1	1			
25	NEEDLE & SEAT	Z 017811	25	1	1	1			
26	Gasket – barrel horizontal face	Z 016396	26	1	1	1			
27	Drive screw – gasket	Z 06825	23	4	4	4			
28	Gasket – barrel vertical face	Z 016395	28	1	1	1			
29	Drive screw	Z 06825	27	2	2	2			
30	Spring – air control screw	Z 09846	29	1	1	1			
31	Screw – air control	Z 09845	30	1	1	1			
32	Spring – automaticity	Z 016413	31	1	1	1			
33	SPINDLE & LEVER – CHOKE	Z 016425	32	1	1	1			
34	Screw ┤ choke	Z 016776	33	2	2	2			
35	Washer ┤ flap	Z 018697		2	2	2			

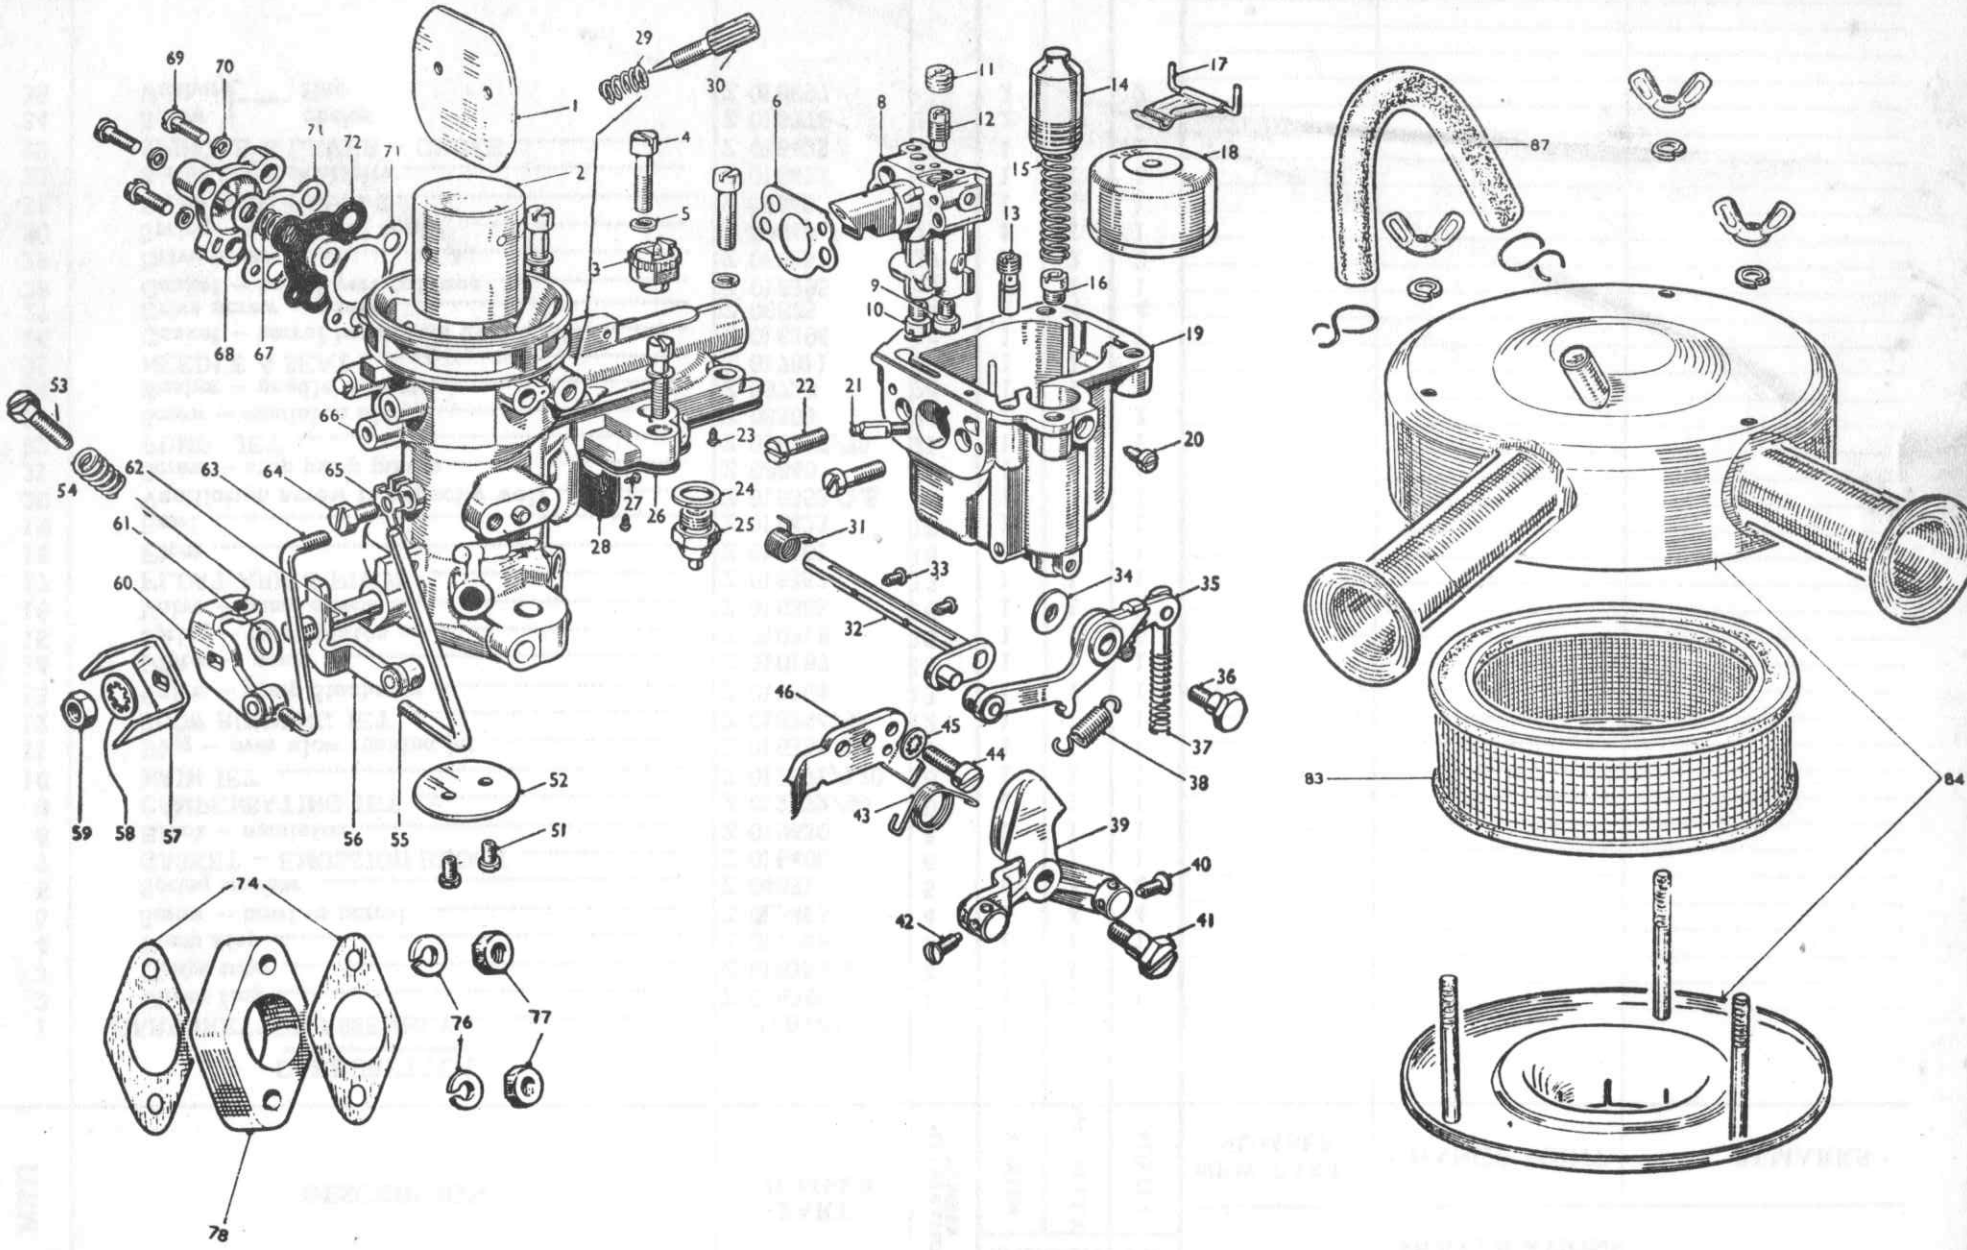

ILLUSTRATIONS TYPICAL ONLY


TO FACE PAGE D 6, D7, D8, and D9

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
	. . . . .			AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	CARBURETTER CONTINUED:								
1	Washer – pivot screw	Z 010144	34	1	1	1			
2	Lever – pump rod & spring	Z 018938	35	1	1	1			
3	Screw – pivot	Z 016405	36	1	1	1			
4	Spring – pump rod	Z 010339	37	1	1	1			
5	Spring – follow on	Z 018892	38	1	1	1			
6	Lever & screw – choke	Z 019209	39	1	1	1			
7	Screw – choke swivel	Z 07087	40	1	1	1			
8	Screw – journal	Z 016247	41	1	1	1			
9	Screw – inter connection swivel	Z 010350	42	1	1	1			
10	Spring – choke control lever	Z 018085	43	1	1	1			
11	Screw – choke control bracket	Z 904231K1	44	1	1	1			
12	Washer	Z 07734	45	1	1	1			
13	Bracket – choke control	Z 018083	46	1	1	1			
14	Screw – throttle fixing	Z 010350	51	2	2	2			
15	Throttle	Z 016599	52	1	1	1			
16	Screw – throttle stop	Z 018190/1	53	1	1	1			
17	Spring – stop screw	Z 04611	54	1	1	1			
18	Inter connecting rod	Z 016409	55	1	1	1			
19	Lever & swivel – floating	Z 016416	56	1	1	1			
20	Throttle lever	Z 018080	57	1	1	1			
21	Shakeproof washer	Z 016412/1	58	1	1	1			
22	Nut	Z 016411	59	1	1	1			
23	Throttle stop assembly	Z 018179	60	1	1	1			
24	Washer – throttle spindle	Z 08545	61	1	1	1			
25	THROTTLE SPINDLE	Z 016399	62	1	1	1			
26	Pump link	Z 016408	63	1	1	1			
27	Choke screw	Z 015522	64	1	1	1			
28	Tab washer	Z 015462	65	1	1	1			
29	BARREL ASSEMBLY	Z 019632	66	1	1	1			
30	Spring – economy diaphragm	Z 016414	67	1	1	1			
31	Cover – economy valve	Z 016358	68	1	1	1			
32	Screw – cover	Z 07967	69	3	3	3			
33	Spring washer	Z 04692	70	3	3	3			
34	GASKET – economy diaphragm	Z 010270	71	2	2	2			
35	Economy diaphragm	Z 016127	72	1	1	1			

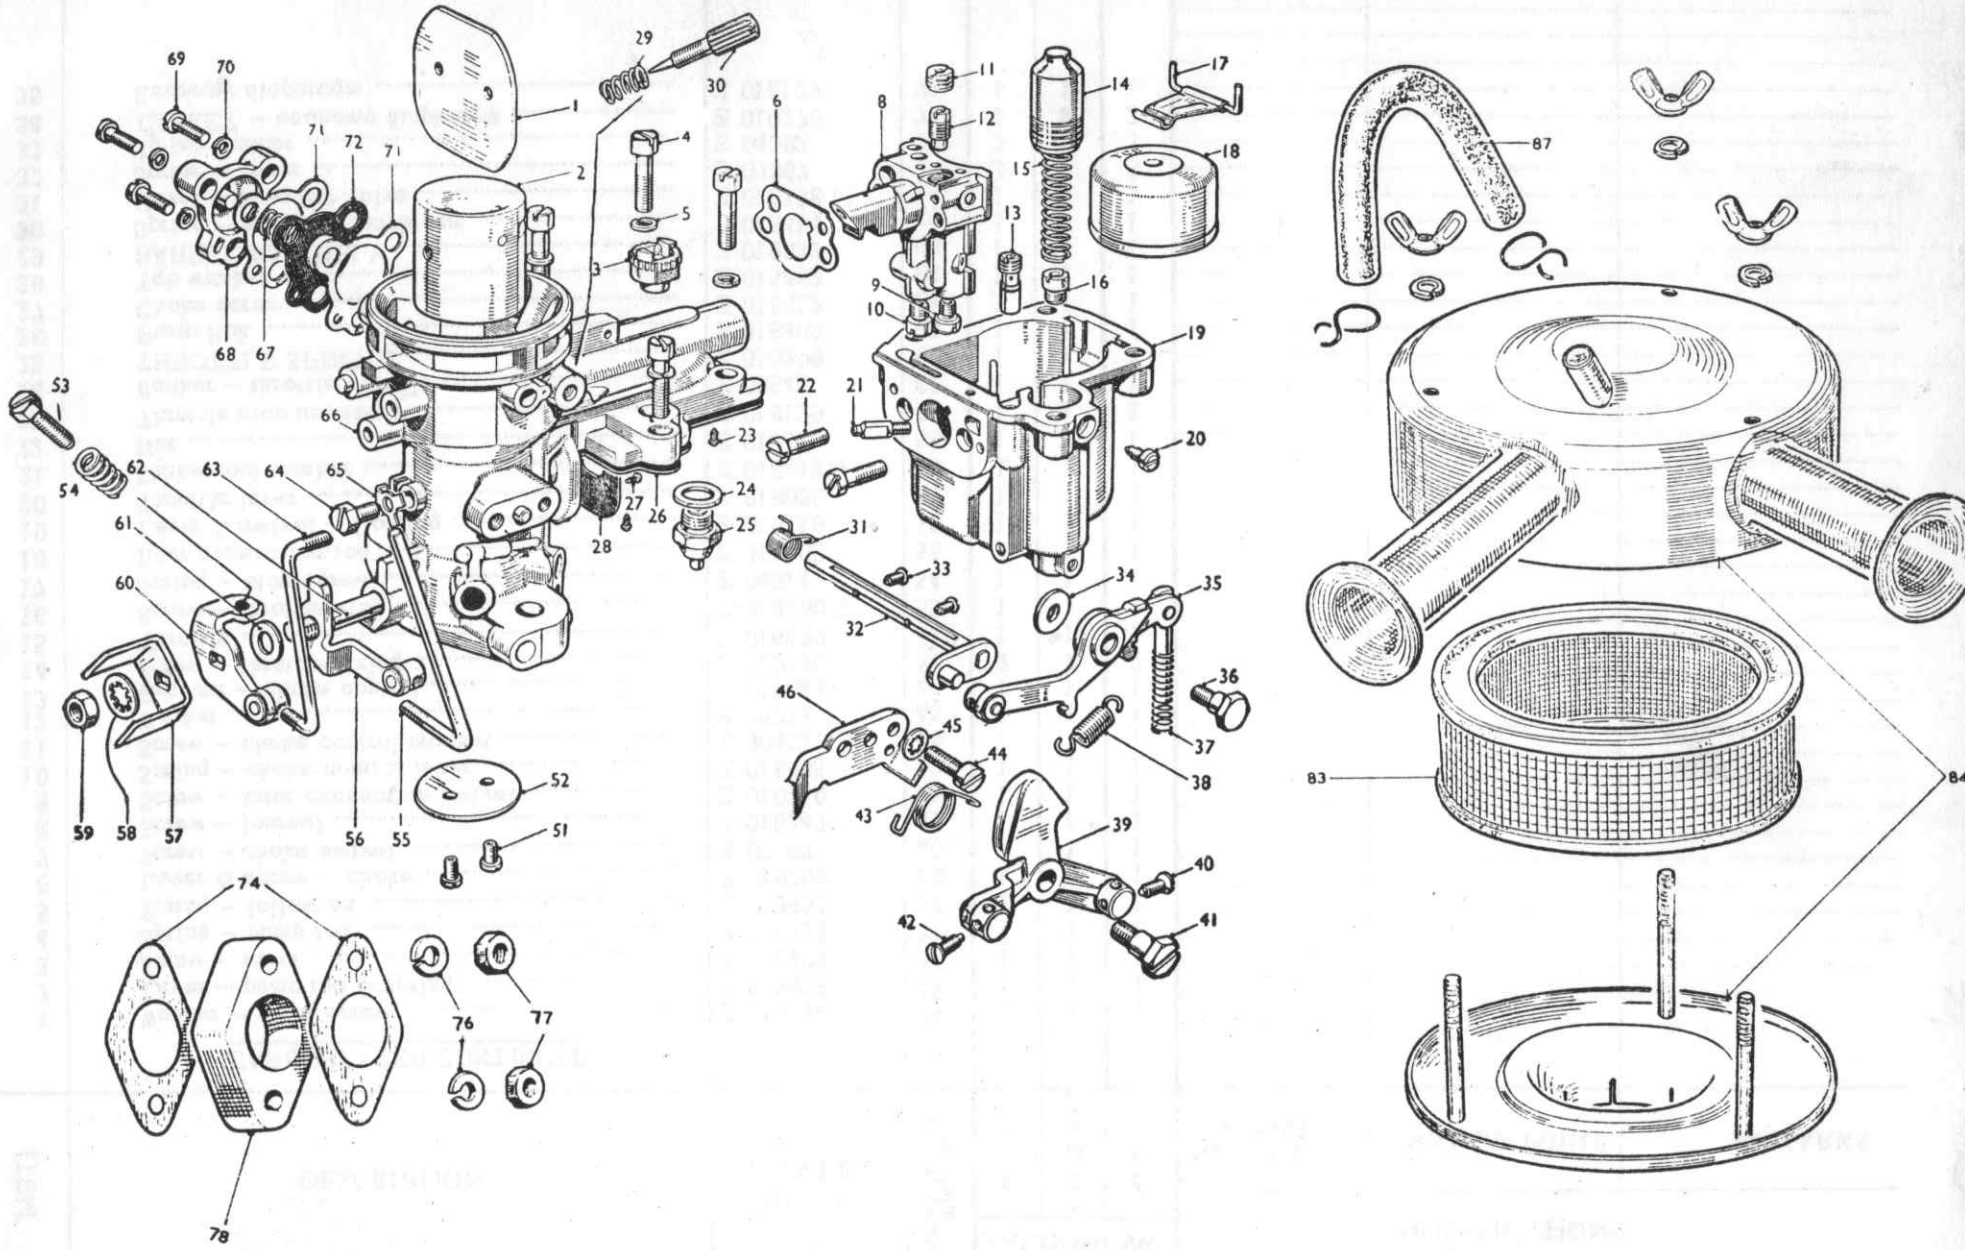

ILLUSTRATIONS TYPICAL ONLY

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	CARBURETTER CONTINUED:								
1	Sealing washer – pump rod	Z 017338	75	1	1	1			
2	REPAIR KIT – MAJOR	HYL2317		1	1	1			
3	REPAIR KIT – MINOR	HYL2318		1	1	1			
4	GASKET SET	HYL0131		1	1	1			
5	Gasket – carby to manifold	AYH0060	74	2	2	2			
6	Insulator – carby to manifold	AYH0059	78	1	1	1			
7	Washer – carburetter fixing	LWZ505	76	2	2	2			
8	Nut – carburetter fixing	FNZ105	77	2	2	2			
9	RUBBER PIPE – CARBY TO VACUUM PIPE	ACH9041	87	1	1	1			

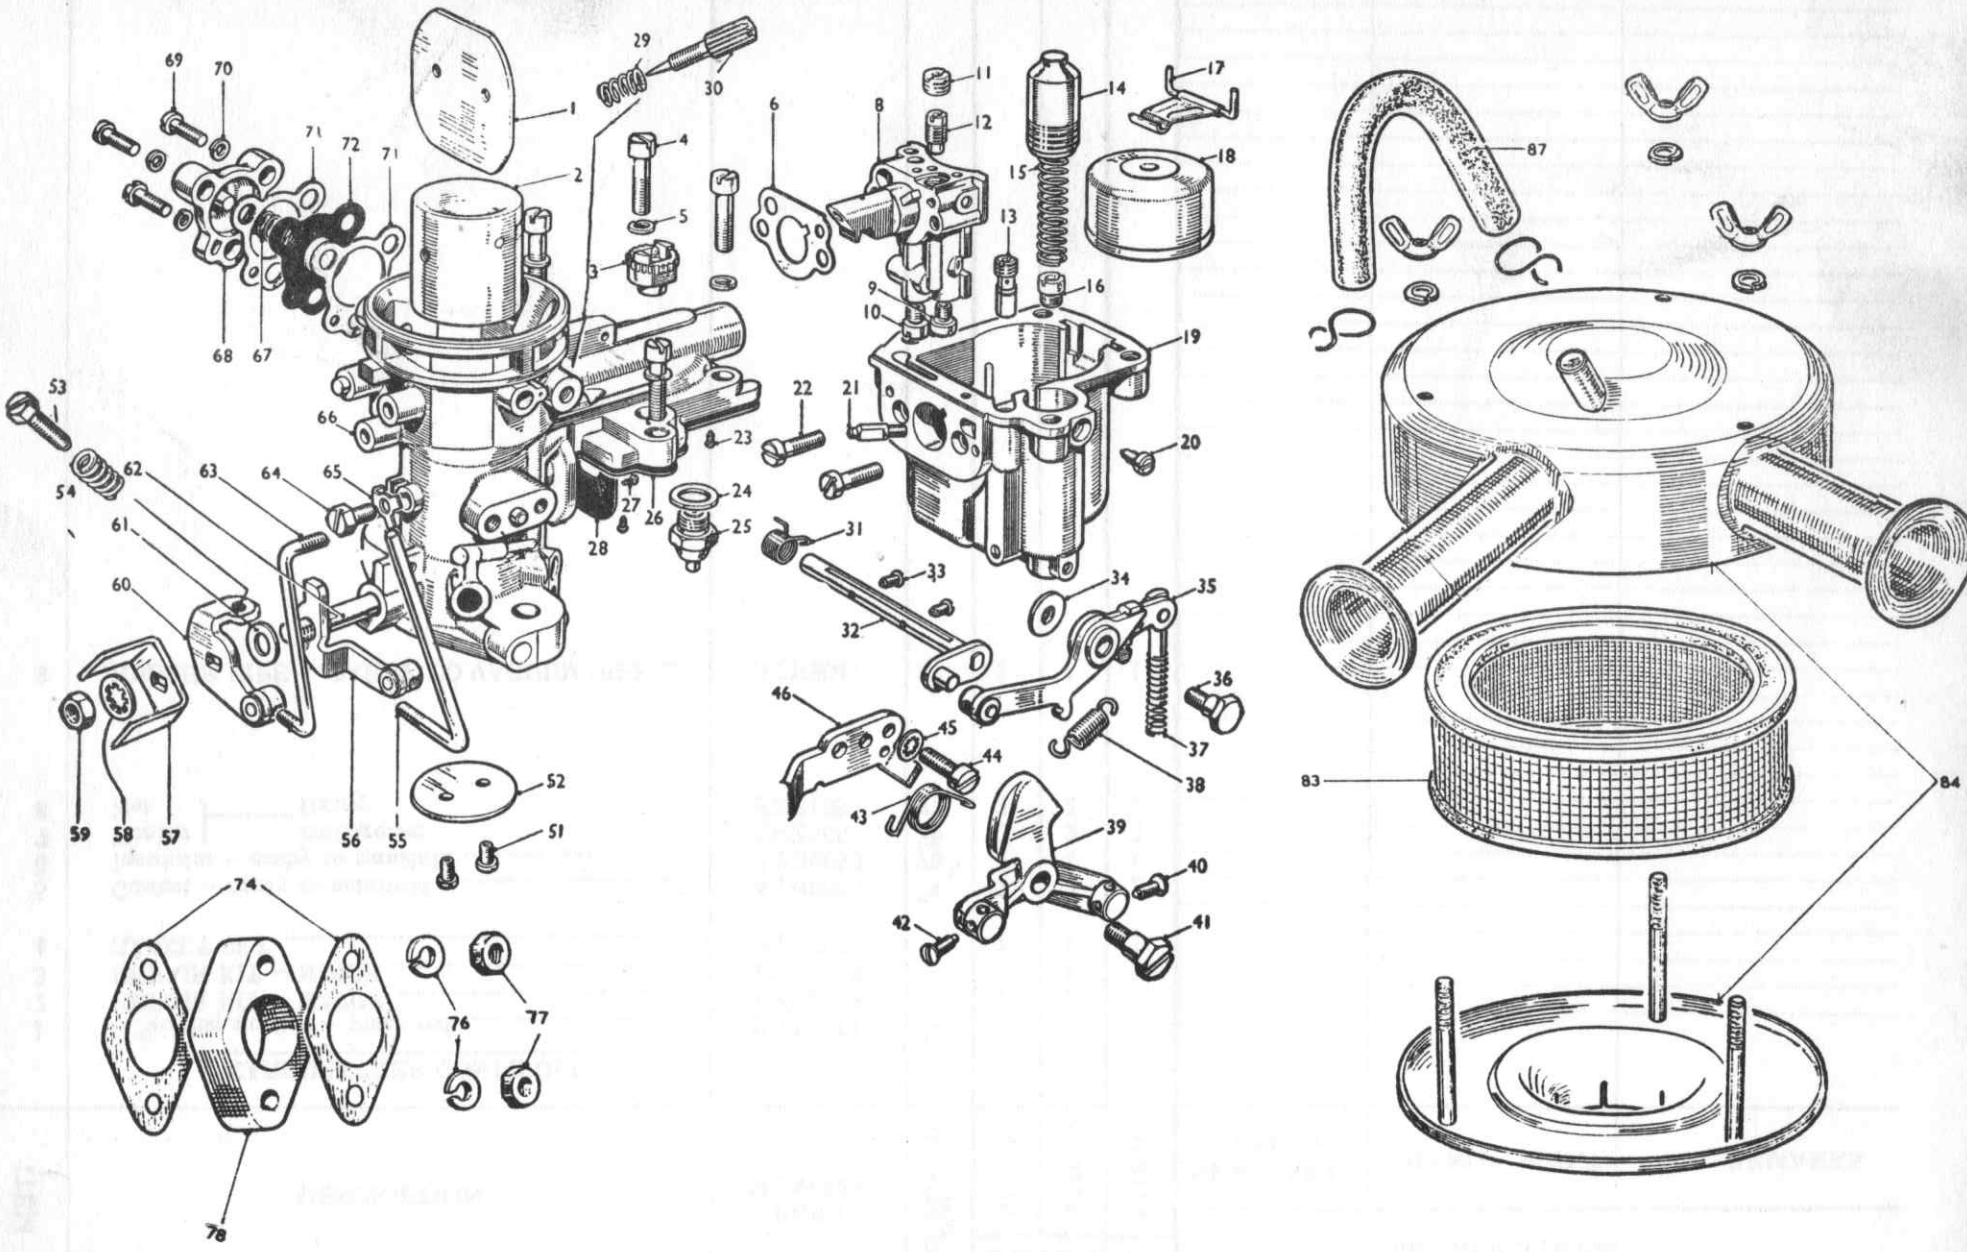

ILLUSTRATIONS TYPICAL ONLY

TO FACE PAGE D 6, D7, D8, and D9

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	AIR CLEANER								
1	AIR CLEANER ASSEMBLY	AYB0074		1	1	1			
2	ELEMENT	AYH0055	83	1	1	1			
3	Can	AYB0072	84	1	1	1			
4	Hose — air filter to	AYB2031	87	1	1	1			
5	Clip — rocker cover	ACA5290		2	2	2			