
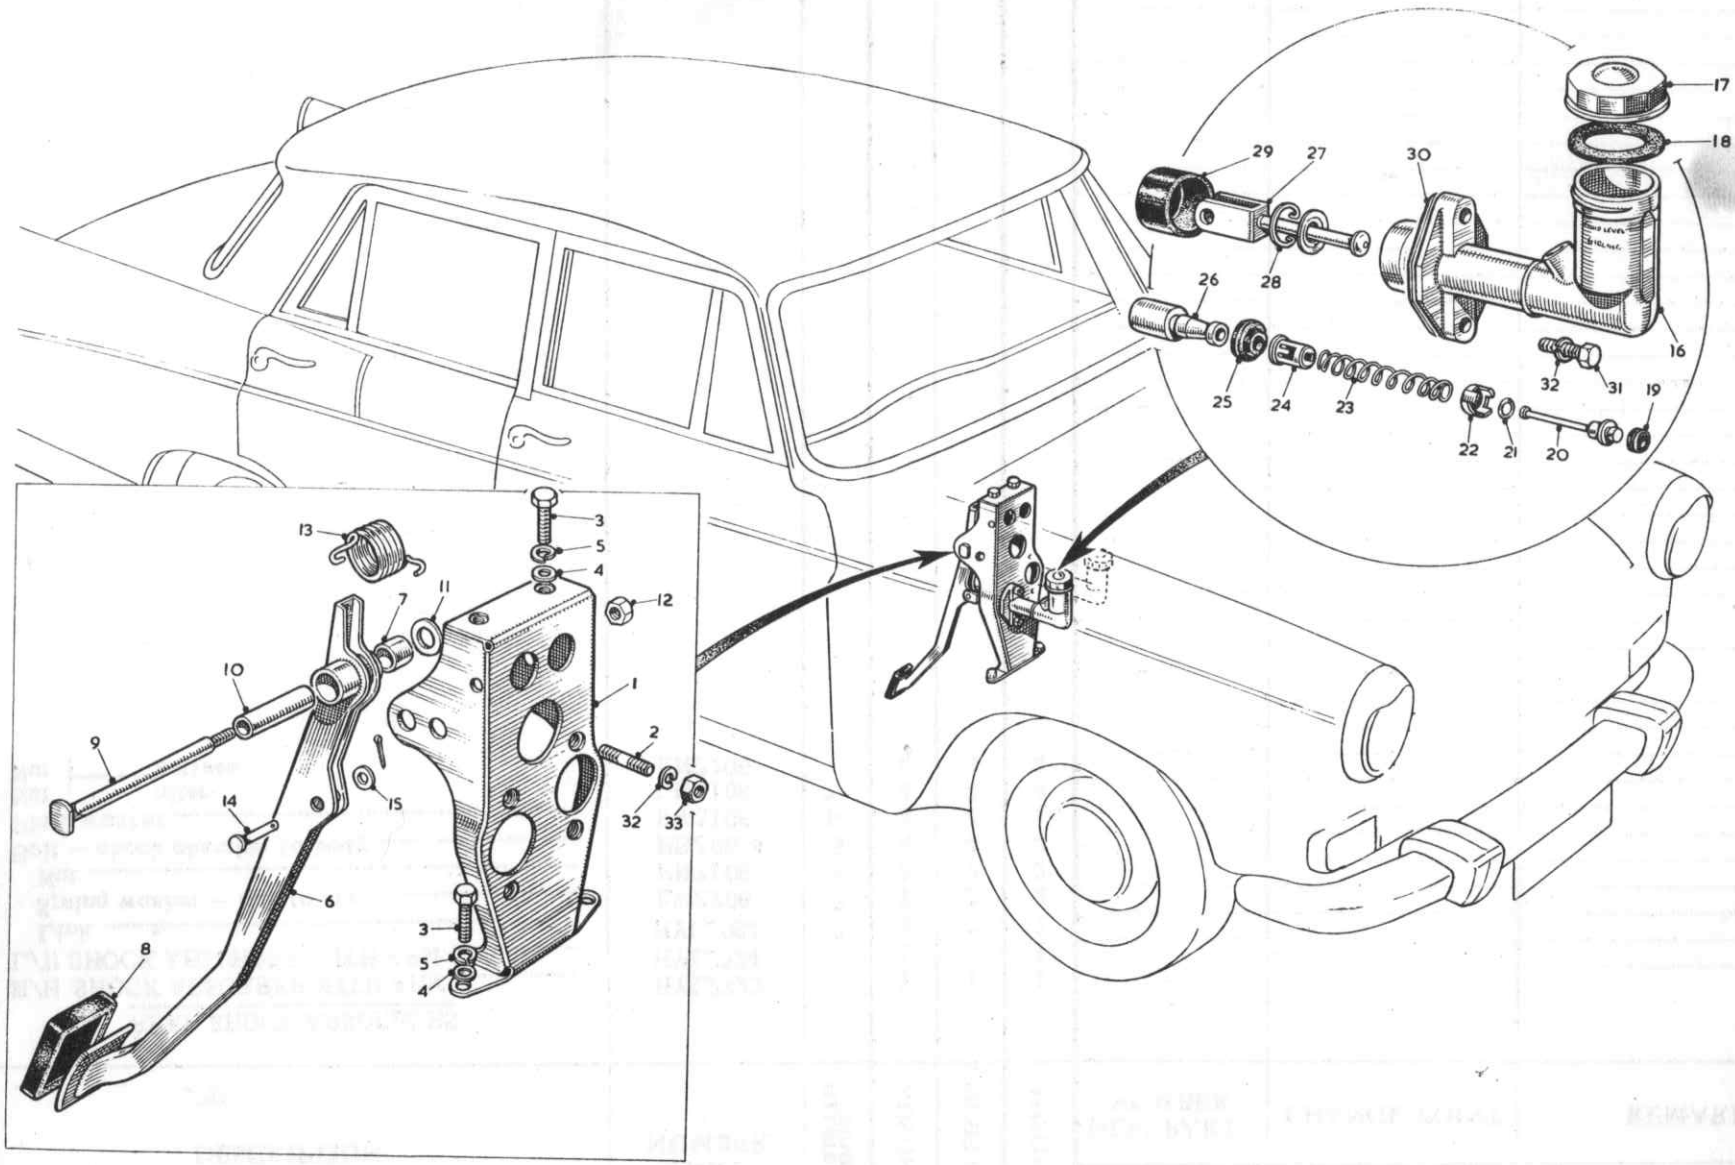


ILLUSTRATIONS TYPICAL ONLY


TO FACE PAGE M 1

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	FOOT BRAKE								
1	BRACKET ASSY. – BRAKE & CLUTCH PEDAL	1H5614	1	1	1	1			
2	Stud	FLS2513	2	2	2	2			
3	Screw – bracket to dash	HPZ0505	3	4	4	4			
4	Plain washer	PWZ105	4	4	4	4			
5	Spring washer	LWZ305	5	4	4	4			
6	PEDAL ASSEMBLY	11H25	6	1	1	1			
7	Bush	1G9310	7	2	2	2			
8	RUBBER PAD	1H5616	8	1	1	1			
9	SHAFT ASSEMBLY – Brake & clutch pedal	1G9312	9	1	1	1			
10	Sleeve	1G9314	10	2	2	2			
11	Distance washer – shaft	2K1206	11	1	1	1			
12	Nut	LNZ205	12	1	1	1			
13	Spring – pedal return	1G9615	13	1	1	1			
14	Pin – pedal to	1G9701	14	1	1	1			
15	Washer – m.c.	PWZ105	15	1	1	1			
16	MASTER CYLINDER – BRAKE	64067616		1	1	1			
17	Body	N.S.P.	16	1	1	1			
18	Filler cap	378434	17	1	1	1			
19	Cap gasket	362920	18	1	1	1			
20	Valve seal	362802	19	1	1	1			
21	Valve stem	378641	20	1	1	1			
22	Spring washer	378960	21	1	1	1			
23	Valve spacer	318001	22	1	1	1			
24	Spring	378847	23	1	1	1			
25	Spring retainer	64673391	24	1	1	1			
26	Plunger seal	362434	25	1	1	1			
27	Plunger	64673394	26	1	1	1			
28	Push rod	391011	27	1	1	1			
29	Circlip	378920	28	1	1	1			
30	Dust cover	64673398	29	1	1	1			
31	Seal – taper end	362435		1	1	1			
32	Packing – M.C.	11B5138	30	A/R	A/R	A/R			
33	Bolt – M.C. to bracket	HZS0510	31	1	1	1			
34	Spring washer	LWZ205	32	2	2	2			
35	Nut	FNZ105	33	1	1	1			
36	M.C. REPAIR KIT	SP2102		1	1	1			
37	M.C. SERVICE KIT	SPO2102		1	1	1			

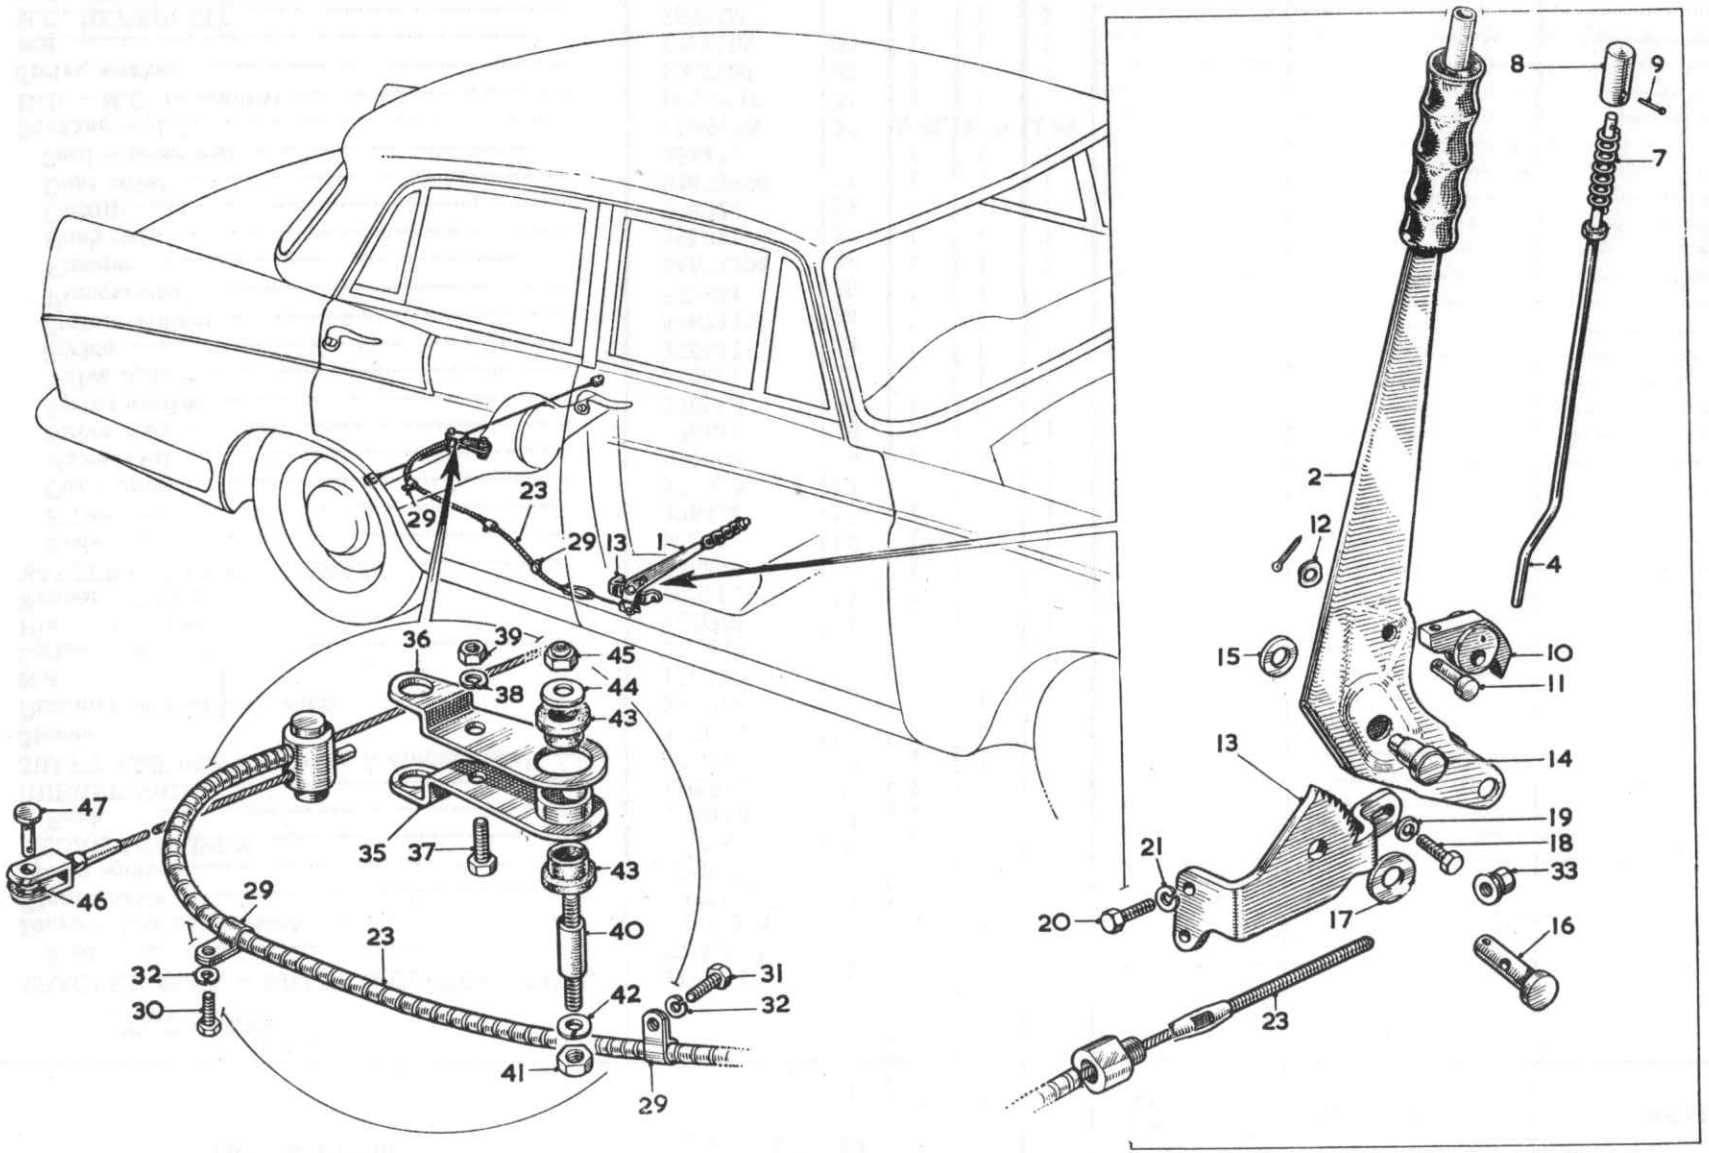

ILLUSTRATIONS TYPICAL ONLY


ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON AUSTIN	SALOON WOLSELEY	SW AUSTIN	MODIFICATIONS NEW PART NUMBER	MODIFICATIONS CHANGE POINT	MODIFICATIONS REMARKS
	HAND BRAKE								
1	HAND BRAKE LEVER ASSY. COMPLETE	AYB5013	1	1	1	1			
2	LEVER WITH GRIP	AYH5100	2	1	1	1			
3	Bush	N.S.P.		1	1	1			
4	Rod – pawl	ACC8954	4	1	1	1			
5	Spring – pawl return	AYH5103	7	1	1	1			
6	Knob – pawl rod	AYH5102	8	1	1	1			
7	Pin – pawl rod	ACH5651	9	1	1	1			
8	Pawl	ACC8955	10	1	1	1			
9	Pin – pawl	CLZ0411	11	1	1	1			
10	Washer	ACH5047	12	1	1	1			
11	Ratchet	GB50482/14	13	1	1	1			
12	Fulcrum pin	ACH5040	14	1	1	1			
13	Washer for pin	ACH5510	15	1	1	1			
14	Pin – cable to lever	GB50489	16	1	1	1			
15	Plain washer	PWZ108	17	1	1	1			
16	Screw – lever to seat bracket support	HZS0506	18	1	1	1			
17	Spring washer for screw	LWZ205	19	1	1	1			
18	Screw – lever to bracket	HZS0406	20	2	2	2			
19	Spring washer	LWZ204	21	2	2	2			
20	CABLE ASSEMBLY	AYB5012	23	1	1	1			
21	Washer – cable abutment to body	PWZ107		1	1	1			
22	Cable clip	PCR0609	29	2	2	2			
23	Screw – clip to rear axle	HZS0403	30	1	1	1			
24	Washer for screw	LWZ204	32	1	1	1			
25	Screw – clip to side member	HZS0404	31	1	1	1			
26	Spring washer	LWZ204	32	2	2	2			
27	Nut	FNZ104		1	1	1			
28	Nut – cable adjusting	ACH5104	33	1	1	1			
29	Washer – cable to lever	PWZ104		1	1	1			
30	Spring – cable to lever	ACH8508		1	1	1			

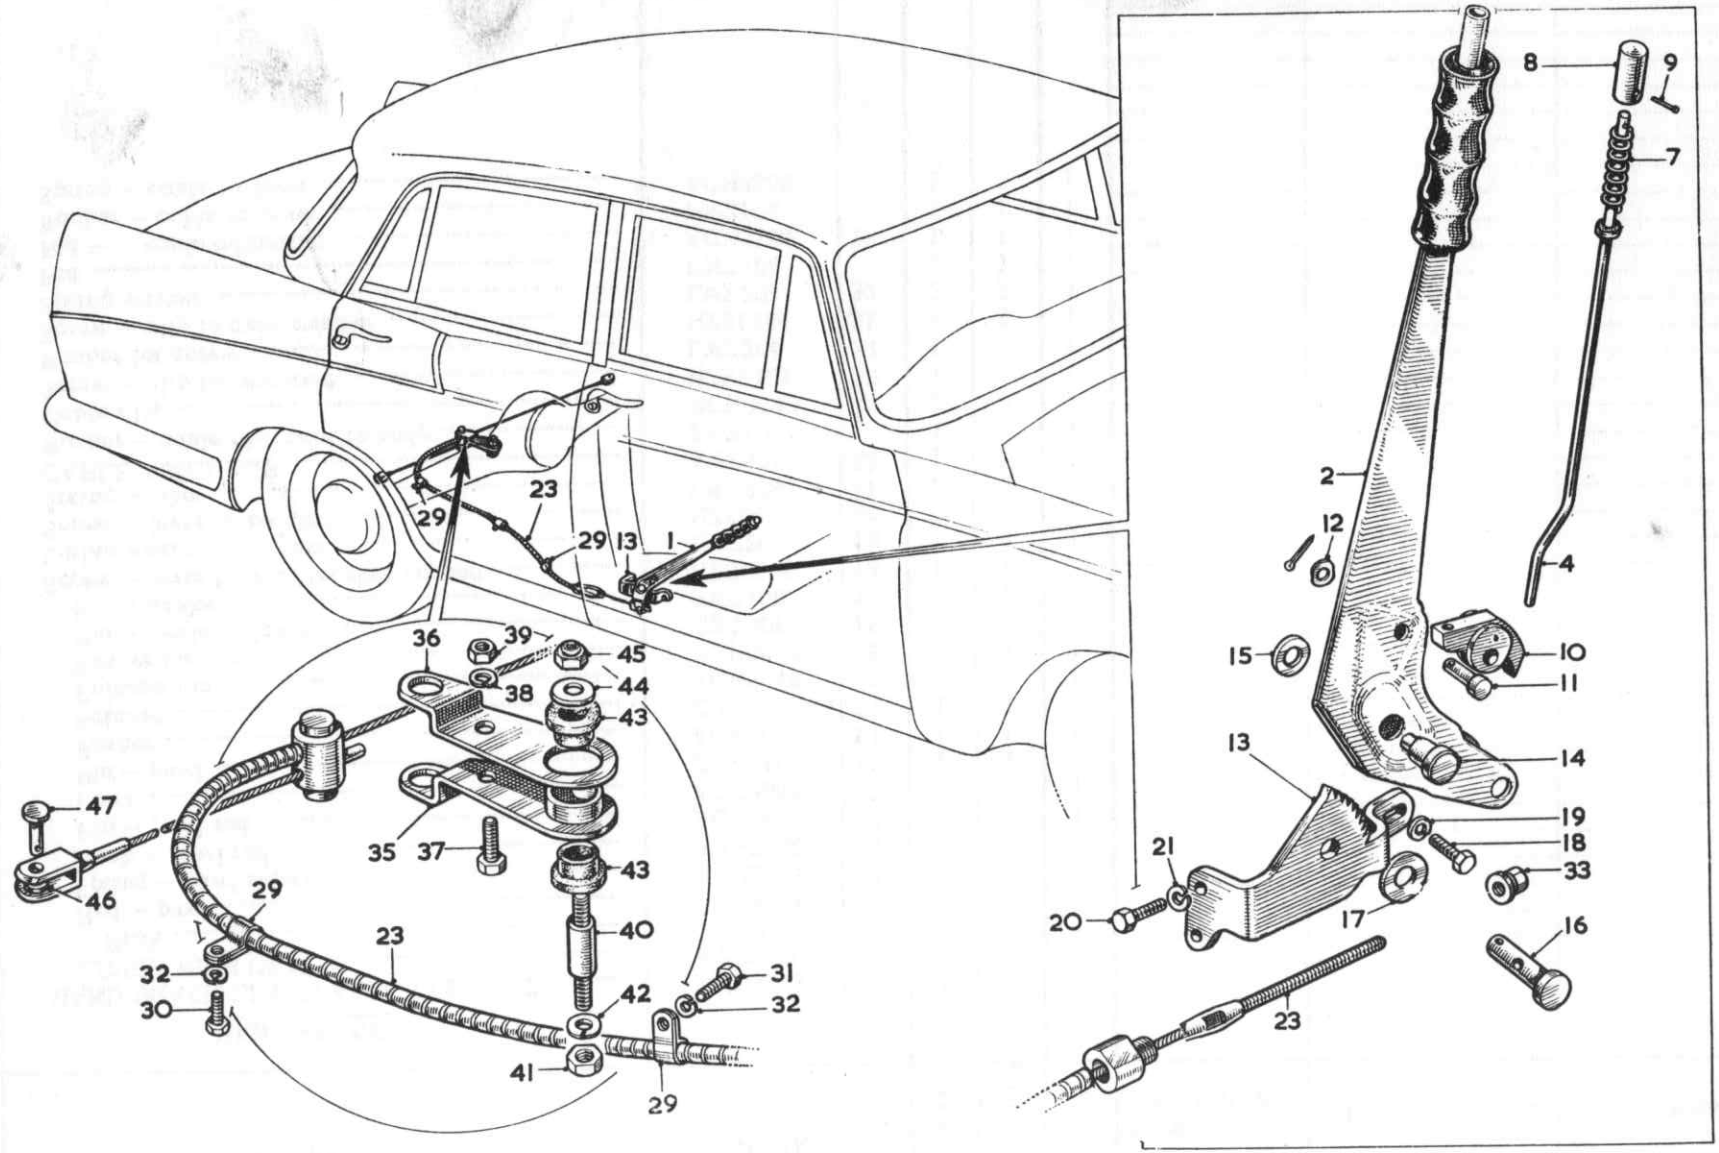

ILLUSTRATIONS TYPICAL ONLY.

TO FACE PAGE M 2 and M 3

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
	. . . . .			AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	Handbrake continued:								
1	LOWER COMPENSATING LEVER	AYB5003	35	1	1	1			
2	UPPER COMPENSATING LEVER	AYB5002	36	1	1	1			
3	Screw – lever clamping	HZS0405	37	1	1	1			
4	Spring washer	LWZ204	38	1	1	1			
5	Nut	FNZ104	39	1	1	1			
6	Fulcrum pin – pivot	AYB5005	40	1	1	1			
7	Nut – pivot – rear axle	FNZ206	41	1	1	1			
8	Spring washer	LWZ206	42	1	1	1			
9	Bush – Lever pivot	ACH5103	43	2	2	2			
10	Washer	PWZ205	44	1	1	1			
11	Pivot nut	LNZ205	45	1	1	1			
12	Washer	AWZ104	46	2	2	2			
13	Clevis pin – cable to levers	CLZ0412	47	2	2	2			
14	Washer	PWZ104		2	2	2			

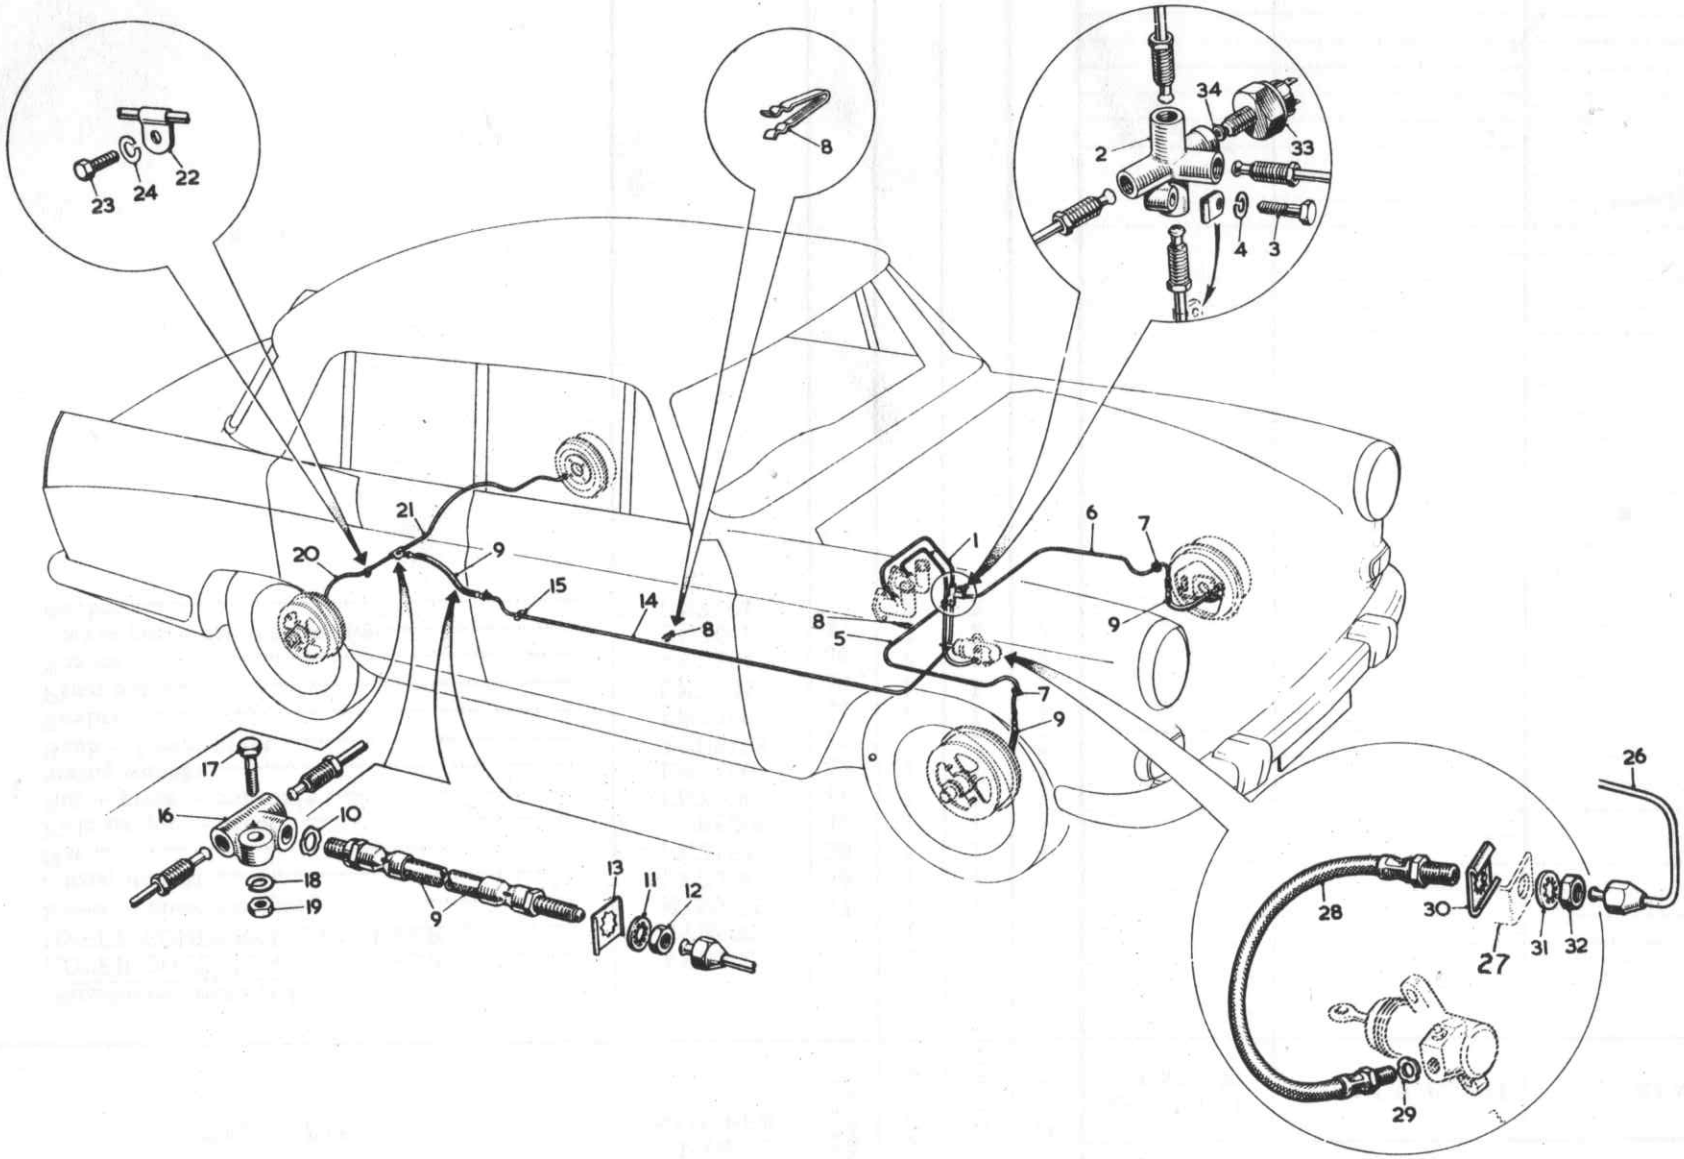

ILLUSTRATIONS TYPICAL ONLY

ITEM	DESCRIPTION	PART NUMBER	ILLUSTRATION NUMBER	SALOON		SW	MODIFICATIONS		
				AUSTIN	WOLSELEY	AUSTIN	NEW PART NUMBER	CHANGE POINT	REMARKS
	BRAKE AND CLUTCH PIPES								
1	Pipe – brake M.C. to 5 way connection	11H604	1	1	1	1			
2	5 way connection	1H5720	2	1	1	1			
3	Bolt – connector to dash member	HBZ0410	3	1	1	1			
4	Spring washer	LWZ304	4	1	1	1			
5	Pipe – connector to R/H front brake hose	11H214	5	1	1	1			
6	Pipe – connector to L/H front brake hose	11H215	6	1	1	1			
7	Grommet – pipe	1G2630	7	2	2	2			
8	Clip – pipe to valance and dash	6K35	8	2	2	2			
9	FLEXIBLE HOSE – FRONT AND REAR	64047277	9	3	3	3			
10	Hose gasket	KL44516	10	3	3	3			
11	Shakeproof washer	LWZ406	11	3	3	3			
12	Nut – front hose to bracket	FNZ206		2	2	2			
13	Nut – rear hose to bracket	FNZ106	12	1	1	1			
14	Locking plate – rear hose	1G9622	13	1	1	1			
15	Pipe – connector to rear brake hose	1H5717	14	1	1	1			
16	Clip – pipe to side member	6K35	8	6	6	6			
17	Clip – pipe to floor	1G9529	15	1	1	1			
18	3 way connection	ATB7289	16	1	1	1			
19	Screw – connector to axle case	HZS0409	17	1	1	1			
20	Spring washer	LWZ204	18	1	1	1			
21	Nut	FNZ104	19	1	1	1			
22	Pipe – connection to R/H brake	AYB7022	20	1	1	1			
23	Pipe – connection to L/H brake	AYB7024	21	1	1	1			
24	Clip	2K5217	22	2	2	2			
25	Screw	HZS0403	23	2	2	2			
26	Spring washer	LWZ204	24	2	2	2			
27	PIPE – M.C. TO CLUTCH FLEXIBLE PIPE	3597411W	26	1	1	1			
28	FLEXIBLE PIPE – CLUTCH OPERATING CYLINDER	3700614	28	1	1	1			
29	Gasket – flexible pipe to cylinder	KL44516	29	1	1	1			
30	Locking plate – pipe to bracket	1G9622	30	1	1	1			
31	Shakeproof washer	LWZ406	31	1	1	1			
32	Nut – pipe to bracket	FNZ206	32	1	1	1			
33	Clip – pipe to dash member	4G1674	27	1	1	1			
34	SWITCH – STOP LAMP	31882	33	1	1	1			
35	Packing washer	KL44504	34	1	1	1			